



INSTALLATION INSTRUCTIONS

MAKE: DODGE

MODEL: CUMMINS

YEAR: 2004.5-2009


ENGINE: V8-5.9/6.7L (td)

WHEELBASE: All except Cab & Chassis

4" Turbo Back
49-02003 (w/ Muffler)
49-02003NM (w/o Muffler)

THIS PART IS RACE USE ONLY

This is a "Race Only" product used solely for competition. It's use is limited to closed-course and open-course racing that is formally sanctioned by a recognized racing organization. Any other use, including recreational off-road use, could be in violation of local, state and/or federal laws. This system also requires an aftermarket electronic module to work properly with vehicle.

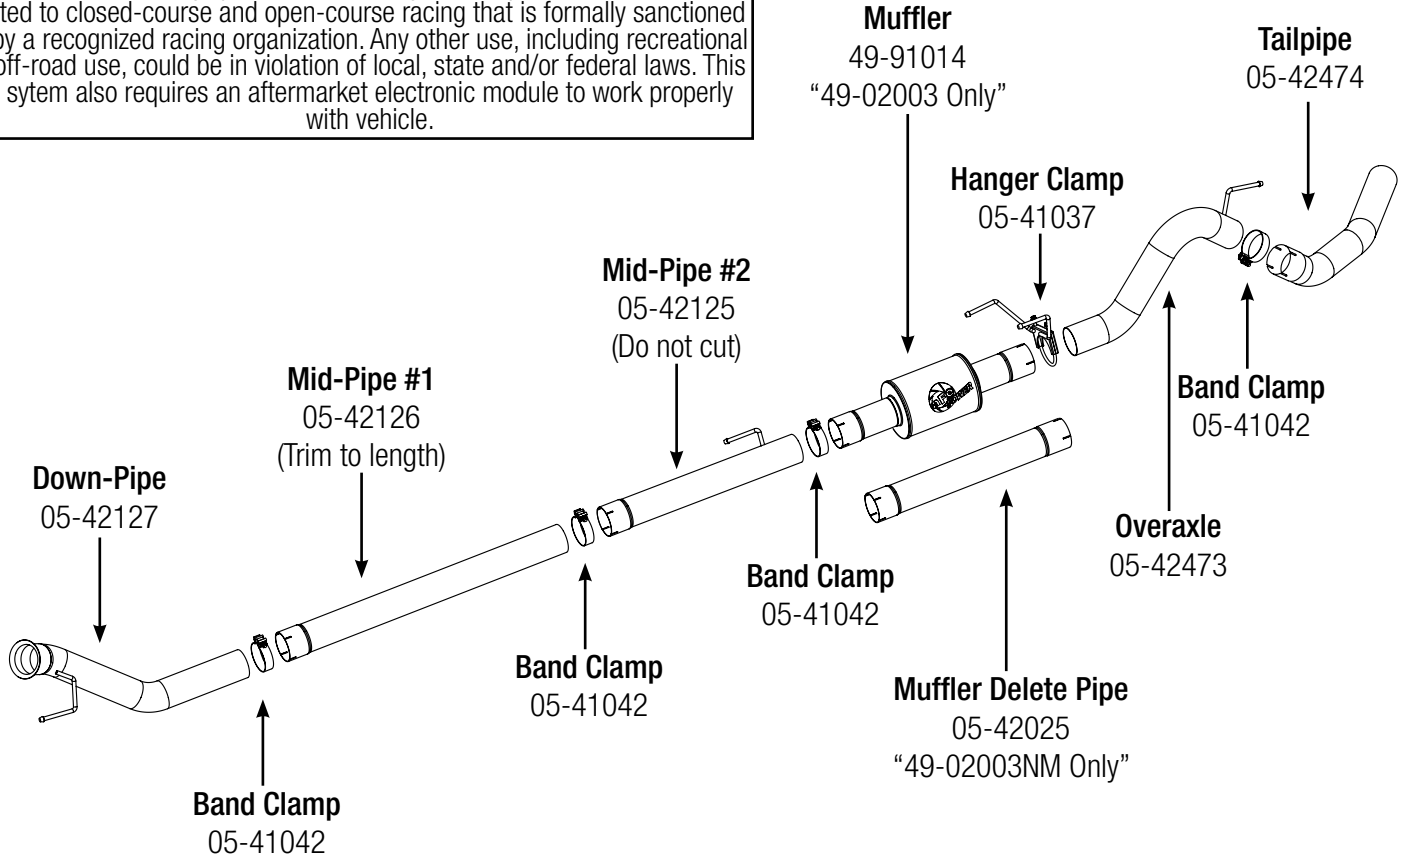

Step 1: (Read Instructions prior to installation) Remove the stock exhaust from the rear of the truck working your way forward. It may be necessary to cut the pipes if the slip joints are stuck. Take caution not to damage the factory isolation mounts as they will be reused. Disconnect sensors at the connections. Take caution as not to damage any sensors. **It is recommended to not fully tighten the clamps until the entire system has been installed.**

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install down-pipe first, then install the mid-pipe with band clamp. Be sure to select the correct mid-pipe depending on the wheelbase length. **Do not fully tighten.**

Step 4: Install the muffler ("49-02003 only") or muffler delete pipe ("49-02003NM only") using the two clamps indicated. **Do not fully tighten.**

Step 5: Utilizing the factory isolation mounts now install overaxle/tail-pipe section. Tighten all clamps from front to rear. Make sure the isolation mounts are angled forward.

Step 6: Adjust for alignment and tighten all connections. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tail-pipe be at least 1/2" -1" away from any body panels to avoid heat related body damage. **Tighten and secure.**
- Controller/Programmers are required to operate this system.

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**