



2010-C, DODGE HD LB DUALY
Mud Flap Set
Mounting Diagram & Instructions
BRACKET #756197

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED

Electric or re-chargeable
1/2" or 3/8" drill.

1/4
drill bit

3/8" and 5/16" wrench
or socket set

3/8" Socket Driver

SCREWS / FASTENERS / WASHERS / FLAPS - PARTS BAG #755532

a) (1) SS Mount, DS
Part #755530

b) (1) SS Mount, PS
Part #755531

c) (16) Nut, Hex, SS
#10
Part #025003

d) (16) Lock Washer
#10
Part #024001

e) (32) Washer, Flat
0.203" x 1" 18ga
Part #018031

f) (16) Screw Machine
#10 x 1"
Part #012022

g) (1) Brkt, Z, DS
Part # 750433

h) (1) Brkt, Z, PS
Part #750434

Prior to installation of your Mud Flap, see the above diagrams and parts list for all necessary parts. Start on the driver side.

INSTALLATION


For ease of installation, it is suggested that the wheel be removed.

1. Before installation, peel protective plastic away from stainless steel.
2. Remove factory harness mounts A & B with harness and reinstall to the "Z" bracket holes C & D.
3. Bolt the upper holes of the "Z" bracket to the existing factory push screw holes A & B with two machine screws, four flat washers, two lock washers and two hex nuts.
4. Remove the factory screws #5 & #6 on the wheel flare as shown on the diagram and reinstall the two factory screws on holes #1 and #2 through the factory holes #5 and #6.
5. Drill a 1/4" hole (2 places) from holes #3 and #4 through the factory tub liner then fasten holes #3 and #4 through the factory tub liner into the "Z" bracket bottom holes with two machine screws, four flat washers, two lock washers & two hex nuts.
6. Repeat procedure for the passenger side.

✓ Check all fasteners for tightness.

SEE BACK PAGE FOR INSTRUCTIONS ON CUTTING RUBBER IF REQUIRED



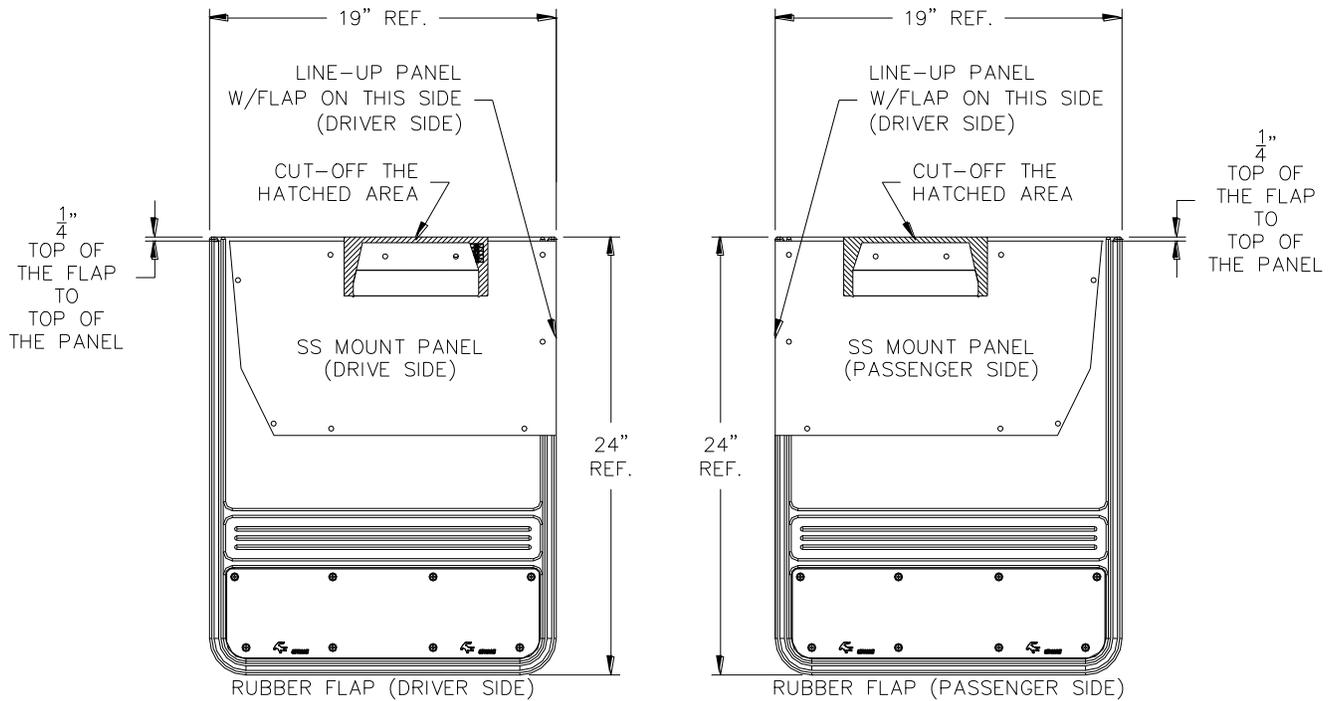

FOR OPTIONAL FLAP KIT (#755004)

Notes:

1. Flap must be cut prior to assembly. (see diagram above)
2. Square the flap with the tire.
3. Fasten the flap to the stainless steel mount with eight tek screws and eight flat washers.