

# DOMINATOR III SideSteps **WHEEL - TO - WHEEL**

## INSTALLATION INSTRUCTIONS

PART NO. D36262 FORD F-250, 350 CREW CAB P/U 2/4WD SHORT BED REV.A 2/08


### PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>
12	5/16" X 1" HEX BOLTS
12	5/16" FLAT WASHERS
12	5/16" LOCK WASHERS
12	5/16" U-NUTS
24	3/8" LOCK WASHERS
24	3/8" x 1 1/4" HEX BOLTS


<u>QTY</u>	<u>PARTS DESCRIPTION</u>
48	3/8" FLAT WASHERS
24	3/8" HEX NUTS
6	F99 MOUNTING BRACKETS
1	362FP FRONT PASSENGER SIDESTEP SECTION
1	362RP REAR PASSENGER SIDESTEP SECTION
1	362FD FRONT DRIVER SIDESTEP SECTION
1	362RD REAR DRIVER SIDESTEP SECTION

**Step 1.** Read the installation instructions completely before you begin.

If the vehicle is equipped with factory side steps, remove the fasteners and steps.

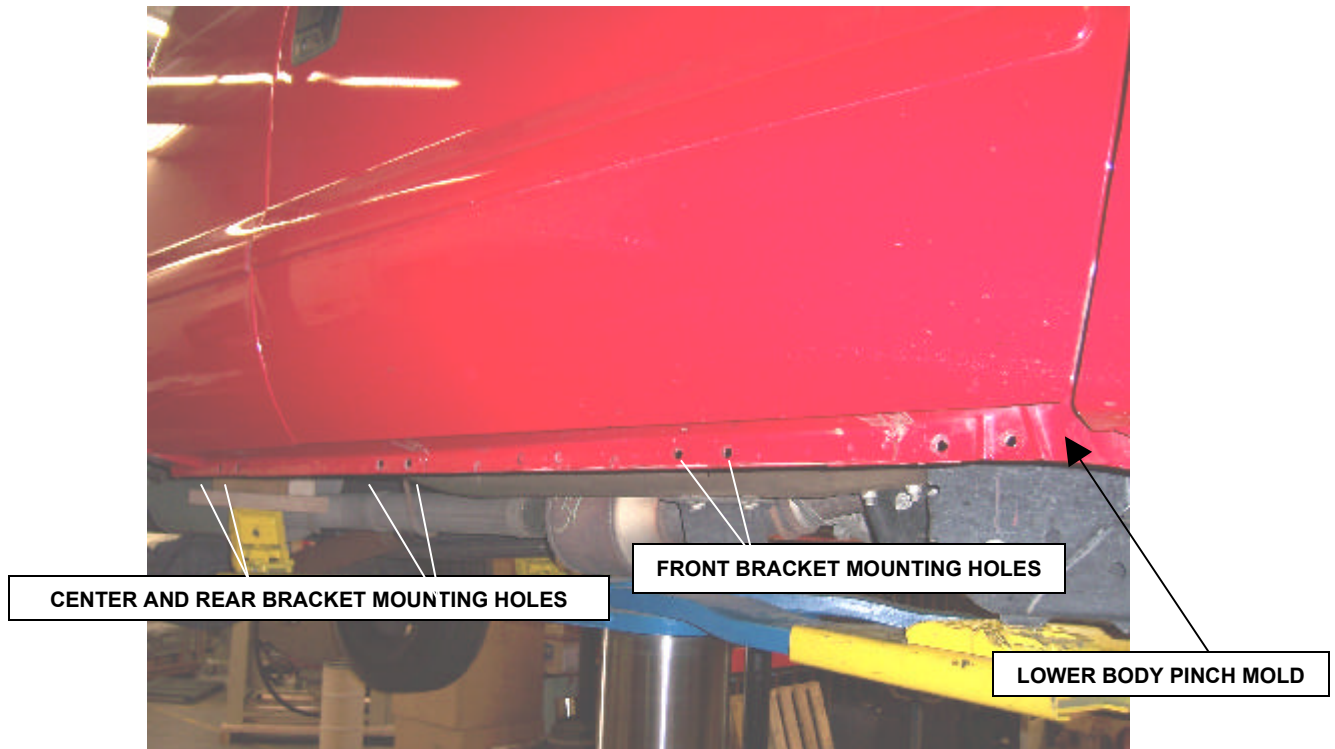


**Step 2.** This installation uses three mounting brackets per side. Beginning with the passenger side, locate the holes in the rocker panel and lower body pinch mold.

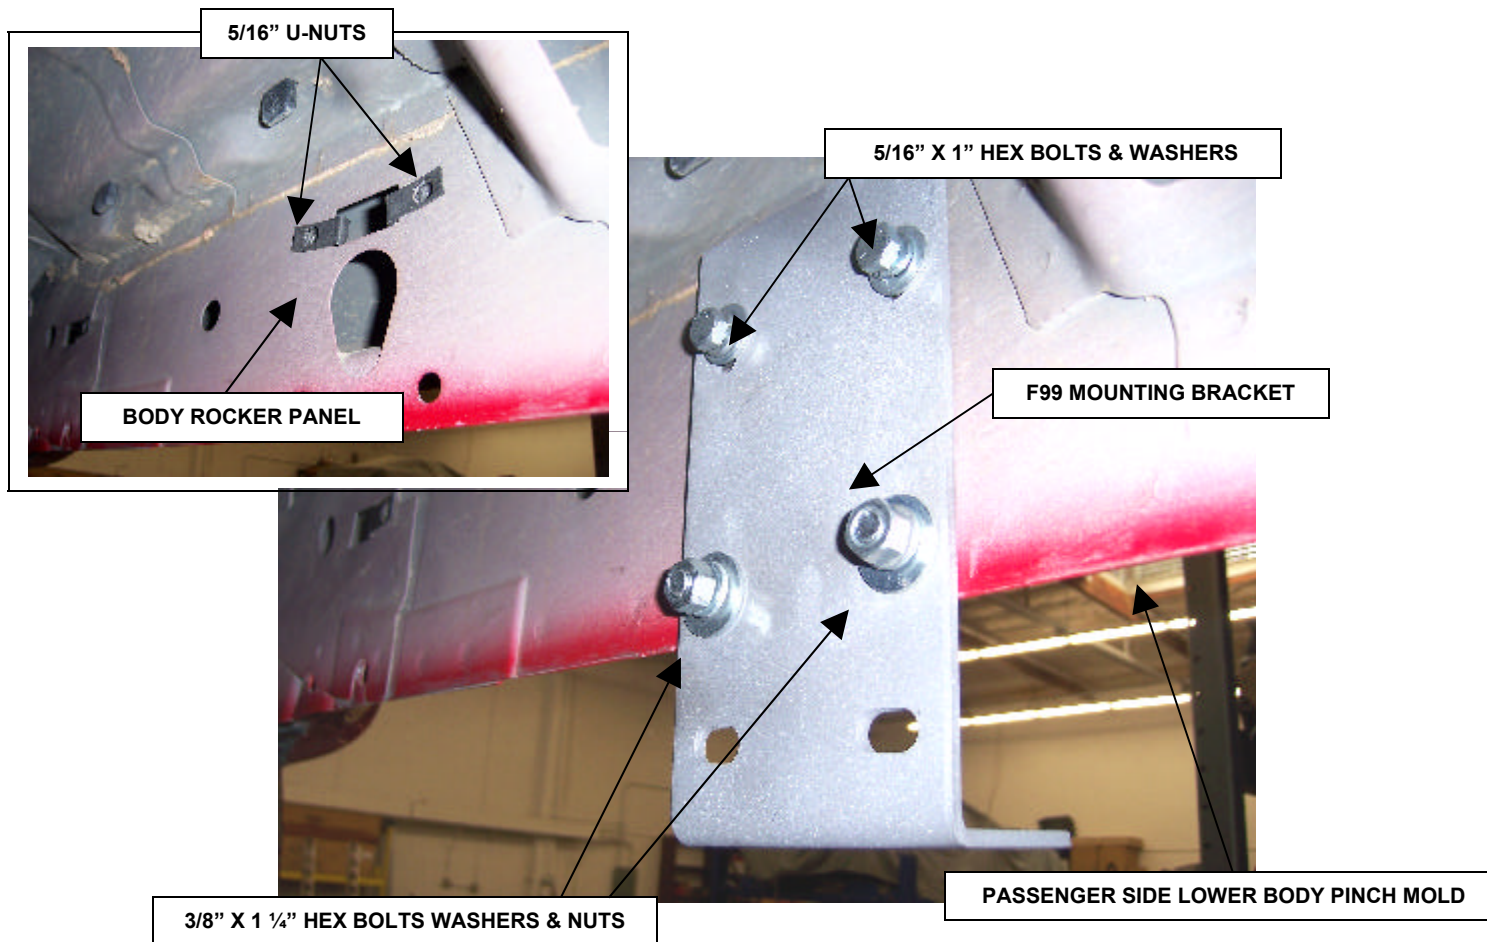

**Step 3.** Install the 5/16" u-nuts in the rocker panel. Loosely attach the mounting brackets to the rocker panel and pinch mold using the 5/16" hex bolts, 3/8" hex bolts, washers, and nuts as shown.





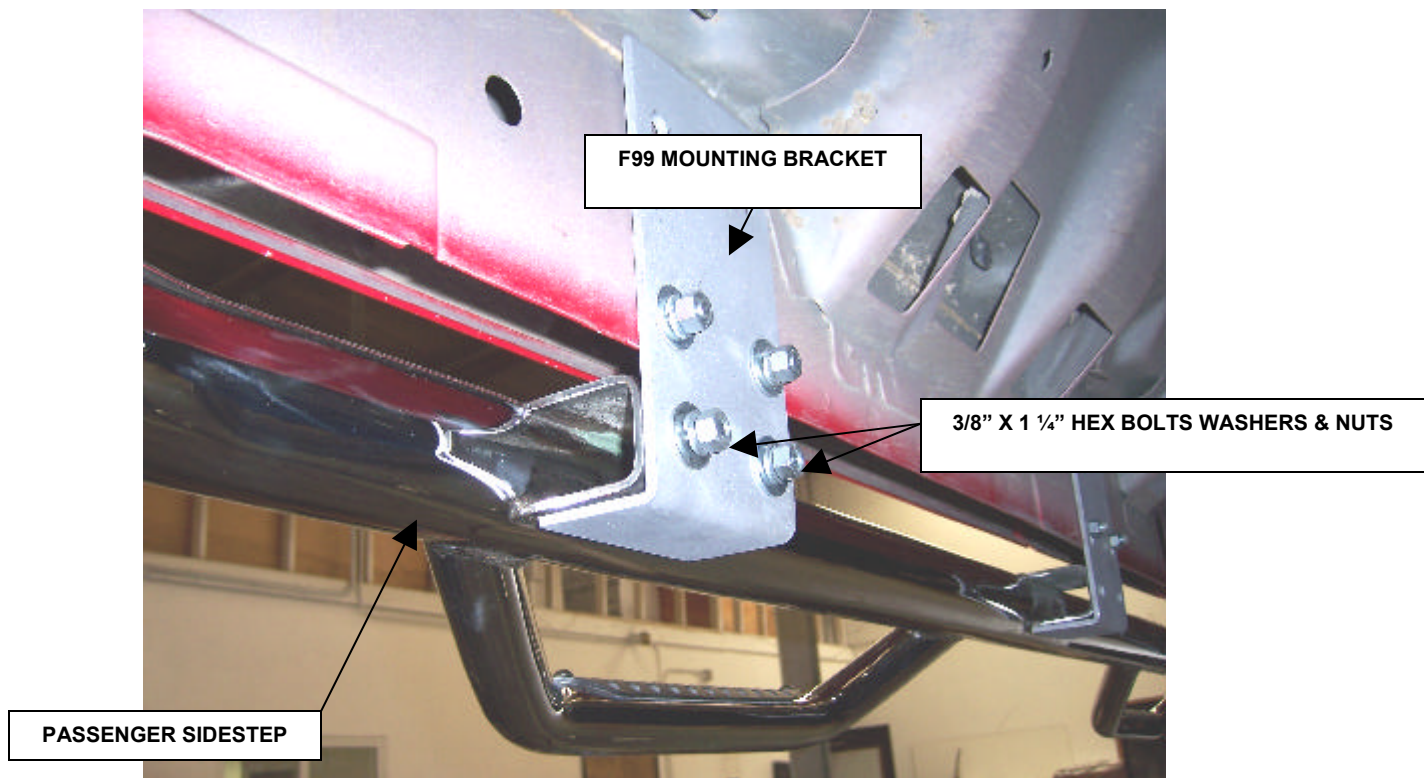

**Step 4.** Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, washers and nuts as shown.



**Step 5.** Align sidestep with the body, and then tighten all mounting bracket and sidestep nuts and bolts.

**Step 6.** Repeat the above steps to install the driver side mounting brackets and sidestep.

**VISIT OUR WEBSITE FOR OUR COMPLETE PRODUCT LINE!**

**[WWW.GORHINO.COM](http://WWW.GORHINO.COM) . PH: (888) 427- 4466 . BREA, CALIFORNIA**