



**Installation Instructions**  
**Part Number 400-601**  
**Poweraid Spacer For 03-04**  
**Ford 6.0L Powerstroke Diesel**

Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.


*Thank you for selecting AIRAID.*



<b><u>Parts List</u></b>		
#1	Poweraid Spacer	x1

1. **Disconnect the negative battery cable!**
2. Loosen clamp at intake manifold leaving clamp on plastic tube.
3. Slide the plastic tube back and insert power plate into tube.
4. Reinstall the plastic tube making sure the power plate is engaged in manifold while locating and tightening the hose clamp.
5. When installing the power plate in the intake manifold, face the power plate using the illustration below.
6. Before tightening the intake manifold clamp, be sure that the power plate has engaged both the intake manifold and plastic intake tube. **\*\*The outside diameters of the power plate will fit the inside diameters of the intake manifold and the plastic intake tube.**
7. Reconnect negative battery cable. Enjoy!

Included with your Poweraid Spacer is a sticker with a **California Air Resources Board (C.A.R.B.) Executive Order (EO) number**. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

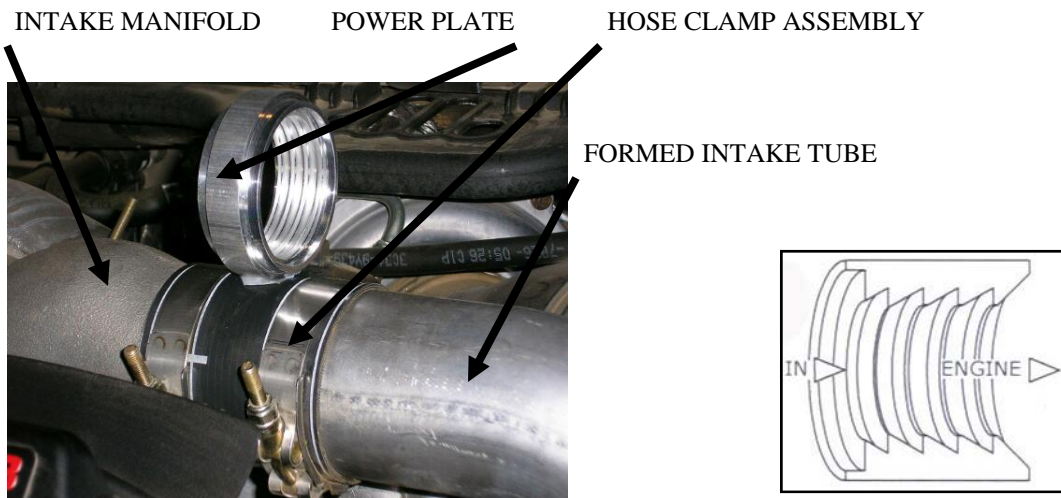

*The sound of power...The "whistle" means its working!*

Contact your nearest AIRAID dealer for an AIRAID Intake System for your car, truck or SUV.

Instructions Revision  
07/12/06

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com