



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CSUB07-(ALL COLORS)

Tools Required


7mm & 10mm Socket + Ratchet
Panel Popper

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.

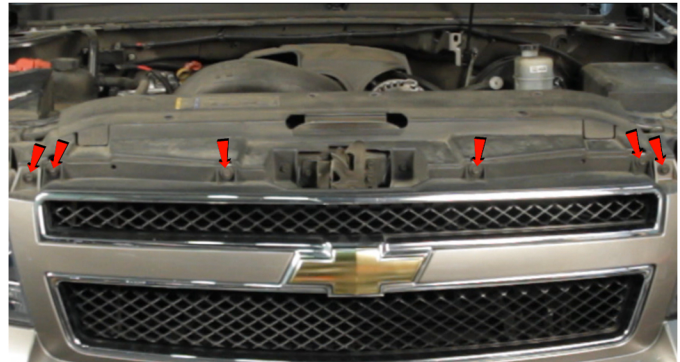


2) Remove [6x] 10mm Bolts securing the bumper fascia along the header panel.



3) Remove the [3x] plastic retainers securing the fender liner using a panel popper tool.




4) Remove the [2x] 7mm bolts securing the fender liner.

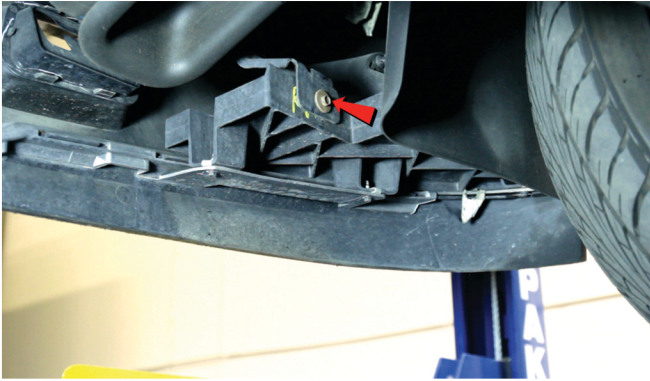

5) Remove [1x] 10mm bolt securing the fascia from below on each side.



6) Tape off the fender edge to protect the paint while removing and reinstalling the fascia, then unseat the front bumper fascia.

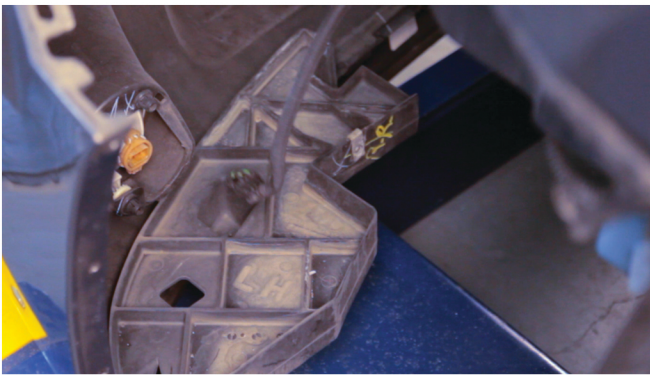

7) Be sure to disconnect fog light harnesses, if your Suburban is equipped with fog lights. Remove the fascia and set it aside.




8) Remove [3x] 10mm bolts securing the headlight.




9) Unseat the headlight.




10) Disconnect the headlight wiring harness and remove the headlight.

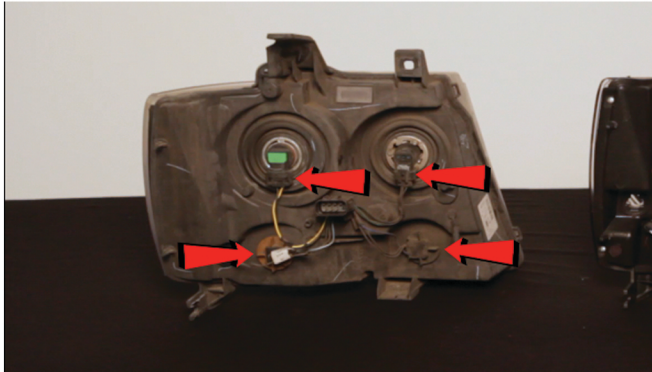


11) Disconnect the high beam and low beam harnesses, then remove the turn signal, sidemarker and DRL sockets. Never touch exposed bulbs with bare hands.

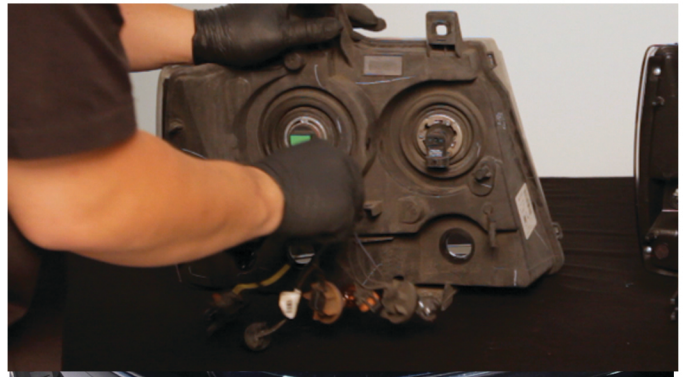

12) Remove the harness from the OEM headlight.

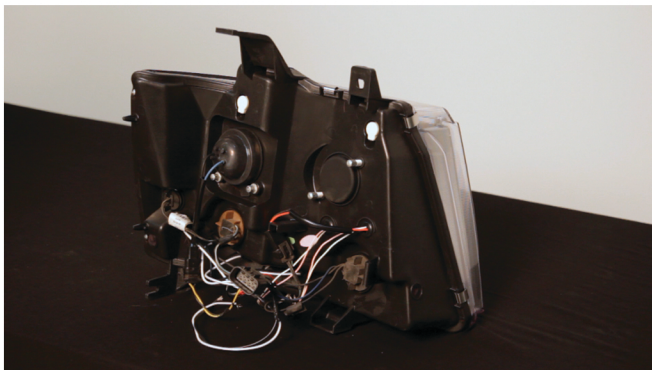

13) Transfer the harness to the Spyder headlight. Connect the high beam harness and low beam harness and reinstall the DRL, turn signal and sidemarker sockets. Your Spyder headlight is now ready to install.

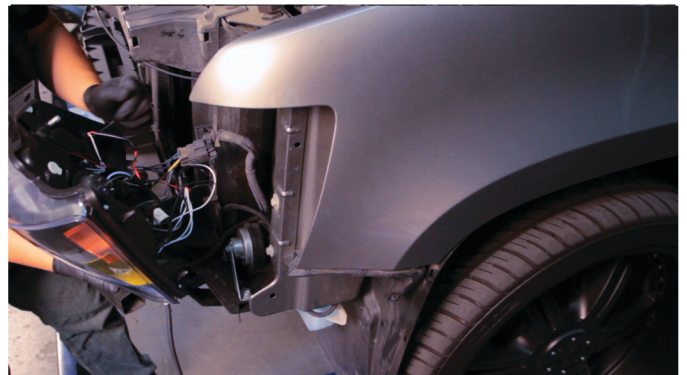

14) Connect the Spyder headlight harness to the main wiring harness.



15) Seat the Spyder headlight.



16) Reinstall [3x] 10mm bolts to mount the headlight.



17) Bring the fascia back to the Suburban and reconnect the fog light harness, if your Suburban is equipped with fog lights.



18) Seat the bumper fascia.



19) Reinstall [6x] 10mm bolts securing the front bumper fascia along the header panel.



20) Replace the fender liner and reinstall [3x] plastic retainers and [2x] 7mm bolts to secure the liner.



21) Reinstall the 10mm bolt to secure the fascia from below on each side.



22) Close the hood and enjoy your new Spyder headlights!



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=6dFEzJDb4wQ>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.