



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-THLAN11-3DDRL-(ALL COLORS)

Tools Required

10mm Socket & Ratchet

Panel Popper

Phillips & Flathead Screwdrivers

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.



2) Remove [11x] push down plastic retainers that secure the filler panel.



3) Remove filler panel.



4) Remove [6x] plastic retainers securing the grille to the fascia.



5) Unseat and remove the grille.



6) Remove [3x] plastic retainers hidden behind the grille that secure the fascia.



7) Unlock & remove [2x] flathead retainers securing the fender liner to the fascia.



8) Remove [1x] 10mm bolt securing the fascia to the fender from above.



9) Remove [4x] 10mm bolts securing the fascia to the undertray.



10) Remove [2x] 10mm bolts that secure the lower corner of the fascia to the undertray on each side.




11) Unseat the front bumper fascia.



12) Remove [3x] 10mm bolts securing the headlight.




13) Unseat the headlight.

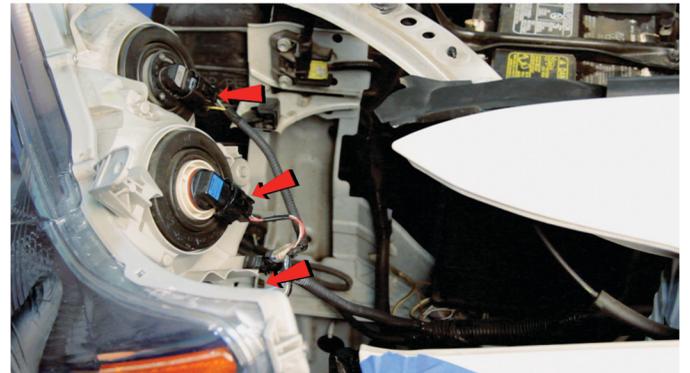

14) Disconnect the high beam, low beam and turn signal harnesses.



15) Remove the harness retainer clip from the headlight, then you can remove the headlight and set it aside.

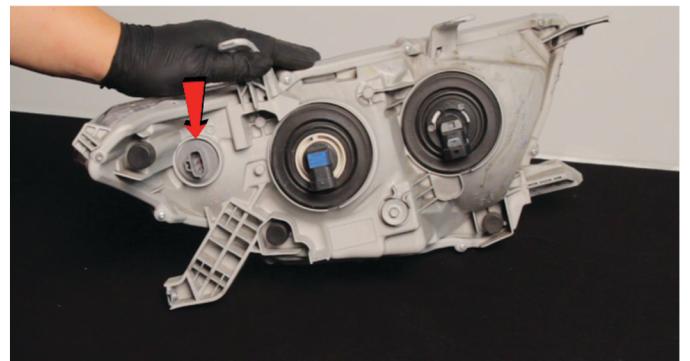


16) Remove the turn signal socket from the OEM headlight. Never touch exposed bulbs with bare hands.



17) Transfer the turn signal bulb to the Spyder headlight.



18) The headlight beam adjusters are marked here and are 8mm. For information on how to wire the green/black LED DRL leads, visit the How To Wire Halos video on the Spyder FAQs Playlist on the Spyder Auto YouTube channel.

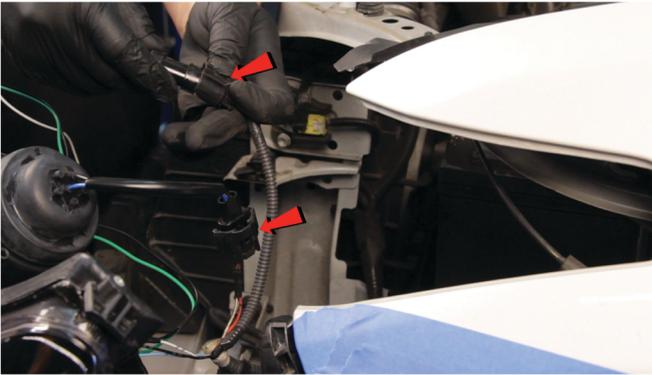

19) Connect the high beam and low beam harnesses to the Spyder headlight.



20) Connect the turn signal harness.



21) Seat the Spyder headlight, being careful to ensure that its mounting tabs fit fully into place.



22) Reinstall [3x] 10mm bolts to secure the headlight.



23) Seat the front bumper fascia.



24) Reinstall [3x] plastic retainers to secure the fascia.



25) Seat the grille.



26) Reinstall [6x] phillips retainers to secure the grille.



27) Seat the filler panel.



28) Reinstall [11x] push-down plastic retainers to secure the filler panel.



29) Reinstall and lock [2x] flathead retainers to secure the fender liner to the fascia.



30) Reinstall [1x] 10mm bolt to secure the fascia to the fender.



31) Reinstall [4x] 10mm bolts to secure the fascia to the undertray.



32) Reinstall [2x] 10mm bolts that secure the bottom corner of the fascia on each side.



33) Close the hood and enjoy your new Spyder 3D-DRL projector headlights!



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://youtu.be/k5Y5r2mGVMQ>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.