



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-DRAM09-LED-(ALL COLORS)

Tools Required T-15 Torx Driver



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the tailgate.




2) Remove [2x] T-15 torx screws securing the tail light.



3) Remove the grille.




4) Remove the reverse lamp socket from the tail light.
Never touch exposed bulbs with bare hands.

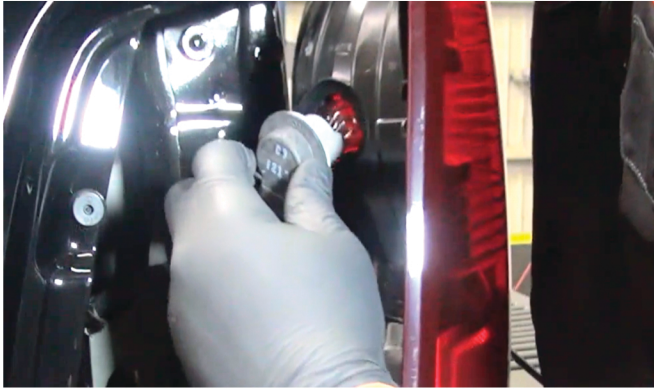

5) Remove the brake lamp/turn signal socket from the OEM tail light, then remove the OEM tail light and set it aside.




6) Remove the bulb from the brake lamp socket. Reinstall the reverse lamp socket into the Spyder tail light.

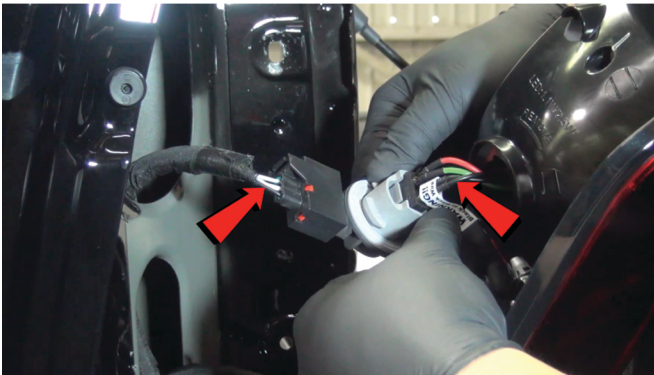

7) Install the Spyder bulb insert into the brake lamp socket. Align the black wire side of the insert with the black wire side of the socket to ensure correct polarity. Install the socket securely into the Spyder tail light.



8) Seat the Spyder tail light.

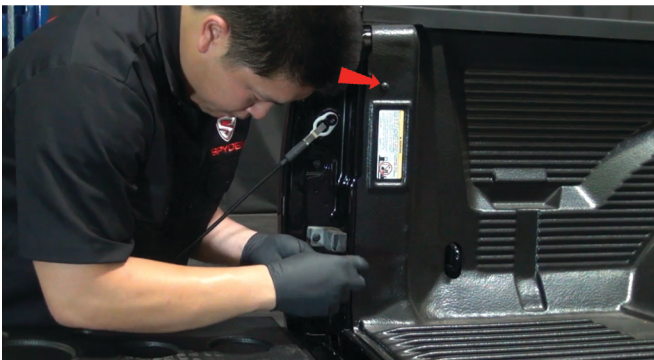

9) Reinstall [2x] T-15 torx screws to secure the tail light.



10) Close the tailgate and enjoy your new Spyder LED tail lights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=16OwAPumWs4>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.