


S6126P

04.5-07 DODGE 2500/3500 "600/610" 5.9L CUMMINS, TURBO BACK SINGLE, OFF ROAD, 4" SINGLE
SIDE

MBRP
PERFORMANCE EXHAUST

April 4, 2017

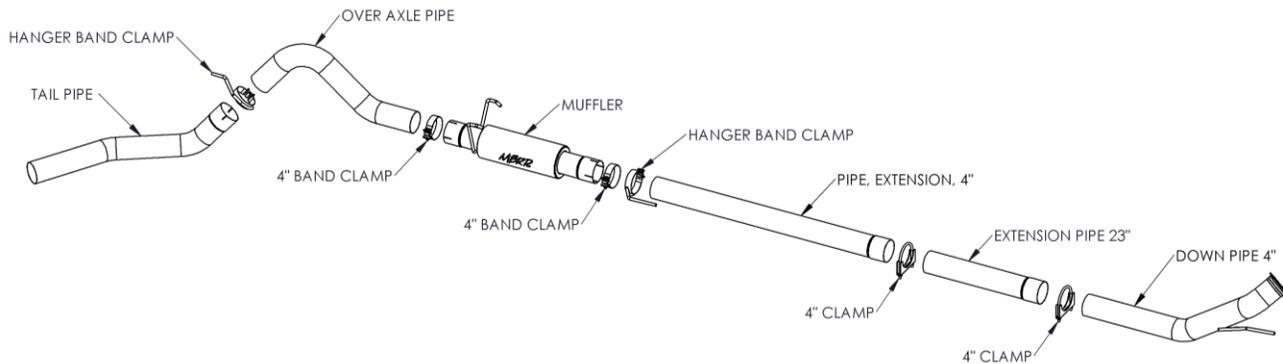

PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged. It is the installer's responsibility to ensure that all components are present and fit together as shown. Please also ensure that all components are undamaged before removal of the factory exhaust. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove the exhaust system from the rubber insulators and remove all of the clamps from the system.
3. Separate the slip joint behind the muffler and remove the tail pipe. Next, separate the slip joint connecting the down pipe and the extension pipe to remove the muffler and extension pipe. Finally loosen the band clamp connecting the down pipe to the turbo and remove the down pipe. **Do not discard the band clamp as it is required for the installation.**
4. Remove the OEM down pipe hanger bracket from the bellhousing. Do not discard these parts as they are required for the installation.

Installation of MBRP Inc. Performance Exhaust:

1. Slide the OEM down pipe hanger bracket onto the Down Pipe hanger. Install the Down Pipe in the same position as the stock down pipe by reattaching the hanger bracket to the bellhousing and then attaching the flared end to the turbo using the stock band clamp. Do not fully tighten until all components are in place.
2. Install the Extension Pipe 23" onto the Down Pipe and then the Extension Pipe 47" onto the Extension Pipe 23". The combination of both Extension Pipes provides the required length to fit a Quad Cab Long Bed truck or Mega Cab. These pipes will have to be cut to fit all other vehicles. Installation Tip: Temporarily install the Muffler and Tail Pipe using the factory rubber insulators and the Hanger Clamp. Measure from the Muffler to the Mid Pipe to determine the length required. Cut the pipe to the required length.
3. Install the Hanger Band Clamp and Muffler over the Extension Pipe and into the OEM rubber hangers.
4. Install the Hanger Band Clamp onto the Tail Pipe. Install the Tail Pipe and Over Axle Pipe from the rear of the truck, over the axle and attach to the outlet of the Muffler. Install the hanger onto the OEM rubber hanger.
5. Install the provided Clamps around the pipes where required. Adjust the Tail Pipe and check along the whole length of the exhaust system to ensure there is adequate clearance around the fuel and brake lines or any wiring. If any interference is detected relocate or adjust.
6. Start at the front of the exhaust system and begin tightening all connections. Recheck for interference after tightening and adjust if required.

Congratulations! You are ready to begin experiencing the improved performance and driving excitement of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.