



2014 Chevy Silverado LD Insert Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261 Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty.
Upper Grille	1
Lower Grille	1
Black Plastic Clips (Kit will contain 1 of the following)	
Putco # 84198, 64299, 82114, 85119	25
Putco # 89231, 89322, 89419, 86119	39
Putco # 84199, 64300, 82116, 85116	22
Putco # 89230, 89320, 89413, 86113	34

Tools Needed:


- 7mm Wrench
- 10mm Wrench
- Flat Head Screw Driver
- Needle Nose Pliers
- Pliers

Insert Grille Installation

1. Remove Grille from packaging. Check to see if all parts from above table of kit contents are included.

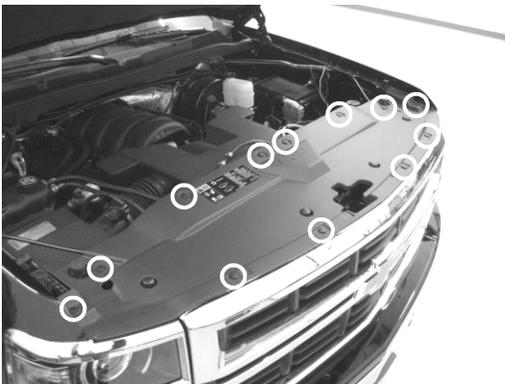


2. Remove plastic cover by removing 12 retaining clips with flat head screw driver (locations shown above).

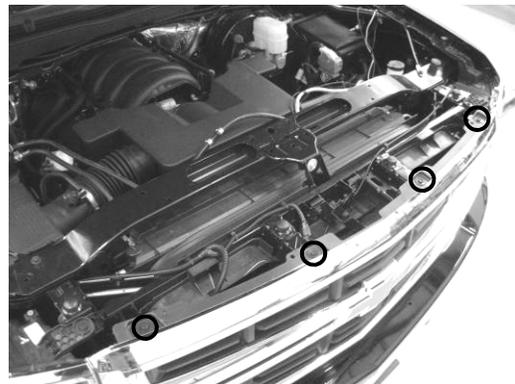

3. Once cover is removed, remove the top 4 grille screws with 10mm wrench (location shown above).

LIMITED LIFETIME WARRANTY


Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

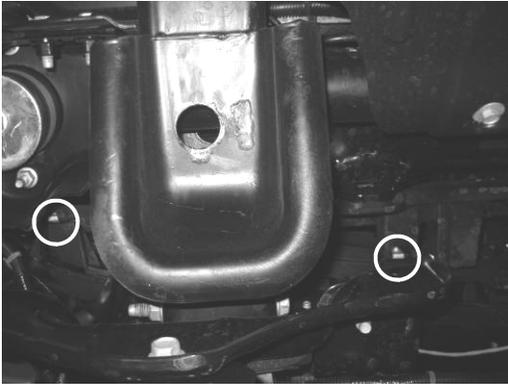

4. Remove bottom 4 grille screw from underneath truck with 10mm wrench. The 2 driver side locations are shown above. Repeat on passenger side.



5. Remove 2 bolts in front wheel well on the upper bumper. The driver side locations are shown above. Repeat on passenger side.

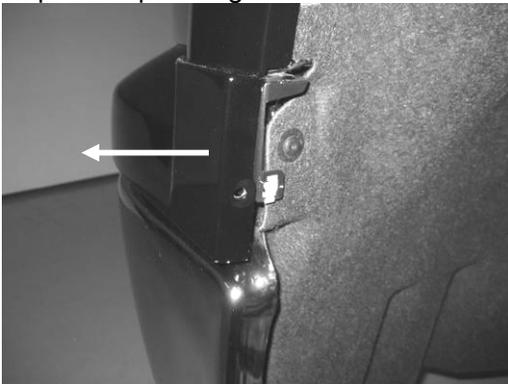


6. Pull out upper bumper end. Driver side is shown. Repeat on passenger side.



7. Pull grille and upper bumper pieces out away from truck and place face down on scratch free surface. These two pieces will be attached together.



8. Once grille and upper bumper are off the truck. Remove the upper bumper piece from grille. Use a flat head screw driver to unclip the 6 tabs on bottom backside of the grille.

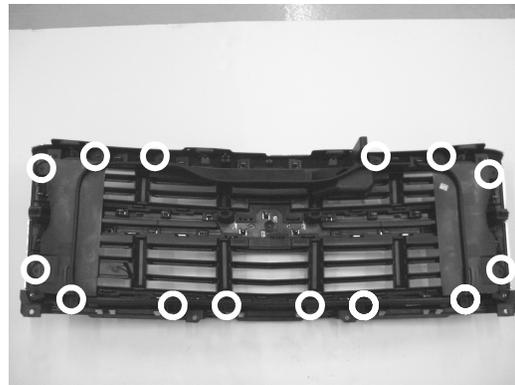


9. Remove shroud from behind grille. Use 7mm wrench to remove 14 bolts.

LIMITED LIFETIME WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.



10. Use needle nose pliers to squeeze clip and snap out top and bottom factory grille inserts.

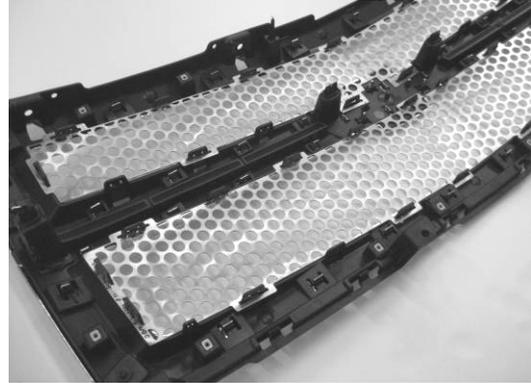

11. Snap in top and bottom Putco grille insert into grille over existing tabs.



12. Use pliers to snap in black plastic clips from the kit to every tab location on top and bottom grille insert. Thinner side of clip goes toward grille opening.



13. Reassemble truck.

LIMITED LIFETIME WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

03/17/2013