

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !

Copyright © 2014 by E&G Corporation, LLC. All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.



2015i Cadillac Escalade - all models Upper and Lower Mesh Grilles




05/14/2015

- | | |
|--|---|
| Upper Heavy Mesh Grille Part #1009-050U-15H | Black Ice Upper Heavy Mesh Grille Part #1009-B50U-15H |
| Upper Fine Mesh Grille Part #1009-050U-15 | Black Ice Upper Fine Mesh Grille Part #1009-B50U-15 |
| Upper Fine Mesh Black Grille Part #1009-050U-15B | Upper Heavy Mesh Black Grille Part #1009-050U-15HB |
| Upper Dual Weave Mesh Grille Part #1009-050U-15D | |
| Center Bar Luxe Weave Upper Mesh Grille Part #1009-060U-15CB | Black Center Bar Luxe Weave Upper Mesh Grille Part #1009-060U-15CBB |
| Lower Heavy Mesh Grille Part #1009-050L-15H | Black Ice Lower Heavy Mesh Grille Part #1009-B50L-15H |
| Lower Fine Mesh Grille Part #1009-050L-15 | Black Ice Lower Fine Mesh Grille Part #1009-B50L-15 |
| Lower Fine Mesh Black Grille Part #1009-050L-15B | Lower Heavy Mesh Black Grille Part #1009-050L-15HB |
| Lower Dual Weave Mesh Grille Part #1009-050L-15D | |
| Luxe Weave Lower Mesh Grille Part #1009-060L-15 | Black Luxe Weave Lower Mesh Grille Part #1009-060L-15B |
| AC Lower Heavy Mesh Grille Part #1009-050L-15HAC | AC Lower Black Ice Heavy Mesh Grille Part #1009-B50L-15HAC |
| AC Lower Fine Mesh Grille Part #1009-050L-15AC | AC Black Ice Lower Mesh Grille Part #1009-B50L-15AC |
| AC Lower Fine Mesh Black Grille Part #1009-050L-15ACB | AC Lower Heavy Mesh Black Grille Part #1009-050L-15HACB |
| AC Lower Dual Weave Mesh Grille Part #1009-050L-15DAC | |
| AC Luxe Weave Lower Mesh Grille Part #1009-060L-15AC | AC Black Luxe Weave Lower Mesh Grille Part #1009-060L-15ACB |


TOOLS REQUIRED Automotive grade masking tape, plastic clip removal tool, grease pencil, electric drill, 5/16", 3/8" and long 1/8" drill bits, body putty spreader, nylon rope or cord, spring clamps, razor blade or X-Acto knife, flat blade screwdriver, #2 phillips screwdriver, 7mm, 8mm, 9mm and 10mm sockets, ratchet, 9mm wrench, awl or similar pointed tool, scissors, small disc grinder, flat or semi-gloss black paint, glass cleaner and soft, clean cloths.

Notes to the Technician/Installer: E&G is proud to present this package to you and reminds you that for technical information, contact technical assistance at 410-381-4900. Do not attempt the installation of any E&G product without first reading the detailed instructions. E&G will not warrant damaged parts or the vehicle due to altered installation procedures.

Important information before you begin: If this E&G grille installation kit includes grille hole location template(s) to drill mounting holes in the vehicle, you MUST verify that the template(s) provided in this kit match the mounting pin or stud locations on the grille(s). Prior to drilling the mounting holes, place the assembled grille's mounting pins or studs over the template(s) provided and make sure that the pin or stud and hole locations are the same. If they do not match, please call 410-381-4900 and ask for technical assistance. Thank you.

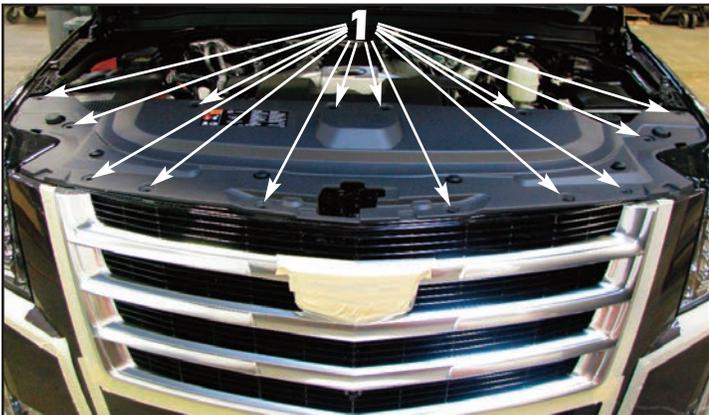


1. Apply masking tape to the painted and chromed edges of the bumper cover, grilles, and emblem. Remove the fasteners securing the radiator support panel cover and remove the cover.

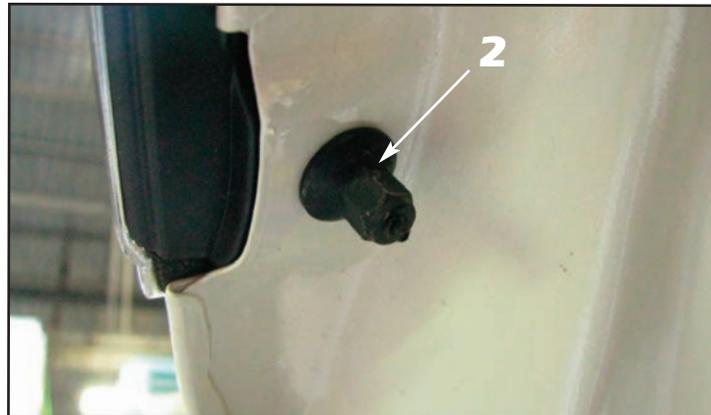

2. Remove the nuts retaining the hood cap at the outer edges and squeeze the retaining clips together and push the clips out to remove the hood cap from the hood.



3. Remove the factory 10mm hex bolts from across the top of the factory grille and bumper cover.

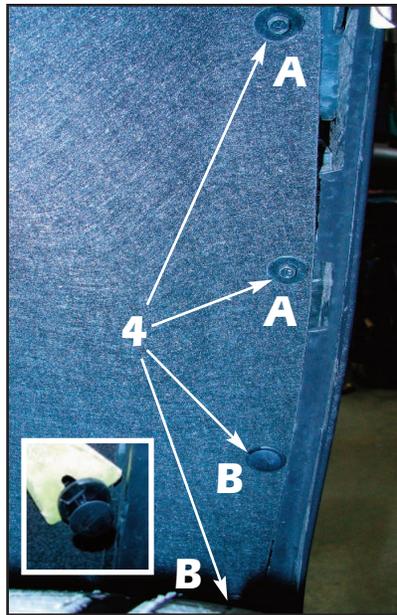


4. Place the vehicle onto a lift or use a jack and jack stands to lift and support the front of the vehicle at a comfortable work height.
NOTE: If using a jack, you must use jack stands. Do not rely on the jack to support the vehicle. If the jack fails, serious injury could occur. In each front wheel arch, remove the two upper 7mm hex bolts (A), and the two lower plastic push pins (B).




5. Once the wheel arch liner fasteners are removed, remove the 7mm hex head bolt at the seam between the bumper cover and fender.




6. On vehicles equipped, drill out the rivets retaining the front license plate bracket onto the bumper cover and remove the license plate bracket (drill until the head of the rivet releases, do not drill through the bracket or bumper cover. Save bracket for reinstallation).

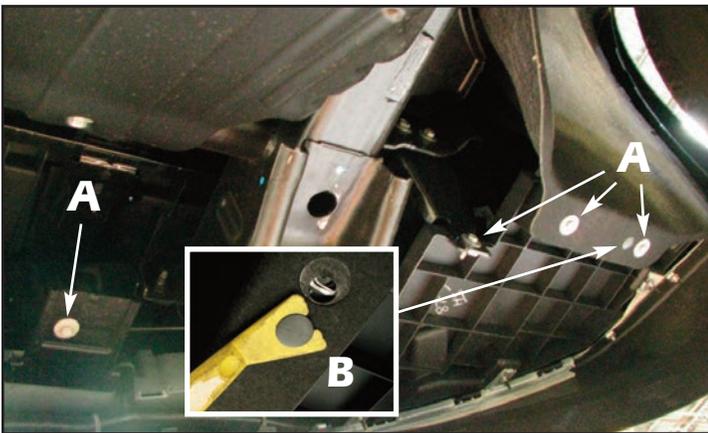


7. From underneath the front of the vehicle, remove the 10mm hex bolts (A) and the plastic push pin (B) securing the bumper cover to the substructure and wheel arch liner (right side shown).

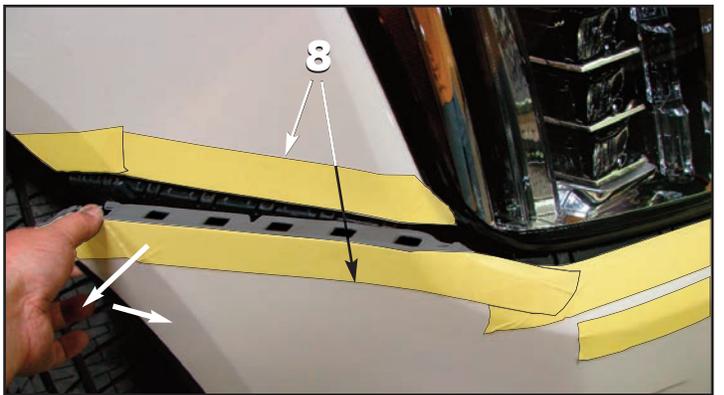


8. Apply masking tape where the bumper cover and fender meet. Push in on the wheel arch liner, reach behind the sides of the bumper cover below the bumper cover/ fender seam and loosen each of the three 7mm hex bolts securing the bumper cover to fender bracket (not shown). Once the bracket is loose, you can pull out then forward on the bumper cover to release it from the fender bracket. Repeat on the opposite side.

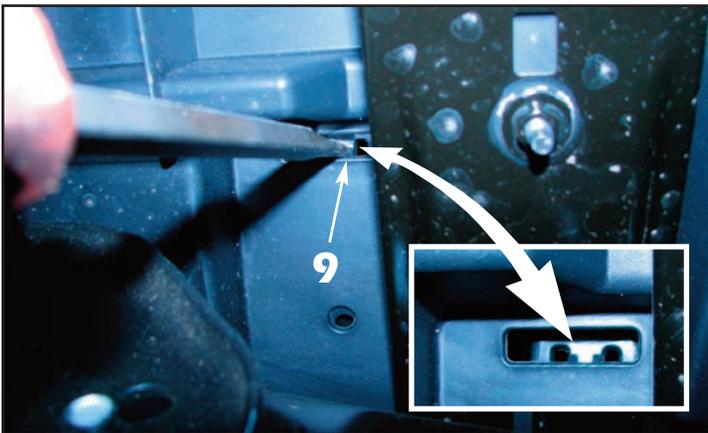


9. From underneath the vehicle, use a wide flat blade screwdriver to push up on the two mounting clips securing the center of the bumper cover while an assistant gently pulls the bumper cover forward to release the clips (see close-up of the slot to place a flat blade screwdriver for leverage).

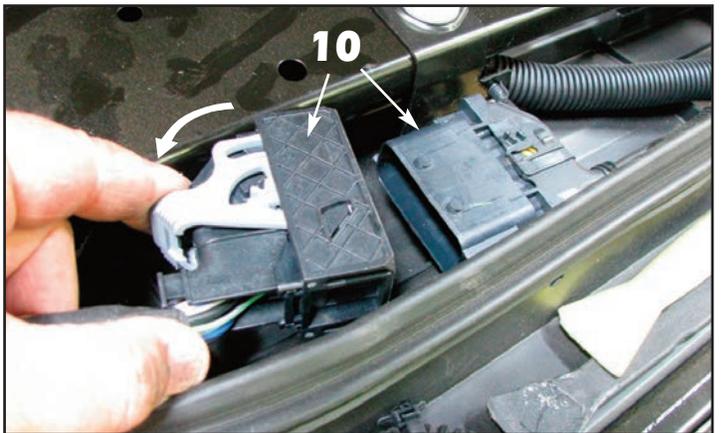


10. Rotate the handle on the upper electrical connector and pull the connector apart prior to bumper cover removal.

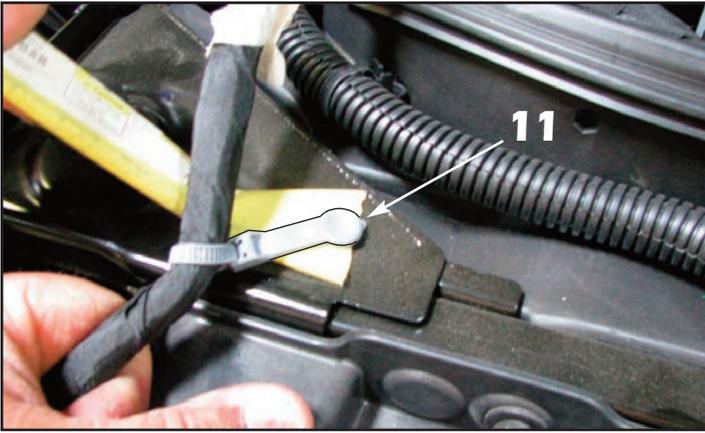


11. Remove the wire harness retainer near the electrical connector disconnected in the previous step.

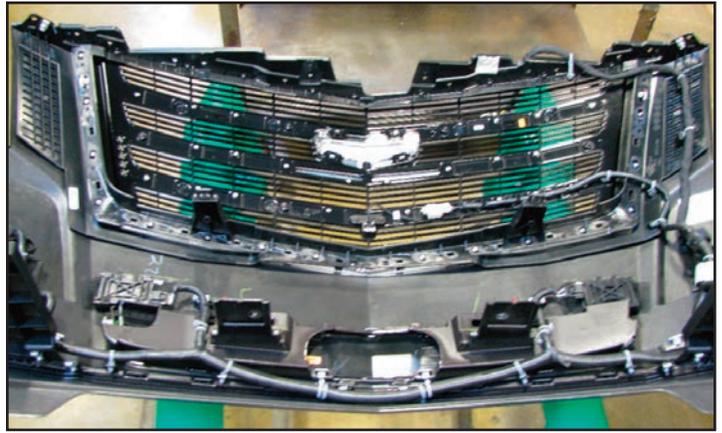

12. With the help of an assistant, pull the bumper cover from the vehicle and place the bumper cover face down onto a clean, padded work area for factory grille removal.

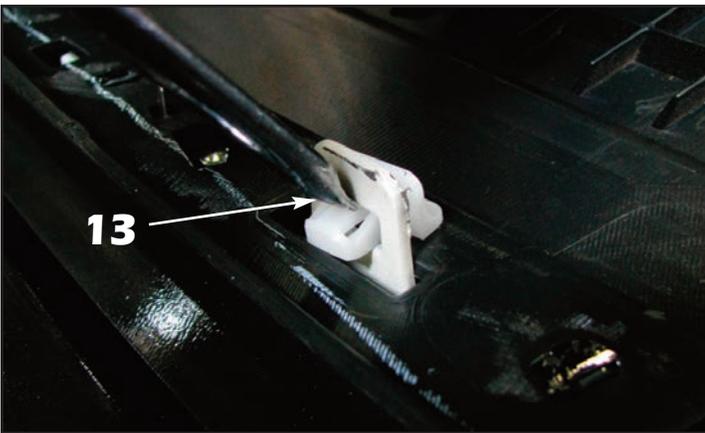


13. Use a flat blade screwdriver to remove the white plastic clips retaining the top of the factory grille to the bumper cover.

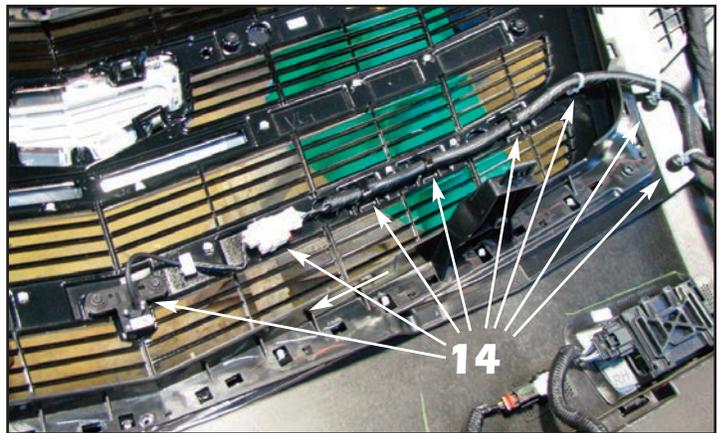

14. Disconnect the electrical connector from the front park assist camera, unclip the factory wire harness from the back of the grille and remove the screws retaining the park assist camera and remove the camera from the back of factory grille.




15. Use a plastic clip removal tool to remove the factory wire harness from the back of the factory grille.

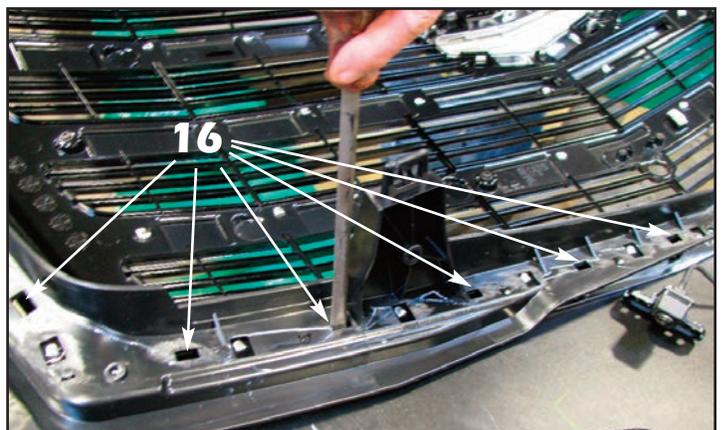


16. Use a flat blade screwdriver to unclip the factory grille from the bumper cover. Start at the top on either side and as the grille unclips, lift up on the grille as you work your way around the perimeter until the grille releases from the bumper cover.




17. Use a flat blade screwdriver or a plastic clip removal tool to remove the factory white clips around the perimeter of the factory lower grille.

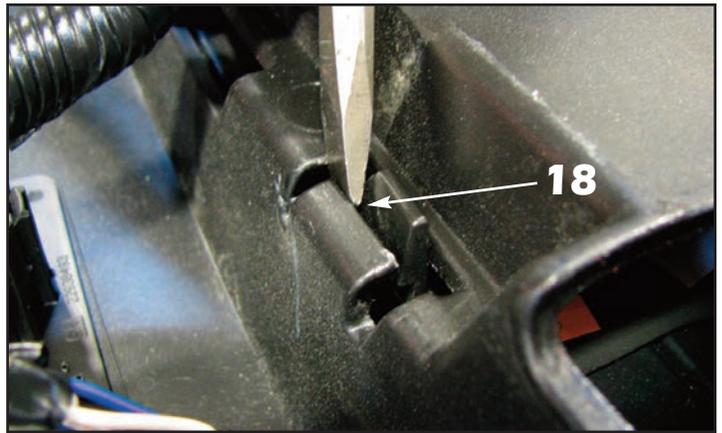


18. Use a flat blade screwdriver to pry back the factory lower grille upper mounting retainers away from the lower grille upper mounting tabs.

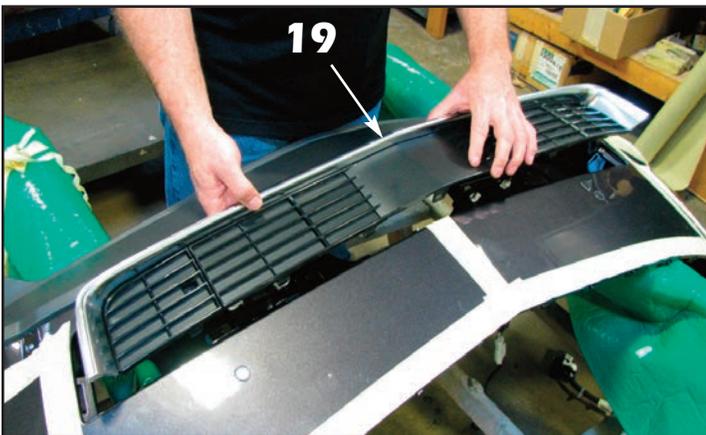

19. Once the lower factory grille is unclipped, turn the bumper cover over and pull the lower grille from the bumper cover.

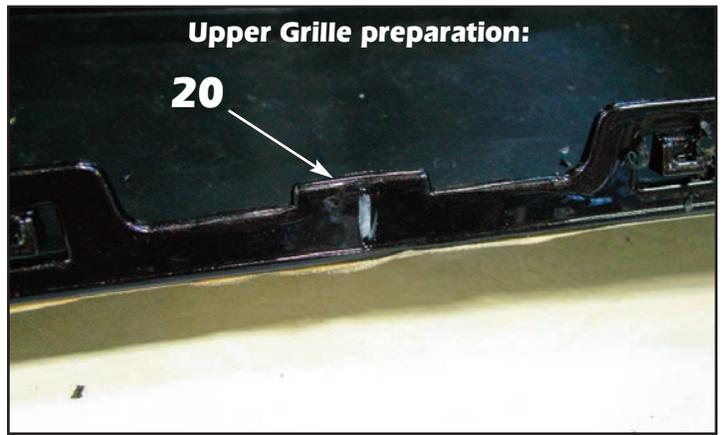


Upper Grille preparation:
20. Use a grease pencil to mark the center of the factory grille opening.

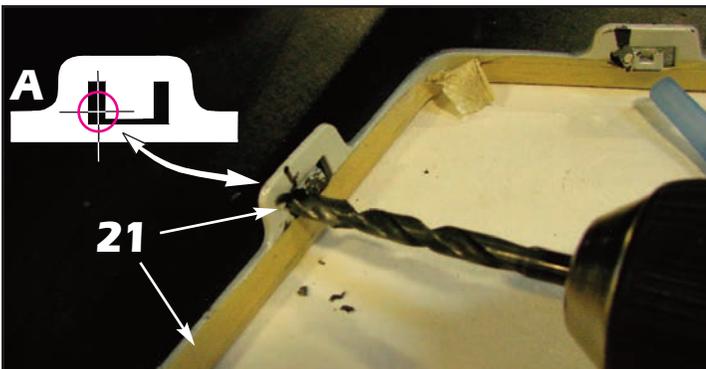


21. Apply masking tape to the factory bumper cover grille return, leaving the mounting tabs exposed. Use a 5/16" drill bit to drill out the lower and center factory mounting slots. On the bottom slot, you will drill out the upper portion (as shown). On the center slot, you will drill out the lower portion (not shown) in order for the side retaining brackets to line up and bolt into place once the grille is properly aligned. You must drill the holes toward the front of the bumper cover (see schematic "A" above).



22. Align the side retaining bracket into place, placing the supplied #10-24 x 3/4" black pan head bolts through the holes for proper alignment. Mark the upper mounting hole location. Make sure you perform this step on both sides of the bumper cover.

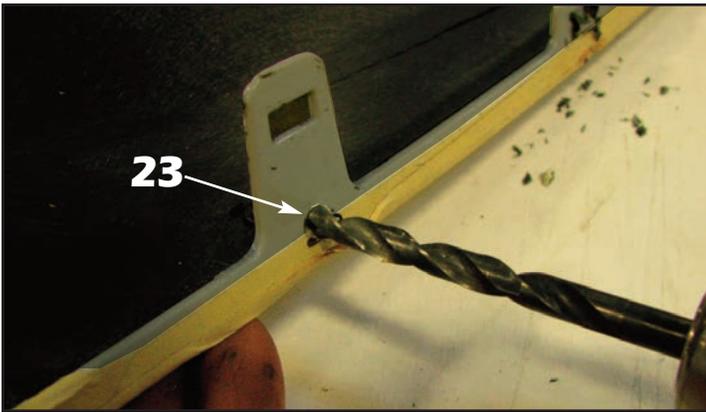


23. Drill a 5/16" hole through the marks made in the previous step.

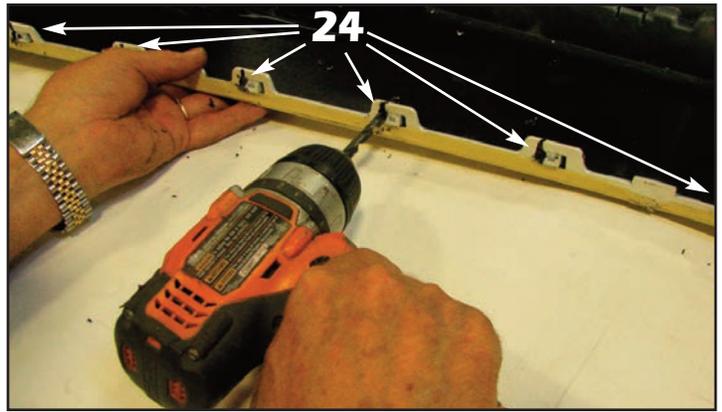

24. Temporarily align the center of the upper mesh grille with the grease pencil mark on the bumper cover. Mark the sides of the bumper cover mounting tabs that align with the mounting holes in the mesh grille. Enlarge the holes with a 5/16" drill bit. **For vehicles painted colors other than black or dark blue: Once the holes are drilled, apply flat or semi-gloss black paint to the exposed mounting tabs to conceal them once the mesh grille is installed.**




25. Remove the crest emblem by using a small, flat blade screwdriver to unclip it from the factory grille.

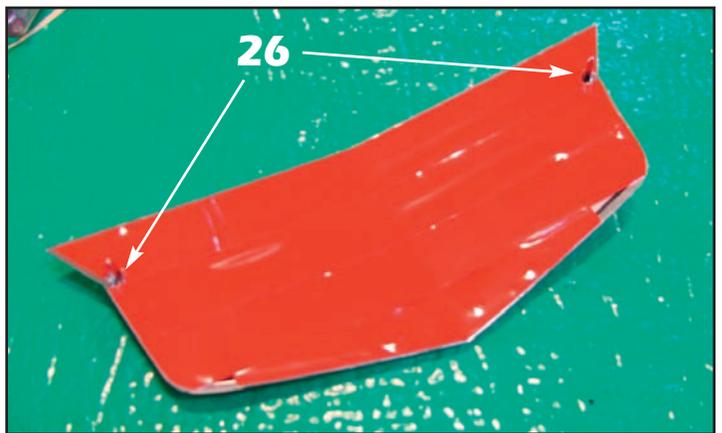

26. Install the supplied .045" x 1" double faced tape to the back of the factory emblem once the small mounting clips have been broken off (leave the alignment pins in place).



27. For Center Bar Grille emblem installation: Peel off the double faced tape backing and align the emblem onto the center bar emblem bezel, making sure the alignment studs pass through the holes in the bezel. Press firmly to set the tape.

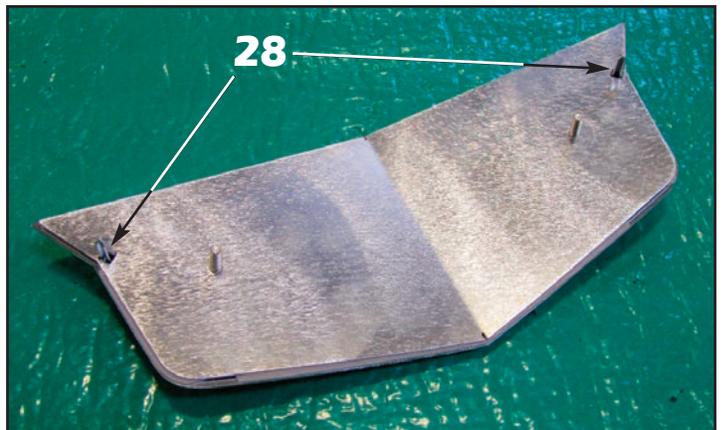

28. Peel off the double faced tape backing and align the emblem mounting plate, making sure the alignment studs pass through the holes in the plate. Press firmly to set the tape. Once the emblem has been installed onto the plate, break off the alignment pins (not shown).



29. Install the emblem into the recessed area in the upper mesh grille, making sure it are perfectly centered and level. Use wide masking tape to hold the emblems into place during the following mounting hardware installation.



30. Turn the grille over and install the supplied black plastic washers, #10 lock washers and #8-32 S.S. hex nuts and tighten until the emblem is tight against the mesh.




31. Align the camera onto the supplied camera mounting plate and install it to the plate using the supplied small black plastic washers and #8-32 S.S. hex nuts (A). Once the camera is installed onto the mounting plate, align the camera bezel through the opening in the mesh grille, align the camera and mounting plate over the bezel and install the supplied small black plastic washers and #8-32 S.S. hex nuts (B) to secure.




32. In order for the grille opening to retain the proper angle in order to mount the upper mesh grille, use a section of nylon cord or equivalent and draw the ends of the bumper cover together until the two small outer bolt heads measure 74-1/4" apart. This will make alignment and installation of the upper grille much faster. The bumper cover flattens out too much when it is removed from the vehicle.



33. Remove the protective masking tape applied to the grille opening in Step 19. If spring clamps are available, align and clamp the upper mesh grille into place. Align the center of the grille with the grease pencil mark made previously. Bolt the bottom edge of the grille to the bumper cover using the supplied #10-24 x 3/4" s.s. black pan head bolts, small black plastic washers and #10-24 s.s. black hex nuts. Use a long #2 phillips screwdriver to hold the pan head bolts in place while tightening if necessary.

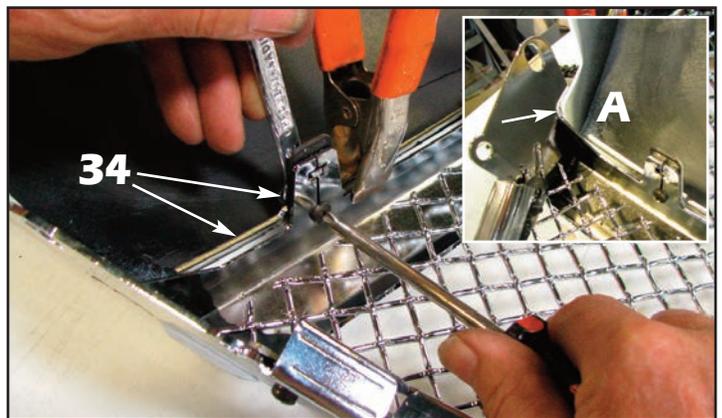


34. Once the bottom of the grille is tight against the bumper cover, align the side retaining brackets against the edge of the bumper cover and install the supplied #10-24 x 3/4" black s.s. pan head bolts, small black plastic washers and #10-24 s.s. black hex nuts and tighten. **Important: The top edge of the bumper cover must be under the top of the mesh grille frame (see insert "A").**

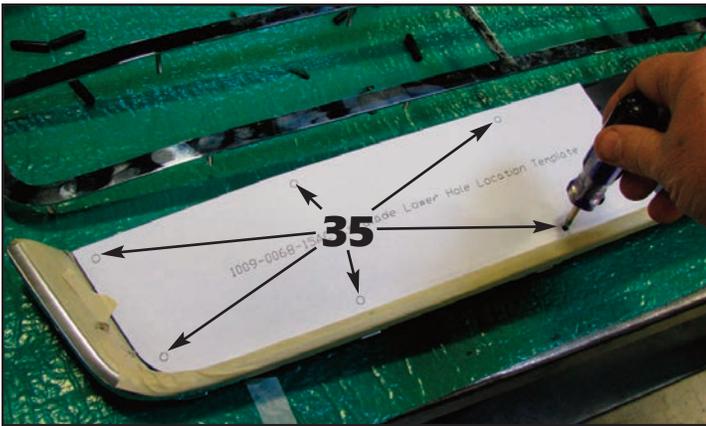


35. Cut out, align and tape the lower mesh hole location template (last page of this manual) onto the lower factory grille. Use an awl or similar pointed tool to mark the hole locations, untape the template, flip it over and mark the holes on the opposite side.



36. Use a 1/8" drill bit to drill the pilot holes, then enlarge the holes to 5/16".

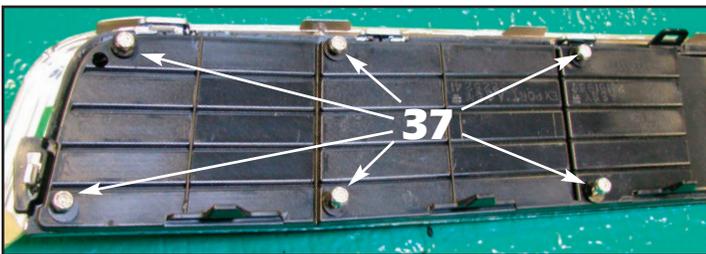


37. Align the lower mesh and surround into place. Turn the grille over and install the supplied small black plastic washers and #8-32 ESNA half nuts. Tighten until the mesh and surround are snug against the factory lower grille (adaptive cruise version shown, regular version similar).

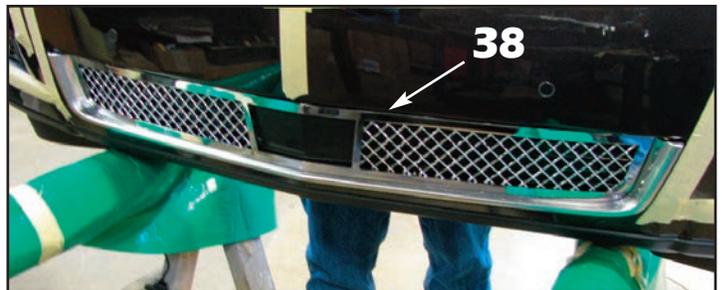


Important: Have an assistant help you when handling the bumper cover from this point forward. Carefully turn the bumper cover over for lower grille installation.


38. Install the lower grille back into the bumper cover, making sure all mounting tabs lock back into the bumper cover and the white clips removed previously are reinstalled (adaptive cruise version shown, regular version similar).

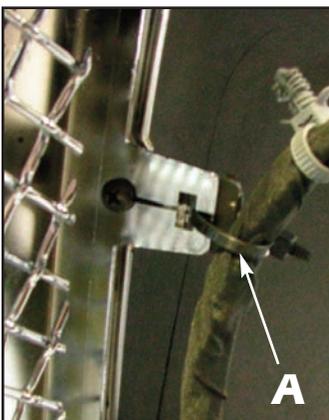

39. Prior to bumper cover installation, install the supplied black cable tie (A) to secure the factory wire harness to the side of the grille frame (where shown). Apply flat or semi-gloss black paint to the exposed bolt heads to conceal them after the bumper cover is installed.

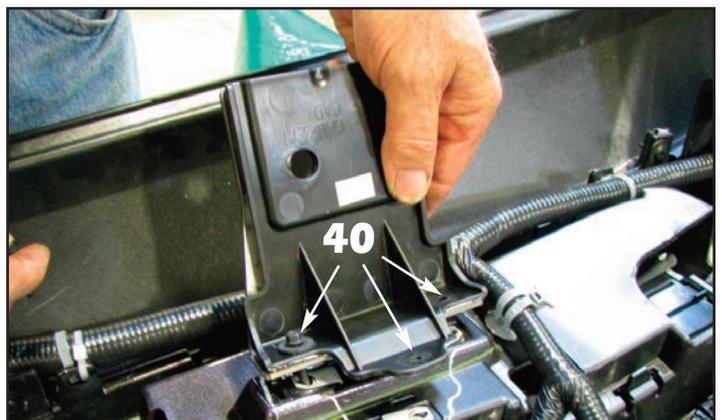

40. Remove the bumper cover mounting brackets using a 7mm socket.

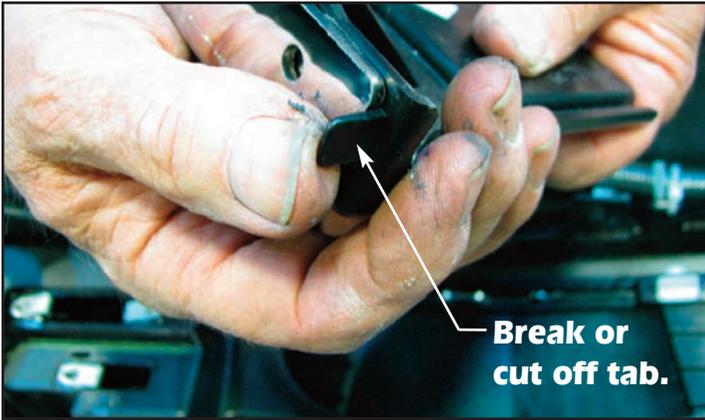

Break or cut off tab.


41. Break or cut off the tab from the factory bumper cover mounting bracket prior to installation of the supplied S.S. reinforcement brackets.




42. Position the supplied S.S. reinforcement brackets under the factory mounting brackets and install the assembly back onto the bumper cover.




43. With the help of an assistant, realign the bumper cover back onto the vehicle, making sure the bumper cover fits over the alignment tabs on the headlights and the wire harness and connector do not get caught behind the grille. Install the factory 10mm hex bolts across the top of the grille (hand tighten at this time).

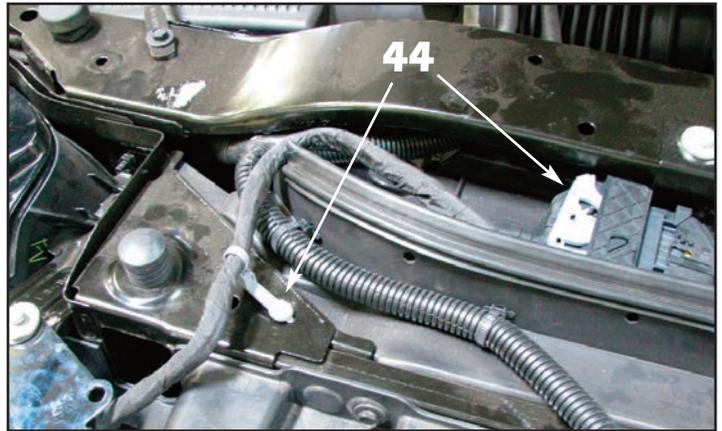


44. Reconnect the factory wire harness as shown. Reverse the removal procedure to reinstall the bumper cover back onto the vehicle.

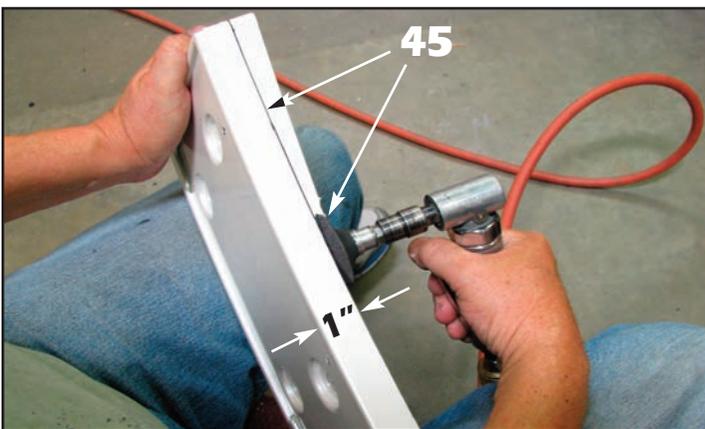

45. For vehicles equipped with a front license plate bracket, trim the bottom edge to 1" wide and blend around to the sides in order to clear the lower mesh grille frame.

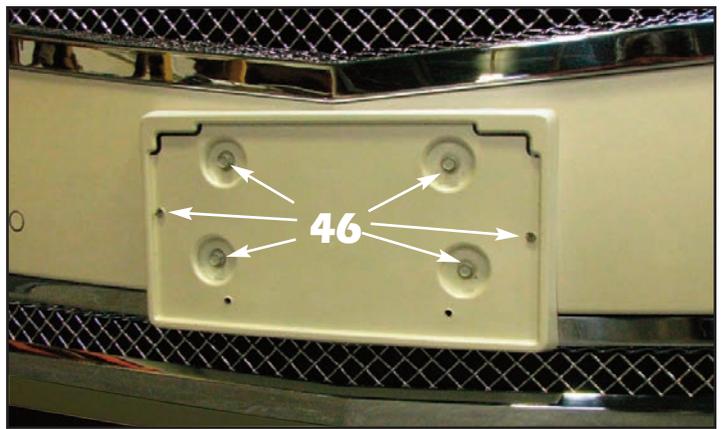


46. Reinstall the front license plate bracket using the supplied self tapping hex bolts through the existing rivet holes. If the sides of the bracket are not tight against the bumper cover, install the #6 x 1-1/2" countersunk phillips screws (where shown) to keep the sides tight.

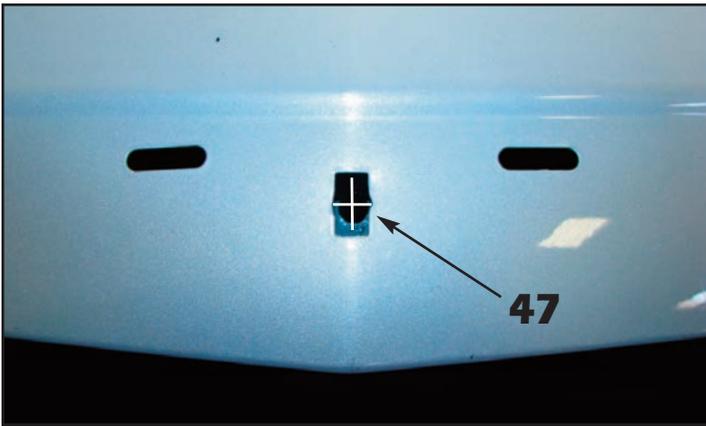


47. You will use the rectangular opening at the center of the hood for the following hole drilling procedure. Use a long 1/8" drill bit to drill a pilot hole through the flat inner surface of the hood, making sure the drill bit is aligned with the centerline of the vehicle (do not drill the inner hole to the left or right of center).



48. Enlarge the hole to 5/16" on the inner metal of the hood.

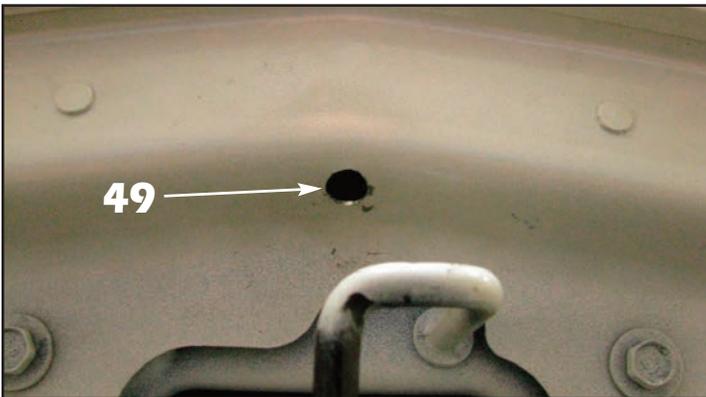


49. Test fit the hood cap onto the hood, making sure the end studs pass through the factory holes in the hood. The center stud must pass through both the outer and inner layers of the hood. You might have to elongate the inner hole to the left or right slightly for the center stud to pass through. Once the fit is verified, remove the hood cap and treat the hole with a high quality sealer to prevent future rust problems.

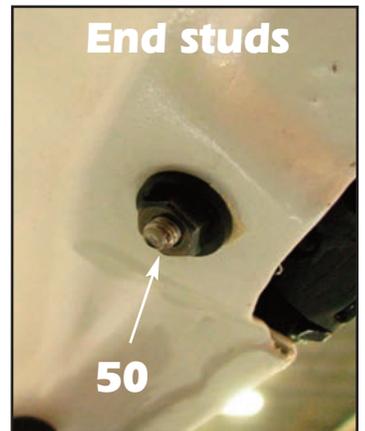


50. Install the hood cap using the supplied small black plastic washers and the #8-32 ESNA half nuts. Snug the nuts but do not completely tighten at this time.




51. Carefully close the hood and check for proper hood cap to grille frame alignment. Adjust the cap so that it is perfectly centered over the grille frame. Open the hood and tighten the #8-32 ESNA half nuts once the left to right adjustment has been made.

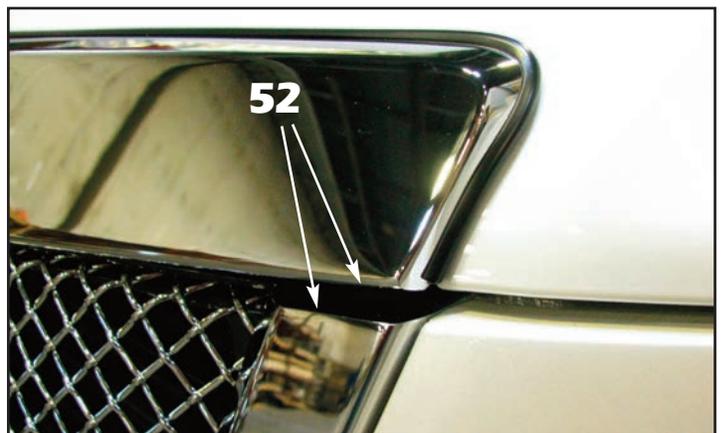

52. Close the hood and align the grille frame with the hood cap by pushing the frame in or pulling the frame out until the frame is flush or not more than 1/16" back from the surface of the hood cap. Open the hood and tighten the factory 10mm hex bolts to secure the top of the grille.

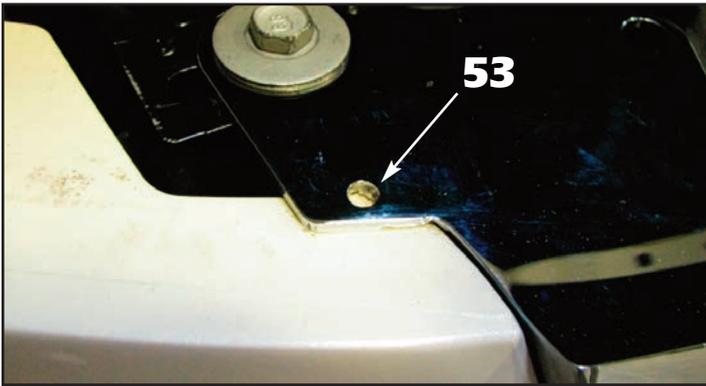

53. Make sure the bumper cover is even with the hood and install the supplied #8 x 1/2" black truss head screw into the holes on either side of the top bar. Allow the screws to self tap into the plastic.

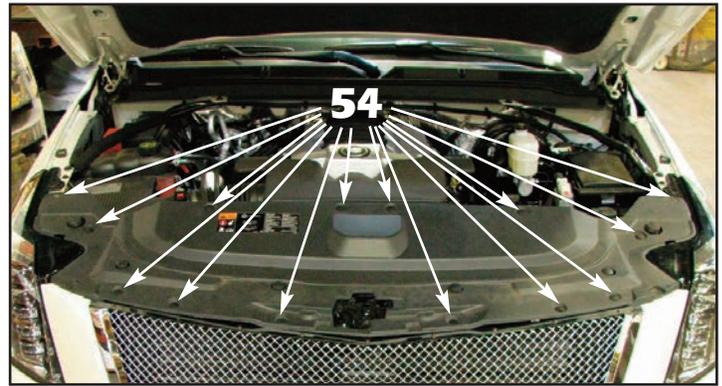

54. Reinstall the radiator support panel cover back onto the vehicle.



E&G Classics Warranty Information:

E&G Corporation, LLC. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Thirty-Six (36) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G's option, of the defective part or product. Full E&G warranty information is available online @ www.egclassics.com. Just click on the product warranty icon.

For E&G Classic Product Returns:

Please contact the authorized E&G Dealer where you purchased our product from in regards to any workmanship or warranty claims. All items returned to E&G must have a return authorization number issued by us for inspection or a defective product and or warranty issue. All merchandise sent back to E&G without proper paperwork or authorization will be rejected and returned.

Upper Heavy Mesh Grille Part #1009-050U-15H		
Quantity:	Description:	Part Number:
1	Upper Heavy Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-5903-15
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Camera Bezel	1009-0159-15C
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Black Ice Upper Heavy Mesh Grille Part #1009-B50U-15H		
Quantity:	Description:	Part Number:
1	Black Ice Upper Heavy Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-5903-15B
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Black Camera Bezel	1009-0159-15CB
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Upper Fine Mesh Grille Part #1009-050U-15		
Quantity:	Description:	Part Number:
1	Upper Fine Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-5903-15
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Camera Bezel	1009-0159-15C
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Black Ice Upper Fine Mesh Grille Part #1009-B50U-15		
Quantity:	Description:	Part Number:
1	Black Ice Upper Fine Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-5903-15B
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Black Camera Bezel	1009-0159-15CB
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Upper Dual Weave Mesh Grille Part #1009-050U-15D

Quantity:	Description:	Part Number:
1	Upper Dual Weave Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-5903-15
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Camera Bezel	1009-0159-15C
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Upper Fine Mesh Black Grille Part #1009-050U-15B

Quantity:	Description:	Part Number:
1	Upper Fine Mesh Black Grille	*****
1	Black Hood Cap	1009-0112-15B
1	Installation Hardware Kit	1009-5903-15B
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Black Camera Bezel	1009-0159-15CB
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Upper Heavy Mesh Black Grille Part #1009-050U-15HB

Quantity:	Description:	Part Number:
1	Upper Heavy Mesh Black Grille	*****
1	Black Hood Cap	1009-0112-15B
1	Installation Hardware Kit	1009-5903-15B
2	Side Retaining Brackets	1009-0043-15
1	Camera Mounting Plate	1009-0158-15C
1	Crest Emblem Plate	1009-0158-15
1	Black Camera Bezel	1009-0159-15CB
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	Bumper Reinforcement Brackets	1009-0053-15
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
2	#10 S.S. Lock Washers	1999-9555-00
6	#8-32 S.S. Hex nuts	1999-9072-00

Center Bar Luxe Weave Upper Mesh Grille Part #1009-060U-15CB

Quantity:	Description:	Part Number:
1	Center Bar Upper Heavy Mesh Grille	*****
1	Hood Cap	1009-0112-15
1	Installation Hardware Kit	1009-6903-15CB
2	Side Retaining Brackets	1009-0043-15
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
1	Camera Mounting Plate	1009-0158-15C
1	Camera Bezel	1009-0159-15C
2	Bumper Reinforcement Brackets	1009-0053-15
4	#8-32 S.S. Hex nuts	1999-9072-00

Black Center Bar Luxe Weave Upper Mesh Grille Part #1009-060U-15CBB

Quantity:	Description:	Part Number:
1	Center Bar Upper Heavy Mesh Black Grille	*****
1	Black Hood Cap	1009-0112-15B
1	Installation Hardware Kit	1009-6903-15CBB
2	Side Retaining Brackets	1009-0043-15
24"	.045" x 1" Double Faced Tape	3004-9244-92
16	#10-24 x 3/4" S.S. Pan Head Bolts	1999-0225-00
1	Black Cable Tie	1999-0301-00
16	#10-24 S.S. Black Hex Nuts	1999-0226-00
3	#8-32 ESNA Half Nuts	1999-0065-00
20	Small Black Plastic Washers	1999-0256-00
2	#8 x 1/2" Truss Head Screws	3999-9035-00
2	Large Black Plastic Washers	1999-0264-00
1	Camera Mounting Plate	1009-0158-15C
1	Black Camera Bezel	1009-0159-15CB
2	Bumper Reinforcement Brackets	1009-0053-15
4	#8-32 S.S. Hex nuts	1999-9072-00

Lower Heavy Mesh Grille Part #1009-050L-15H

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Chrome Plated Heavy Mesh	1009-0541-15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Lower Heavy Mesh Black Grille Part #1009-050L-15HB

Quantity:	Description:	Part Number:
1	Lower Black Surround	1009-0023-15B
1	Lower Black Heavy Mesh	1009-0541-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Heavy Mesh Grille Part #1009-050L-15HAC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Chrome Plated Heavy Mesh - R	1009-0541Y15
1	Adaptive Cruise Lower Chrome Plated Heavy Mesh - L	1009-0541Z15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Lower Fine Mesh Grille Part #1009-050L-15

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Chrome Plated Fine Mesh	1009-0521-15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Lower Fine Mesh Black Grille Part #1009-050L-15B

Quantity:	Description:	Part Number:
1	Lower Black Surround	1009-0023-15B
1	Lower Black Fine Mesh	1009-0521-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Fine Mesh Grille Part #1009-050L-15AC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Chrome Plated Fine Mesh - R	1009-0521Y15
1	Adaptive Cruise Lower Chrome Plated Fine Mesh - L	1009-0521Z15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Black Ice Mesh Part #1009-B50L-15AC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Black Ice Fine Mesh - R	1009-052Y-15BI
1	Adaptive Cruise Lower Black Ice Fine Mesh - L	1009-052Z-15BI
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Dual Weave Mesh Grille Part #1009-050L-15DAC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Chrome Plated Dual Weave Mesh - R	1009-054Y-15D
1	Adaptive Cruise Lower Chrome Plated Dual Weave Mesh - L	1009-054Z-15D
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Fine Mesh Black Grille Part #1009-050L-15ACB

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Black Surround	1009-0023-15BAC
1	Adaptive Cruise Lower Fine Black Mesh - R	1009-052Y-15B
1	Adaptive Cruise Lower Fine Black Mesh - L	1009-052Z-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Black Luxe Weave Lower Mesh Grille Part #1009-060L-15ACB

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Black Surround	1009-0023-15BAC
1	Adaptive Cruise Lower Luxe Weave Black Mesh - R	1009-062Y-15B
1	Adaptive Cruise Lower Luxe Weave Black Mesh - L	1009-062Z-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Black Ice Heavy Mesh Grille Part #1009-B50L-15HAC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Black Ice Heavy Mesh - R	1009-054Y-15BI
1	Adaptive Cruise Lower Black Ice Heavy Mesh - L	1009-054Z-15BI
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Luxe Weave Lower Mesh Grille Part #1009-060L-15AC

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Chrome Plated Surround	1009-0023-15AC
1	Adaptive Cruise Lower Chrome Plated Luxe Weave Mesh - R	1009-062Y-15
1	Adaptive Cruise Lower Chrome Plated Luxe Weave Mesh - L	1009-062Z-15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Adaptive Cruise Lower Heavy Mesh Black Grille Part #1009-050L-15HACB

Quantity:	Description:	Part Number:
1	Adaptive Cruise Lower Black Surround	1009-0023-15BAC
1	Adaptive Cruise Lower Heavy Black Mesh - R	1009-054Y-15B
1	Adaptive Cruise Lower Heavy Black Mesh - L	1009-054Z-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Black Luxe Weave Lower Mesh Grille Part #1009-060L-15B

Quantity:	Description:	Part Number:
1	Lower Black Surround	1009-0023-15B
1	Lower Luxe Weave Black Mesh	1009-0621-15B
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Luxe Weave Lower Mesh Grille Part #1009-060L-15

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Luxe Weave Chrome Mesh	1009-0621-15
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Black Ice Lower Heavy Mesh Grille Part #1009-B50L-15H

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Black Ice Heavy Mesh	1009-0541-15BI
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00



Black Ice Lower Fine Mesh Grille Part #1009-B50L-15

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Black Ice Fine Mesh Grille	1009-0521-15BI
1	Installation Hardware Kit	1009-5905-15
1	Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

Lower Dual Weave Mesh Grille Part #1009-050L-15D

Quantity:	Description:	Part Number:
1	Lower Chrome Plated Surround	1009-0023-15
1	Lower Dual Weave Mesh Section	1009-0041-15D
1	Installation Hardware Kit	1009-5905-15
1	Lower Hole Location Template	1009-0568-15
12	#8-32 ESNA Half Nuts	1999-0065-00
12	Small Black Plastic Washers	1999-0256-00
4	Self Tapping Hex Head Screws	1999-0359-00

This page left blank for the following templates.

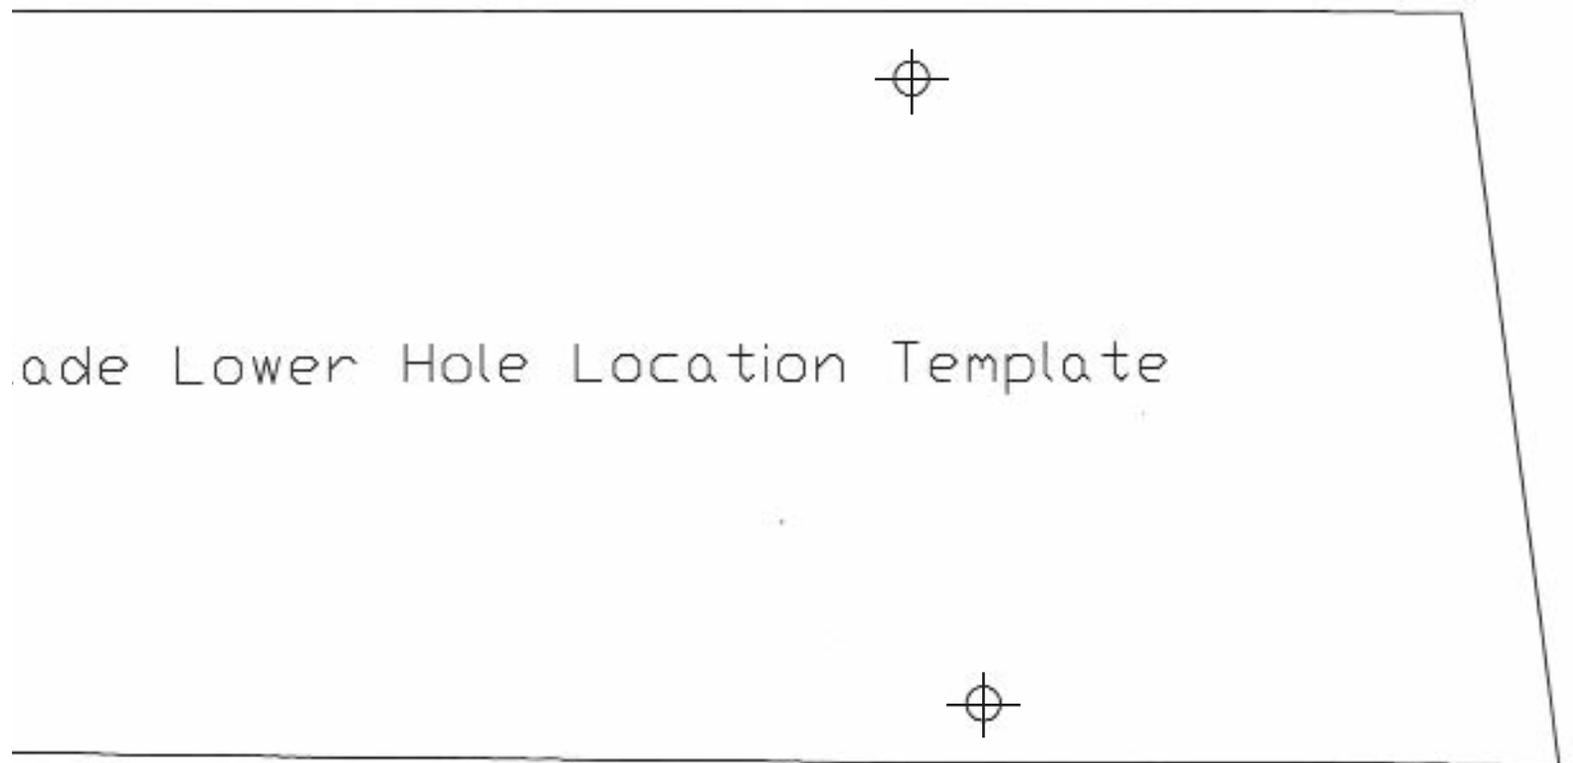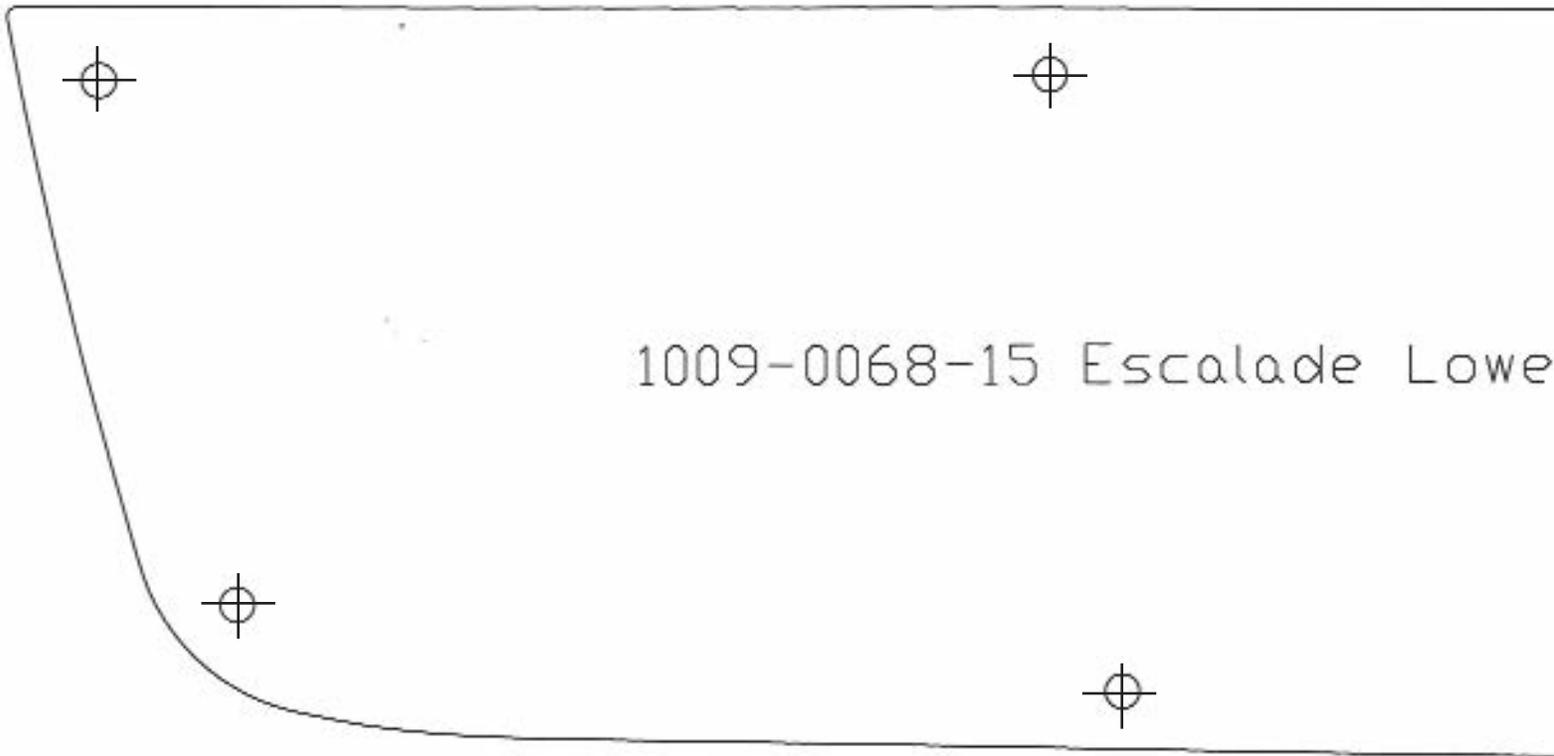

Cut out, overlap and tape together.