

Key to Components

- A. 1 ea. Rear driver inner liner
- B. 1 ea. Rear passenger inner liner
- C. 8 ea. Small push rivets
- D. 4 ea. 8 x $\frac{3}{4}$ " mounting screw
- E. 4 ea. Small speed clip

Tools Needed

- #2 phillips head screwdriver
- Clip removal tool

81-11201

Rear Plastic Inner Liners
Installation Instructions

Fits: Jeep Wrangler JK
2007-2018

A



B



C



D



E




WARNING:

Cancer and Reproductive
Harm.



www.P65Warnings.ca.gov.

REAR FACTORY FLARE REMOVAL

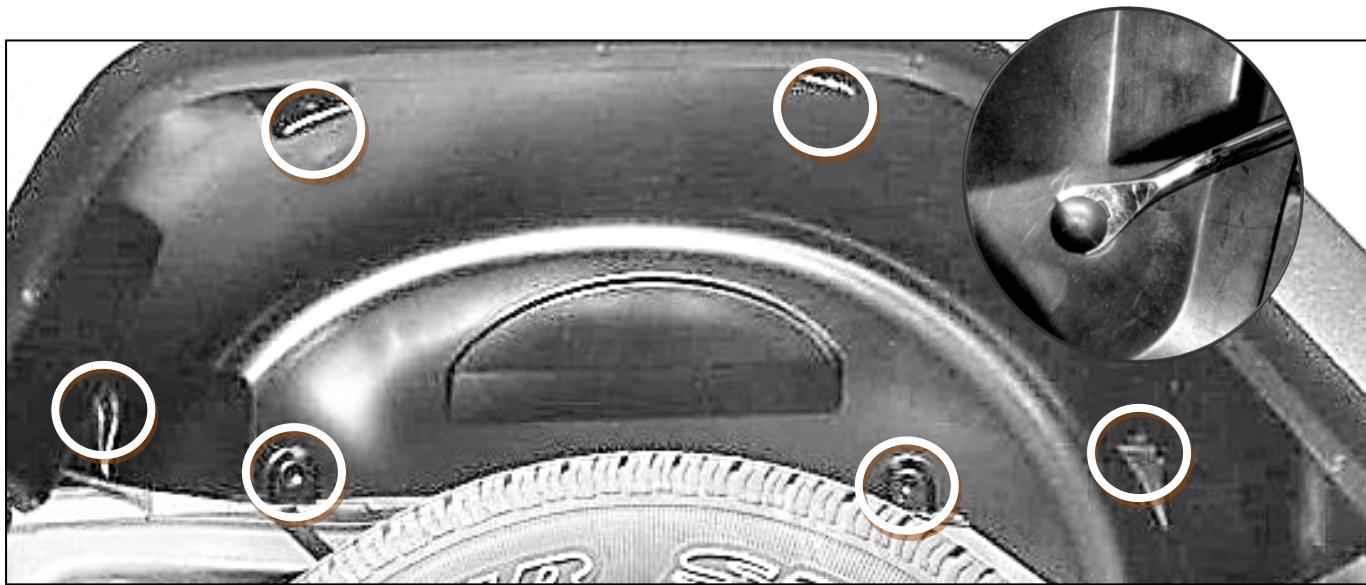

Step 1.


Remove 6 Christmas tree plastic clips using a clip removal tool or similar tool.

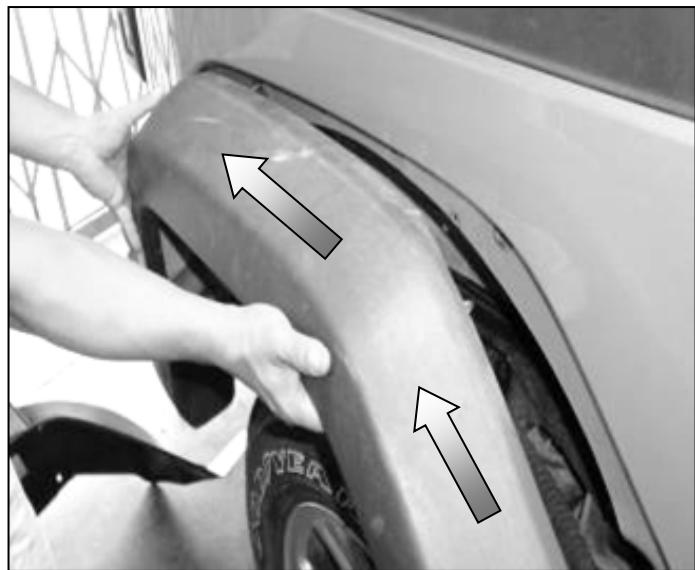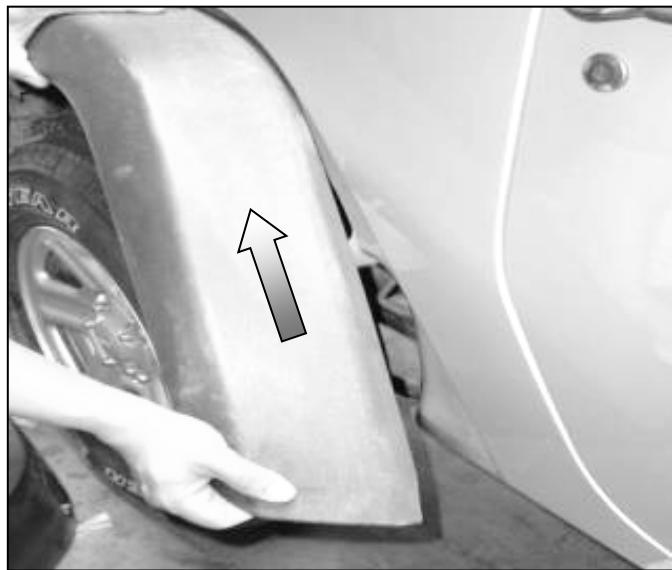

Step 2.

With all fasteners removed firmly take hold of the front lower edge of the flare and Pull up to release the mounting clips. You will hear a clicking sound as the clips are released. Continue to work your way towards the center then rear of the flare pulling firmly up and back on the flare as you go as shown above.

REAR FACTORY FLARE REMOVAL

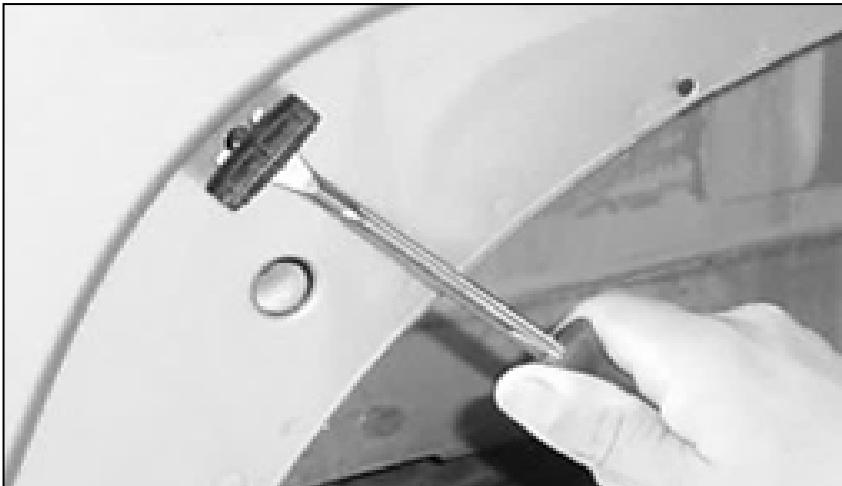



Step 3.

Using a pry tool or similar tool, remove any remaining factory mounting clips. Discard factory mounting clips.

Step 4.

Thoroughly clean the fender to remove any accumulated dirt or debris. Repeat steps 1-4 above for other side.


INSTALLING REAR INNER LINERS

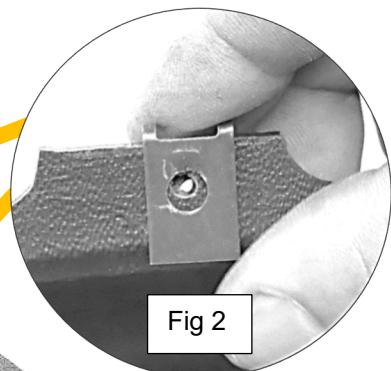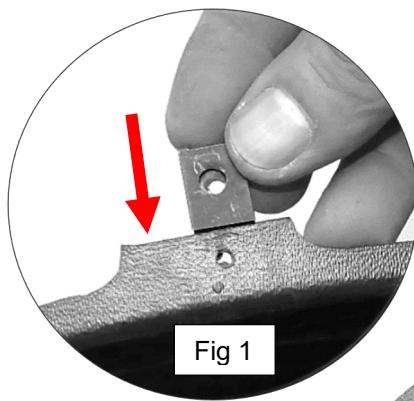

Step 1.


Working on work bench. Slide a supplied speed clip (E) onto the rear driver inner liner top mounting tabs fig 1. Line up the speed clip hole with the hole in the inner liner tabs fig 2.

INSTALLING REAR INNER LINERS continued

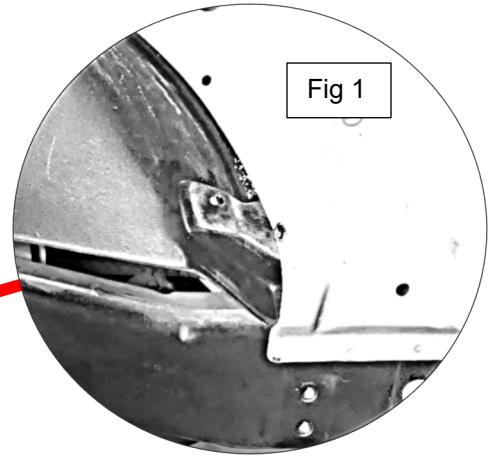

Step 2.

Place supplied rear driver inner fender (A) onto the Jeep as shown. Begin to work towards the lower rear corner of the inner fender, firmly press the rear lip behind the vehicle fender lip fig 1.

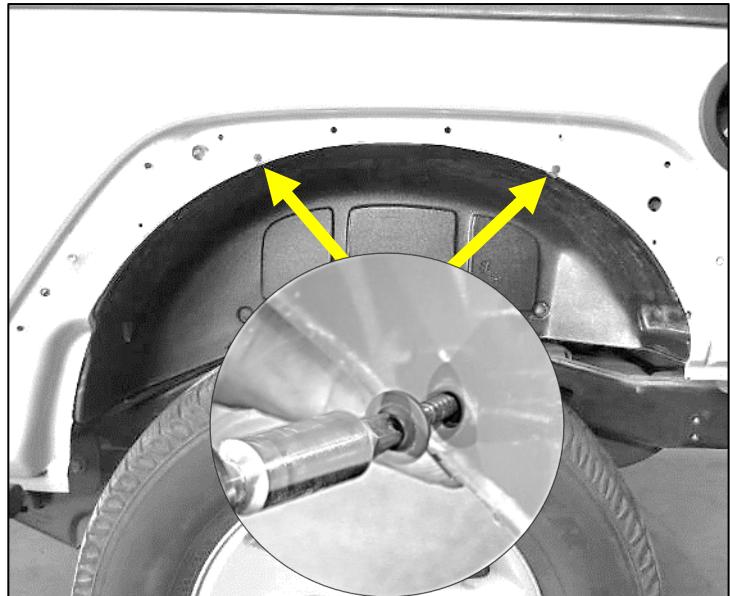


Step 3.

Making your way towards the front of the inner liner keep pressing the inner liner behind the vehicle fender lip. Line up the inner liner mounting holes and previously installed speed clips with the holes/mounting tabs in the Jeep. Hold the inner liner into position.

Step 4.

While holding the inner liner into position, using a #2 phillips head screwdriver start a supplied #8x $\frac{3}{4}$ mounting screw (D) through the hole in the vehicle fender and onto the previous installed speed clips. Repeat step for remaining phillips screw. Tighten down all hardware.

INSTALLING REAR INNER LINERS continued

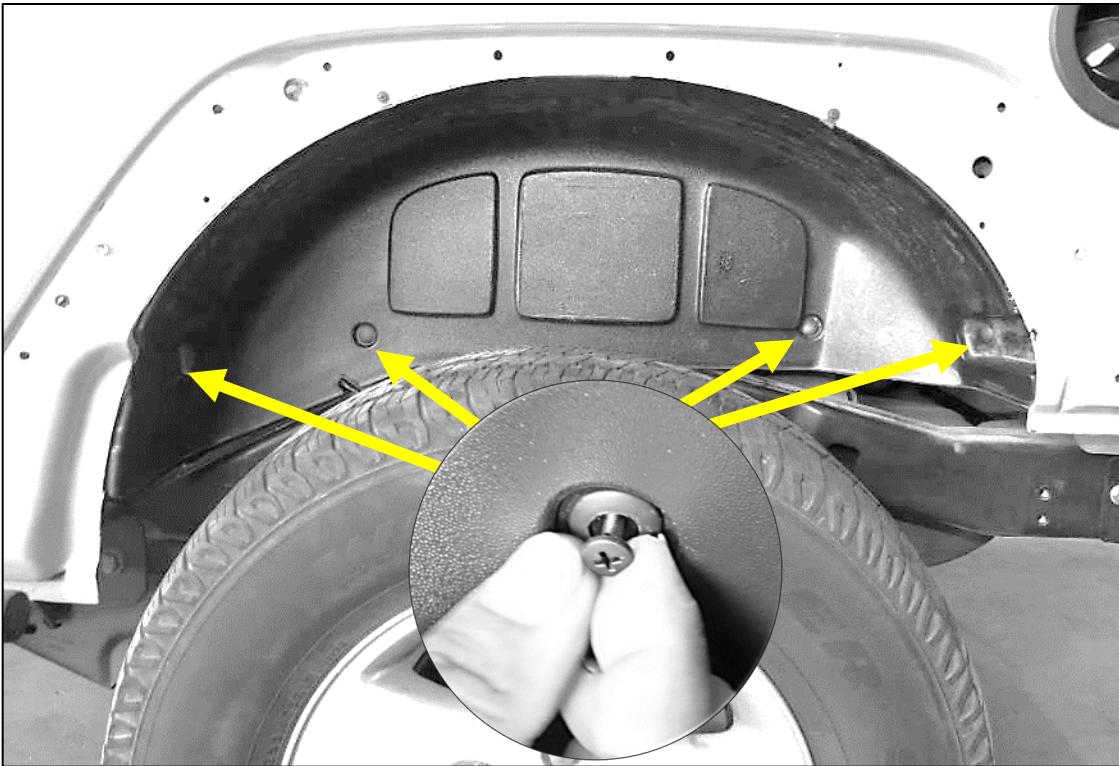

Step 5.

Working inside the wheel well install 4 supplied small push clips (C) through the hole in the inner liner and onto the Jeep mounting tabs. Repeat step 1-5 for other side rear inner liner.



This completes the installation