


the original
Shade™
 Retractable Sunshade


INSTALLATION INSTRUCTIONS

Installation kit Includes:

- Cleaning Swab (1)
- Mounting Brackets (3)

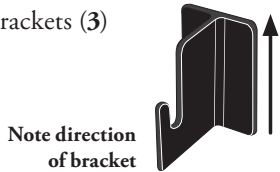

Driver Side Bracket

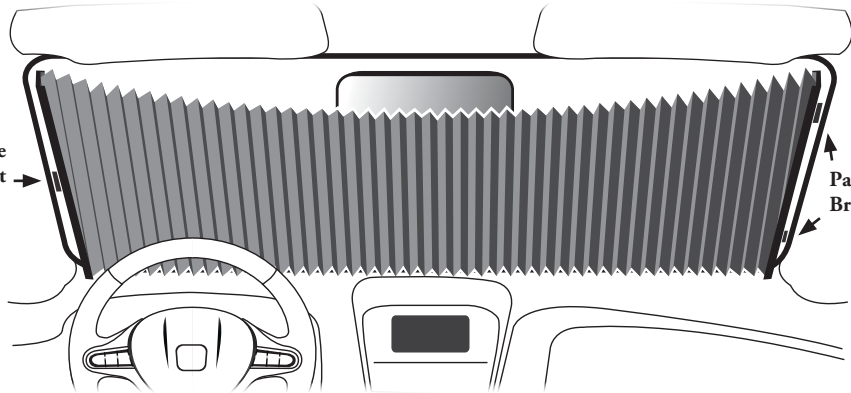

Passenger Brackets

IMPORTANT: For best adhesion: Do not apply brackets on an extremely hot windshield as the adhesive will cure too quickly. Install in shaded area if possible. Also be sure the windshield is clean before installation. Wipe dry after cleaning.

A. INSTALLING THE SHADE™ BRACKETS ON THE PASSENGER SIDE


STEP 1.

Sit in the front seat on the passenger side and attach 2 mounting brackets to the mounting pins on the back side of The Shade™. The handle is on the left side with the 2 mounting pins to the right.



STEP 2.

With the brackets in place, put The Shade™ next to the pillar post on the passenger side. Make sure to center the height between the top and bottom of the windshield. Be sure the handle is positioned so you can grab it with your right hand from the driver's side. (if not, The Shade™ needs to be flipped 180 degrees).

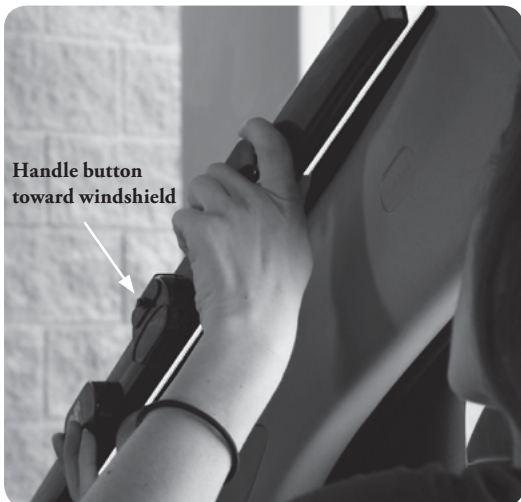

STEP 3.

Using a crayon or masking tape, have someone trace the edges of the brackets on the outside of the windshield. (**Alternate method:** From the inside, hold The Shade™ in place and trace the outline of the brackets with crayon or masking tape).



STEP 4.

Open the provided swab packet and wipe the inside of the windshield in areas where the two brackets will attach. Be careful not to erase your markings. Allow solution to dry or wipe with a tissue.



STEP 5a.

With the 2 brackets still on The Shade™, remove the backing paper from the adhesive pads on back of the brackets.


5b.

Press The Shade™ towards the windshield so the brackets will stick to the glass. Get as close as possible inside your markings from Step 3.



STEP 6.

Gently slide The Shade™ off the brackets and then press as firmly as possible on the flat parts of the brackets for 30 seconds. (You can view from the outside while applying pressure to ensure you obtain maximum contact of tape adhesive to the glass.)

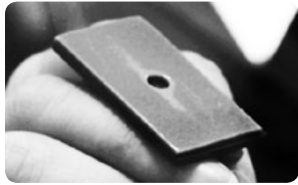

Press firmly on bracket for 30 seconds to remove air bubbles


INSTALLING THE DRIVER'S SIDE BRACKET

STEP 7.

Attach the driver side bracket, **open end up**, onto The Shade™ handle. Gently pull The Shade™ across to the driver's side as level as possible and then position it next to the pillar.



Note direction of bracket

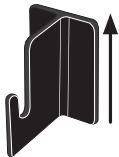

7 continued

Use a wax crayon, erasable marker, or masking tape to trace the bracket position from the outside of the windshield. (Alternate method: or mark from the inside if installing alone).



STEP 8.

Use the swab to carefully clean the windshield within the marked area. Allow solution to dry (or dry with a tissue or paper towel).



STEP 9.

Peel the paper backing from bracket and place it within the marks. Press the driver side bracket as firmly as possible into place for 30 seconds or more for maximum adhesion.



STEP 10. CHECK OPERATION

Gently pull The Shade™ towards the driver's side going around the rear view mirror. Insert in the bracket to assure a proper connection.



IMPORTANT: For best results, do not use The Shade™ for at least 24 hours so the mounting bracket forms a strong bond to the windshield.

NOTES:

Always pull The Shade™ around the mirror, never behind it. Always retract The Shade™ slowly, to avoid damaging the fabric. Never operate your vehicle with The Shade™ open across the windshield.

** If you have any questions about your installation or about operating the Shade™, please contact:

Dash Designs® Customer Service: 1(800)843-3274

Monday to Friday 9:00 AM - 5:30 PM - MST

Phoenix Metro: (480) 967-7829:

Press 3 for warranty / product information

the original
Shade™
Retractable Sunshade



see our installation video at:

WWW.THERETRactableSHADE.COM

**DASH
DESIGNS®**
CUSTOM FABRIC AUTO ACCESSORIES

© COPYRIGHT 2017 DASH DESIGNS®