

READ THIS FIRST

(this supplement must be read before starting the installation)



TOOL BOX EDITION Installation Instructions

(for most 20" to 21" over the rail tool boxes)

REMEMBER TO USE PROTECTIVE EYEWEAR

Equipment: You should find the following in the kit;

- A. One tool box header bar
- B. 1 bag C-clamps (2 clamps)
- C. One piece weather seal 10'


Installation: Note: When installing a 20" tool box measure back 20" from the front inside edge of the pickup box, with a pencil mark the top of the side rail on each side of the box. This is where your tool box should be mounted. If there is a gap between the tool box and the front of the pickup box, a strip of weather seal has been enclosed to put on the front and side of the tool box.

Note: The same instructions would apply for a 20-1/2" tool box, mount 20-1/2" back. And for 21" mount 21" back.


1. Position the tool box header bar directly against the tool box. Make sure the weather stripping side is against the tool box and the header bar seal is upward (Illustrations 2 and 3).

2. Push the front header bar firmly against the tool box. The header bar is clamped to the inside lip of the pick-up box, using the 2 C-clamps. Make sure the header bar is straight and level before tightening clamps (using 9/16" wrench). (Illustration 2 and 3)


3. When the tool box and header bar are bolted secure, place side rails as shown in illustration 2 for 20" tool box or illustration 3 for 20-1/2" and 21" tool boxes. Then refer to the ACCESS ROLL UP COVER owners manual for remainder of installation.

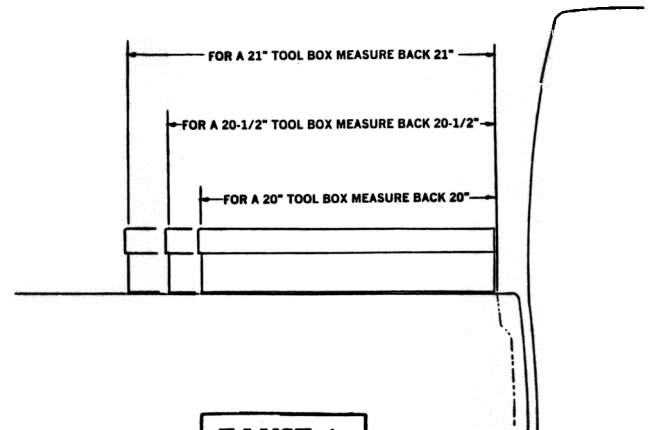

ILLUST. 1

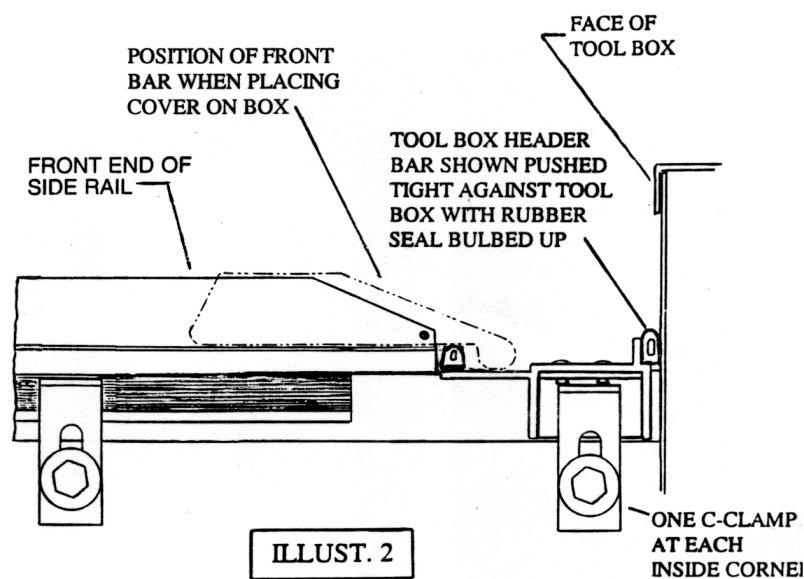

ILLUST. 2

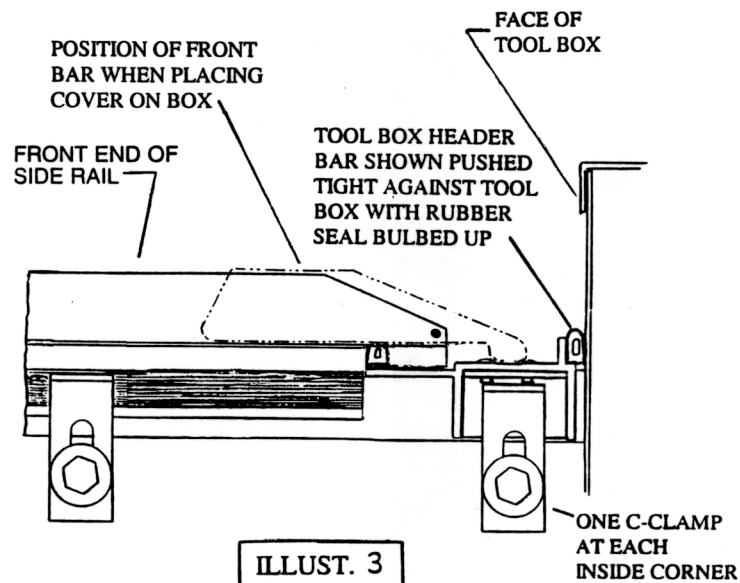

ILLUST. 3