

## 21-23 FORD BRONCO FRONTIER SERIES FRONT FENDER FLARES ATTFB01H102-BX-F



### CAUTION BEFORE INSTALLING

**Before installation** - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: (626) 369-2121

**ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.**

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:*

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover


# INSTALLATION **MANUAL**

## TOOLS REQUIRED

- 4MM HEX SOCKET
- 10MM WRENCH



## HARDWARE KIT

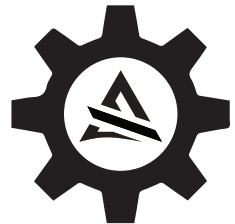

**X 1**  
SPARE PARTS HARDWARE KIT

# INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the fender flares from.

After inspection, remove your factory fender flares.



# INSTALLATION MANUAL



Align the squared mounting points of your vehicle's body with the **threaded plate**, as shown above. Then, mount the fender flare to the vehicle using the **threaded plate** along with **W09** and **W13** washers. Secure it in place by fastening the **B66** bolt using a **4mm hex socket tool**.



Attach the remaining mounting points using **W09** and **W13** washers, **N09** nuts, and **B66** bolts. Secure them in place by tightening with a **10mm wrench** and a **4mm hex socket tool**.

# INSTALLATION MANUAL



The front fender flare lights connect to your headlight harness. Install the Attica inline headlight harness adapter.

Next, connect the front fender flare light to the inline headlight harness adapter.

Once finished your Attica Frontier Series Front Fender Flares will be completely installed and ready to take to the outdoors!



IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT [TECH@ATTICA4X4.COM](mailto:TECH@ATTICA4X4.COM) OR CALL US AT  
**626-369-2121**