

Installation Guide 22-25 Honda Civic Headlights

Posted by  [arexusa](#)

On March 31, 2025

Comments Off on Installation Guide 22-25 Honda Civic Headlights

NOTE: *Some vehicle require the DRL harness installed for the headlight to function properly.*

Do NOT use dielectric or any type of weather sealing grease on connectors or sockets. Doing so will result in connection problems and will not be covered under warranty. Please click [HERE](#) for further explanation.

Table of Contents

- [INSTALLATION TOOLS](#)
- [PART I - Remove Headlights](#)
- [Remove the OEM Headlights](#)
- [PART II - Install Headlights](#)
- [Install Alpharex Headlights](#)

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

INSTALLATION TOOLS



Plastic Panel Popper



Metal Panel Popper



Phillips Screwdriver



Flat Screwdriver



Socket

Size NEEDED

10

PART I - Remove Headlights

Remove the OEM Headlights

The first step in removing your OEM headlights is to detach the front bumper. This process involves removing clips, unfastening bolts, and carefully releasing a few bumper tabs.

1.1 - To begin, open the hood to access the necessary clips for removal. There are a total of 12 clips that need to be taken out.



1.2 - After removing the initial clips, move on to the next set located in the front wheel well liners. Here, you'll need to remove three clips and two Phillips screws. Note: The number of clips may vary depending on the trim.

1.3 - Begin by removing the two philips head screws on the inner liner.





1.4 - Additionally, there is one more clip that needs to be removed.

Note: If your vehicle is equipped with mud flaps, be sure to remove them as well.



1.5 - Now, moving to the bottom of the bumper, you'll need to remove a total of two 10mm bolts, two Phillips head screws, and a series of push clips.





1.6 - Once all the hardware is removed, you can begin taking off the bumper.

1.7 - Start by carefully pulling the corners away, then use a flathead screwdriver to unclip the latches securing the bumper in place.




1.8 - Next, move to the area directly beneath the headlights and use the same technique (now using the trim removal tool) to unclip the bumper, ensuring a smooth and even removal.




1.9 - Once this is done on both sides you may proceed to remove the bumper from the front of the vehicle.



1.10 - Now, shift your focus to removing the headlights. Each headlight is secured by a total of four bolts, one clip, and one plug that needs to be disconnected.

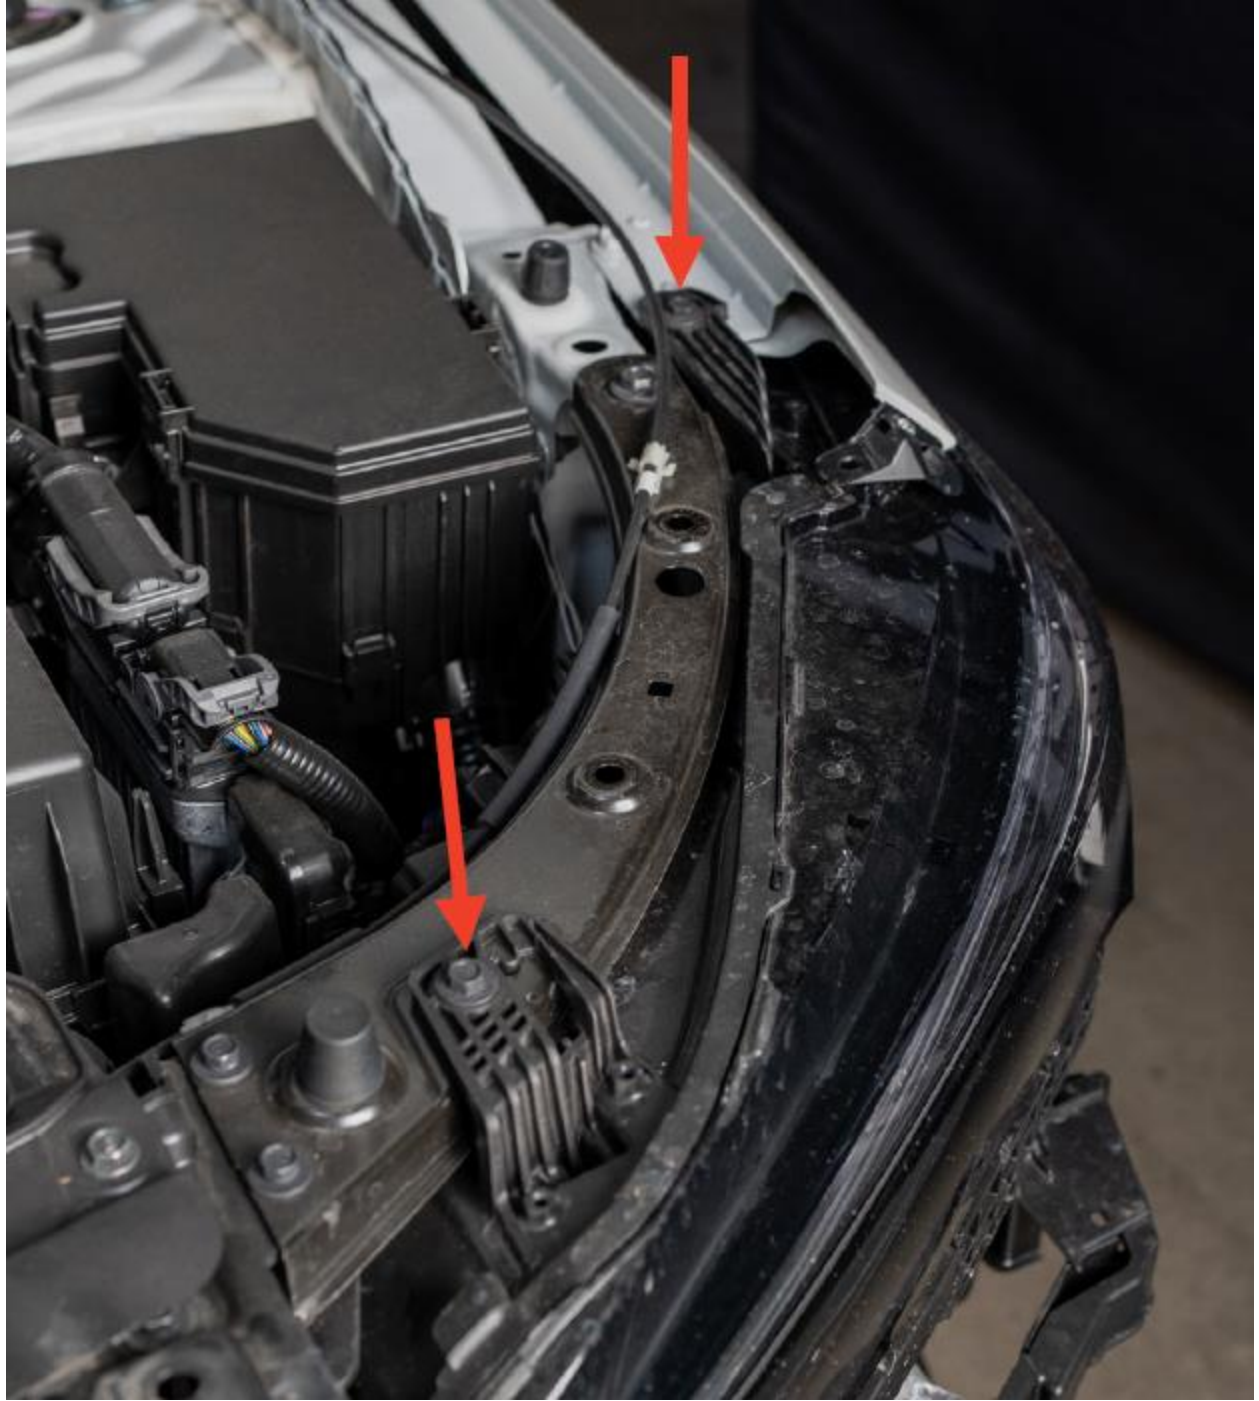

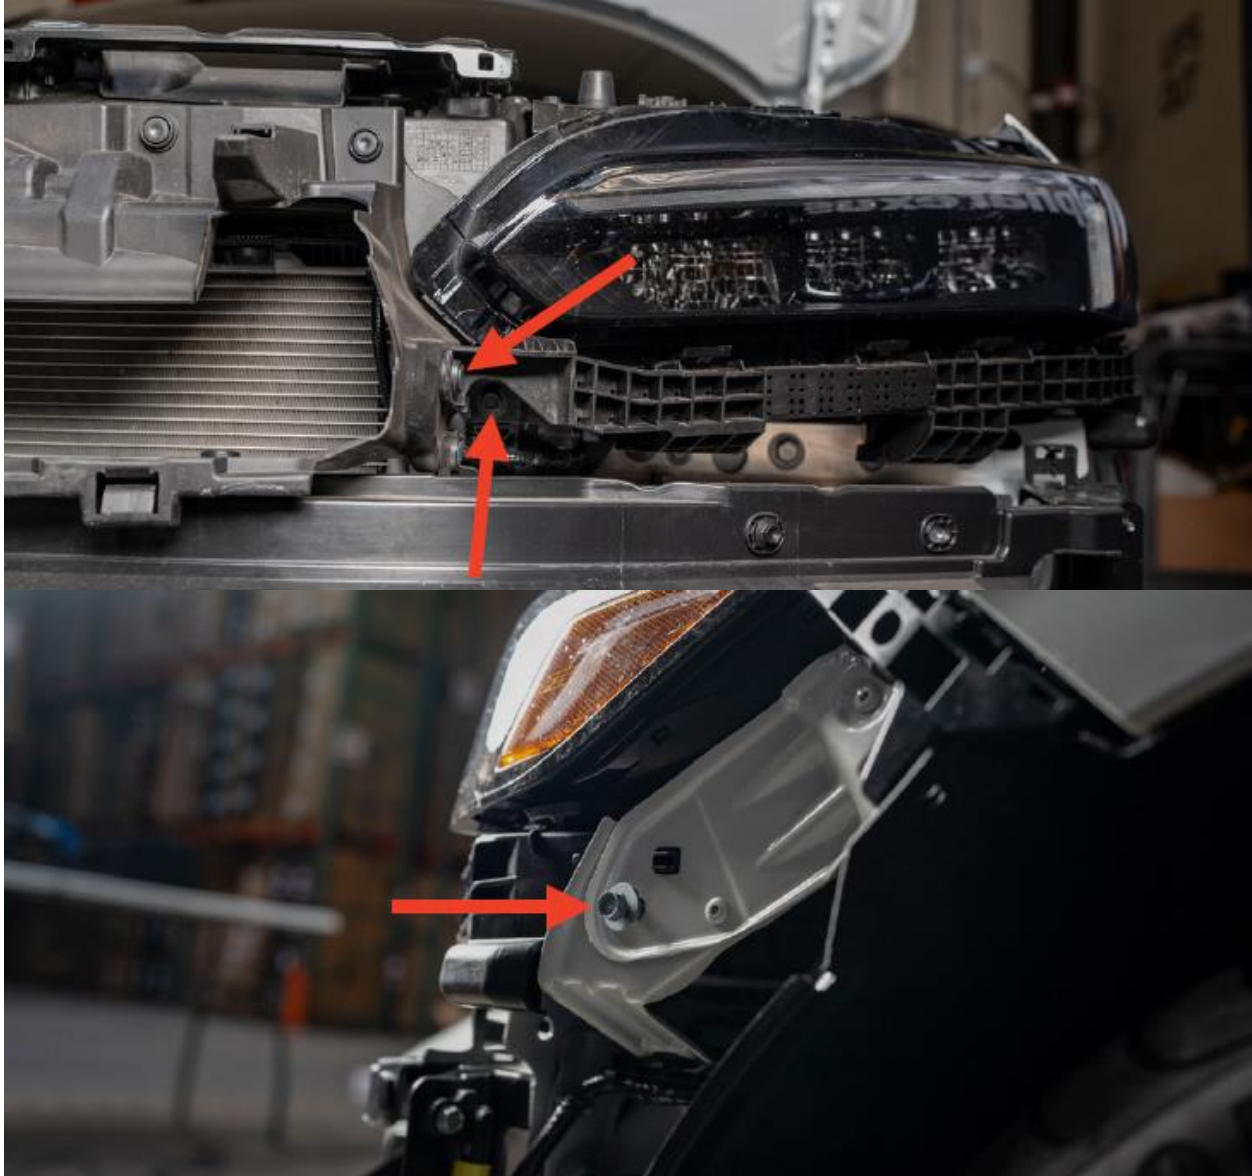


1.11 - Once all the bolts are removed, use a flathead screwdriver to lift the tabs and release the headlight from its mounting, then disconnect the plug from the vehicle.



PART II - Install Headlights

Install Alpharex Headlights

2.1 - Now that the light is removed, transfer the bracket from the OEM light to the Alpharex light by removing the two 10mm bolts.

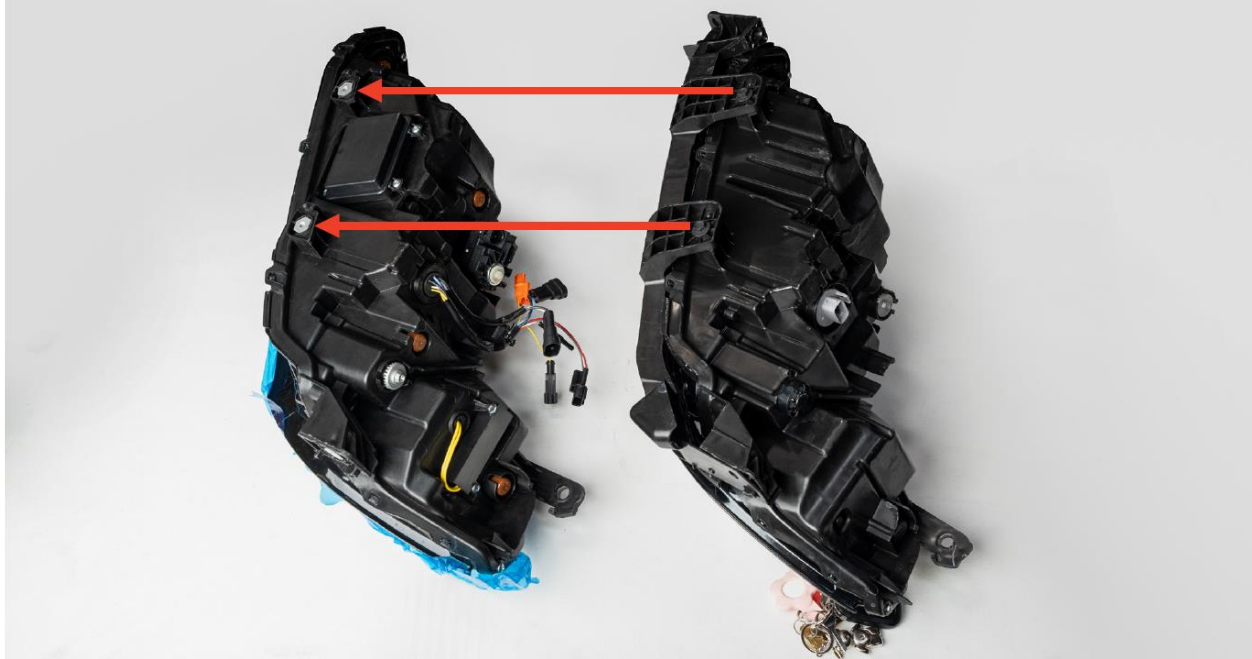

2.2 - Once the bracket is transferred, you can proceed with installing the Alpharex lights. The installation is simple—just follow the removal steps in reverse.

2.3 - Begin by connecting the single plug to the back of the light.



2.4 - After that, position the light back into place, secure it with the four 10mm bolts, and don't forget to insert the push clip as well.



2.5 - All that's left is to secure any remaining bolts and clips back onto the vehicle. Once that's done, your installation is complete!



End of installation guide