

2005-2013 Chevy Corvette LED TAILLIGHTS SKU 321168/ 321169/ 321342

Modified on: Mon, Jul 17, 2023 at 3:03 PM

2005-2013 Chevy Corvette LED TAILLIGHTS

SKU# 321168, SKU# 321169, SKU# 321342



5150 Eucalyptus Avenue Unit A
Chino, Ca. 91710
888.360.3696



**Read complete instructions
before installation!
Improper installation may
void warranty**

Description: Tail Light

Part Number: 321168-321165-321169

Application: 2005-07 Chevy Corvette / 2006-07 Chevy Corvette Z06



Tools needed: T20 torque screw



Step 2: Remove the tail light from the bumper.



Step 3: Twist off the light bulb socket.



Step 4: Pull off the tail light from the tail light socket.




Step 5: Unclip the resistor from the light and remove the plastic cover and stick on the inside tail light housing.



Step 6: Plug in the new tail light into the light bulb socket making sure the black wire lines up with the black wire on the harness.



Step 7: Connect the resistor plug into the tail light.

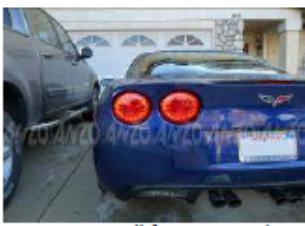

Step 8: Test all functions making sure they work properly before driving.



Side by side comparison of led vs bulbs.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

© 2008 AnzoUSA™. All rights reserved.