



INSTALLATION INSTRUCTIONS

BLACK MODULAR GLADIATOR ROLL BAR FOR NISSAN FRONTIER

2019-2020 FLAT BASE WITH LED BRAKE LIGHT

PART #GLRB-05B

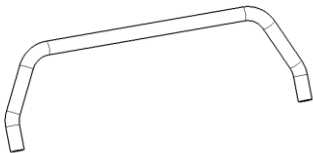
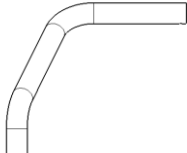
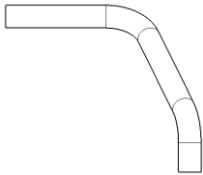


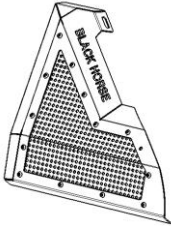
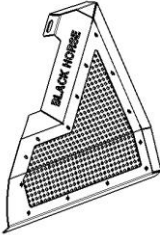
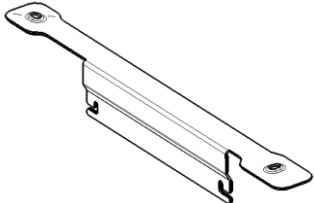
Before Installation

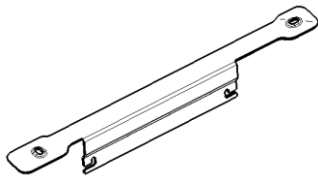
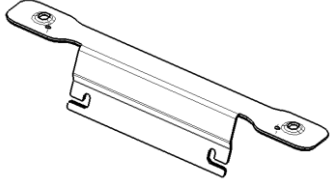



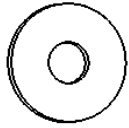


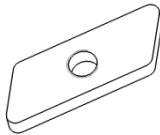
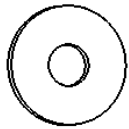


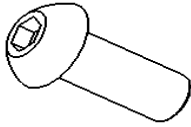

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.






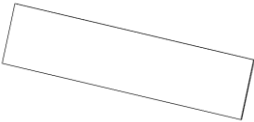


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

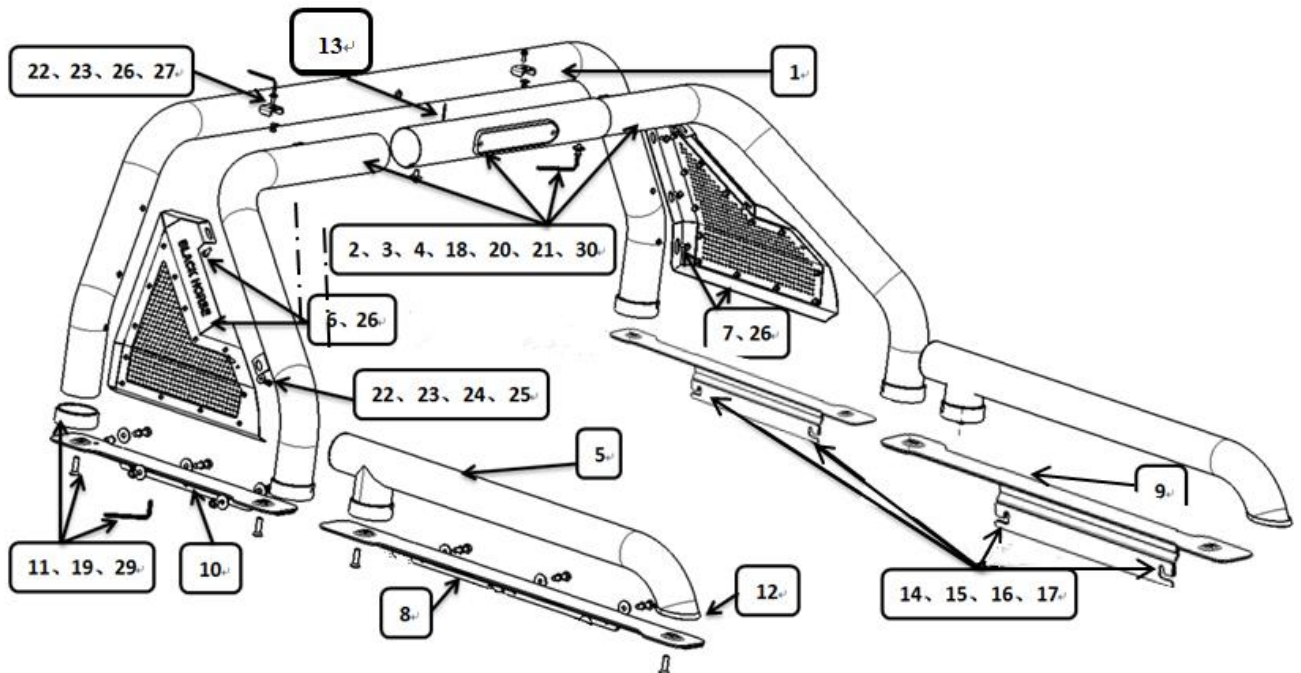
Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 MAIN TUBE	②	1	 SIDE TUBE (D)
③	1	 SIDE TUBE (P)	④	1	 SIDE TUBE (MIDDLE)
⑤	2	 SIDE RAIL	⑥	1	 SIDE PLATE(D)
⑦	1	 SIDE PLATE(P)	⑧	1	 REAR MOUNTING BASE (D)

<p>⑨</p> <p>1</p>	 <p>REAR MOUNTING BASE (P)</p>	<p>⑩</p> <p>2</p>	 <p>FRONT MOUNTING BASE (D&P)</p>
<p>⑪</p> <p>6</p>	 <p>RUBBER COVER 1</p>	<p>⑫</p> <p>2</p>	 <p>RUBBER COVER 2</p>
<p>⑬</p> <p>1</p>	 <p>ALLEN WERNCH S=2.5</p>	<p>⑭</p> <p>8</p>	 <p>FLAT WASHER D10</p>
<p>⑮</p> <p>8</p>	 <p>HEXAGON BOLT M10*25</p>	<p>⑯</p> <p>8</p>	 <p>SPRING WASHER D10</p>
<p>⑰</p> <p>8</p>	 <p>Plate Nut M10</p>	<p>⑱</p> <p>2</p>	 <p>FLAT WASHER D8</p>
<p>⑲</p> <p>8</p>	 <p>HEX SOCKET COUNTERSUNK HEAD SCREW M10_35</p>	<p>⑳</p> <p>2</p>	 <p>SPRING WASHER D8</p>
<p>㉑</p> <p>2</p>	 <p>SOCKET HEAD CAP SCREW M8_20</p>	<p>㉒</p> <p>4</p>	 <p>HEX NUT M6</p>

<p>②③</p> <p>4</p>	 <p>FLAT WASHER D6</p>	<p>②④</p> <p>2</p>	 <p>SOCKET HEAD CAP SCREW M6_20</p>
<p>②⑤</p> <p>2</p>	 <p>SPRING WASHER D6</p>	<p>②⑥</p> <p>10</p>	 <p>BUTTON HEAD BOLT ASSEMBLY M6_20</p>
<p>②⑦</p> <p>1</p>	 <p>ALLEN WERNCH S=4</p>	<p>②⑧</p> <p>1</p>	 <p>RED PLASTIC PLATE</p>
<p>②⑨</p> <p>1</p>	 <p>ALLEN WERNCH S=6</p>	<p>③⑩</p> <p>1</p>	 <p>ALLEN WERNCH S=5</p>

Installation Fig.



Step 1: Verify that all parts are present according to the manual.

Step 2: Connect side tube (D&P) and central side tube with accessories ② ③ ④ ⑱ ⑳ ㉑ ㉒ ㉓, adjust to the suitable position, and then lock tighten.

Step 3: Connect the main tube and side tube with accessories ㉔ ㉕ ㉖ ㉗, notice: don't lock tighten.

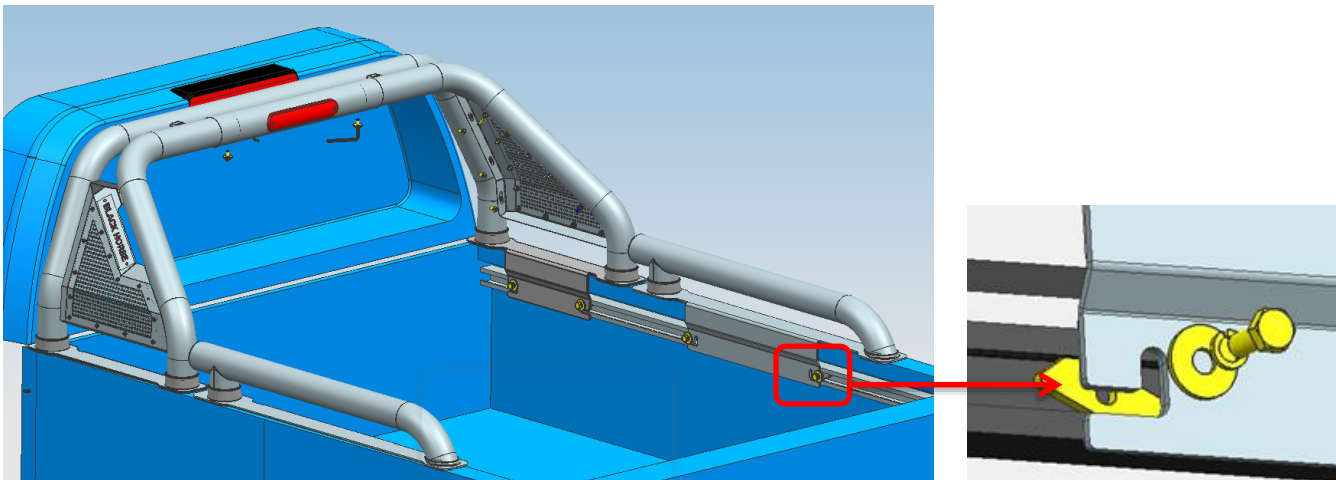
Step 4: Install the side decorated plate with accessories ⑥ ㉘ ㉙ ㉚ ㉛ ㉜, notice: don't lock tighten.

Step 5: Adjust all the parts to suitable position, install front mounting base (D&P) with accessories ① ⑱ ㉝, then fully tighten all accessories.

Step 6: Place the roll bar on truck bed and adjust suitable position, Slide ㉞ Plate Nut M10 into the trunk chute. Use standard parts ⑭ ⑮ ⑯ ㉟ to fix roll bar on the trunk.

Step 7: To firmly fix the roll bar, install the red plastic plate on the decoration part.

Step 8: Complete installation, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.