



GO INDUSTRIES, INC

Manufacturer of Premium Products Since 1978

420 N. Grove, Richardson, TX 75081
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
Web site: www.goindustries.com
E-mail: gosupport@goinustries.com

Dually Mud Flap Set

Installation Instructions

725

GMC / Chevy Dually '73 - '87

Contents:

725B Drivers side


725B Passenger side

Pair of mud flaps

1 mud flap kit

1 70730 kit

1. Takeout of box the 2 metal brackets. The bracket has a short side with 2 holes, place bracket in fender well. Locate the 2 bolts toward the inside of the fender well. Brackets have a driver and passenger side. The long end will be pointed toward the outside of the truck. Remove the 2 bolts and install the bracket.
2. Place mud flap on to bracket align the 3 holes and use the mud flap to attach flap to bracket.

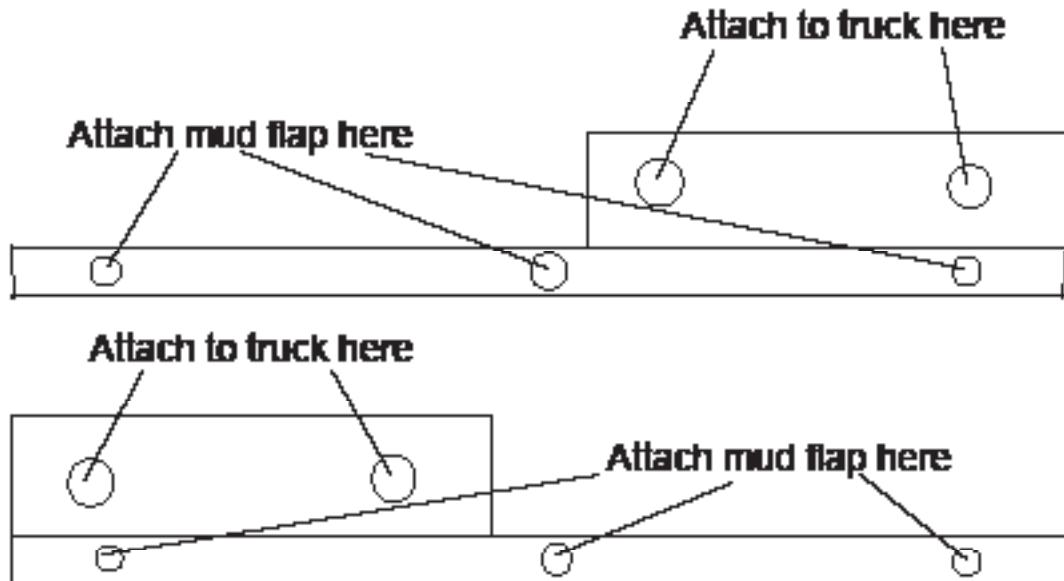

725 Brackets