

## CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater<sup>TM</sup> Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your vehicle with  $2^{nd}$  row bench & bucket seating. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner*. *However, do not remove the factory-installed carpeting.* 

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.


## INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPEDITION MAX & LINCOLN NAVIGATOR L THIRD SEAT FLOOR LINER



**MODELS WITH 2<sup>ND</sup> ROW BUCKETS AND WITHOUT 2<sup>ND</sup> ROW ROW CONSOLE:** TO INSTALL YOUR LINER, FLIP FORWARD/SLIDE THE 2<sup>ND</sup> ROW SEATS TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR PANS. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2<sup>ND</sup> ROW SEATS. NOTE THAT THE TONGUE OF THE LINER EXTENDS BETWEEN THE 2<sup>ND</sup> ROW BUCKET SEATS. THE FRONT EDGE OF THE 3<sup>RD</sup> SEAT LINER TUCKS UNDER THE REAR WALL OF THE 2<sup>ND</sup> SEAT LINER.

FOR MODELS WITH 2<sup>ND</sup> ROW BUCKETS/AND 2<sup>ND</sup> ROW CONSOLE OR MODELS WITH 2<sup>ND</sup> ROW BENCH SEATS: PLEASE SEE THE INSTRUCTIONS ON THE BACK SIDE OF THIS PAGE.

View the Husky Liner Lifetime Warranty at www.huskyliners.com/lifetime-warranty

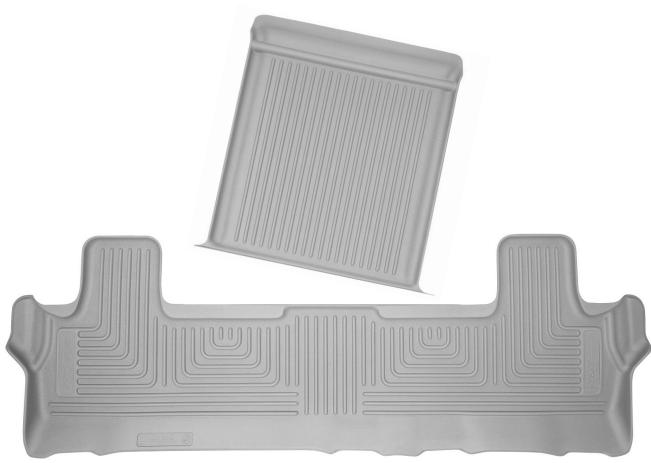

MODELS WITH 2<sup>ND</sup> ROW BUCKETS THAT INCLUDE A CONSOLE BETWEEN THE BUCKET SEAT AND AND MODELS WITH 2<sup>ND</sup> ROW BENCH SEATS: PRIOR TO INSTALLATION OF YOUR LINER YOU WILL NEED TO TRIM AWAY THE TONGUE SECTION OF THE LINER. A MOLDED IN TRIM GROOVE GUIDES THE TRIM SEE (IMAGE BELOW). WITH THE LINER TRIMMED, FLIP FORWARD/SLIDE THE 2<sup>ND</sup> ROW SEATS TO EXPOSE THE 3<sup>RD</sup> ROW FLOOR. NEXT, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. LASTLY, REPOSITION THE 2<sup>ND</sup> ROW SEATS.

