

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Camry. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA CAMRY FRONT WeatherBeater® FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT FLOOR LINERS, MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. INSTALL THE LINERS IN YOUR VEHICLE MAKING SURE THE FACTORY TWIST-LOCK MAT RETAINERS ARE FASTENED TO YOUR FLOOR LINERS. ONCE YOU HAVE INSTALLED THE LINERS, REPOSITION YOUR FRONT SEATS AS NEEDED.

TO ACCESS THE FUEL DOOR RELEASE LEVER IN YOUR VEHICLE WITH YOUR LINER IN PLACE, YOU CAN SIMPLY LIFT UP THE LINER OR YOU CAN TRIM AWAY THE MATERIAL LOCATED DIRECTLY ABOVE THE FUEL DOOR. THE AREA TO BE REMOVED IS LOWERED TO GUIDE TRIMMING.

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Toyota Camry. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA CAMRY REAR SEAT WeatherBeater® FLOOR LINERS

FRONT OF VEHICLE

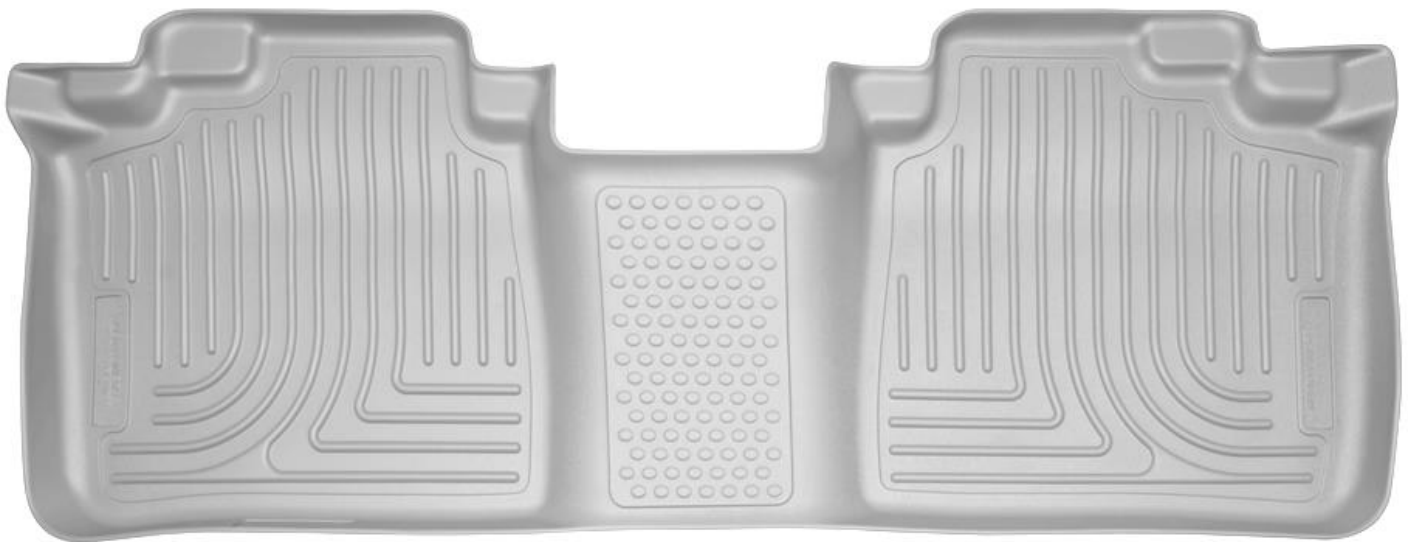

TO EASE INSTALLATION OF YOUR CAMRY SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE ANGLING IT SO THAT THE BACK EDGE OF THE LINER IS SEATED INTO PLACE FIRST, THEN LOWER FRONT PORTION. ONCE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.