


Sharp Boards, LLC
 840 NW 24th Court
 Ocala, Florida 34475
 1-877-864-0644

SBR335
 2005 +
 Dodge Dakota
 Crew Cab



Running Board Brackets	8
Z Hanger Brackets	8

1. Brackets should be placed from the front of the vehicle at 16" 35" 47" & 63 1/2"
 (See Picture A)
2. Mount longer brackets on pinch weld with two tek screws.
3. Mount running board hanger brackets with 5/16" bolt and nut on the front and rear
4. Mount center running board bracket very loosely with 5/16" bolt and nut
5. Adjust front and rear brackets for desired height and tighten bolts.
6. Install boards and tighten on front and rear brackets. Tighten boards on center brackets and tighten hanger brackets to running board brackets.
7. Put a tek screw in the top of each running board bracket.

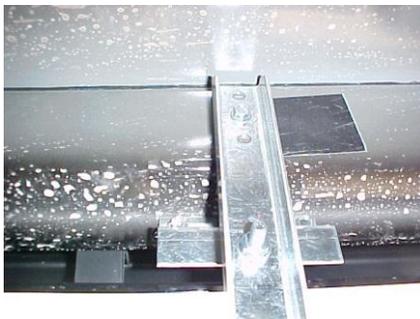

Front Bracket



Center Bracket



Rear Bracket

Picture A

