

(6",5",4")RUNNING BOARD
FOR 2000-2018 Chevy Tahoe (Excl. 04-07 "Z71" and any model with lower body cladding)/
2000-2018 GMC Yukon 1500 (Excl. Z71 model)/2001-2017 Cadillac Escalade SUV (Excl. ESV/EXT)
Rev:20181101

Installation Instructions for IB03DAC1 by APS Auto Parts Specialist Inc.

Application: FOR 2000-2018 Chevy Tahoe (Excl. 04-07 "Z71" and any model with lower body cladding)/
2000-2018 GMC Yukon 1500 (Excl. Z71 model)/
2001-2017 Cadillac Escalade SUV (Excl. ESV/EXT)

Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#01	2	Driver/Passenger Sidebar	#07	6	M12X120mm Hex Head Bolts
#02	1	Driver Front Mounting Bracket (DFM)	#08	6	M12 Flat Washer
#03	1	Passenger Front Mounting Bracket (PFM)	#09	6	M12 Lock Washer
#04	1	Passenger Rear Mounting Bracket (PRM)	#10	12	M6 X20mm Square Head Bolts
#05	1	Driver Rear Mounting Bracket (DRM)	#11	12	M6 Flat Washers
#06	2	Driver / Passenger Center Mounting Bracket (DCM/PCM)	#12	12	M6 Nylon Lock Nut



INSTALLATION INSTRUCTION:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

1. Start the installation under the Driver side of the vehicle. Remove the front and rear body mount hex bolts. Do not remove the rubber bushings. See **Fig 1**.
2. Hang the driver side front center and rear Mounting Brackets from the body mounts using the factory hex bolts. **NOTE:** On some model years, the factory bolt and flat washer cannot be reinstalled due to Bracket interference. Replace the factory hex bolts and washers with the included 12mm x 120mm Hex Bolts, 12mm Lock Washers and 12mm Flat Washers. Do not tighten hardware at this time (**Figure 2**).
3. Select the step bar. Slip (6) 6mm Square Head Bolts into each bottom channel (**Figure 3**).
4. Carefully position the Running Board onto the (3) Mounting Brackets. **IMPORTANT:** Do not slide the Running Board on the Brackets or damage to the finish may result. Attach the Running Board to the Mounting Brackets with (6) M6 Square Head Bolts, (6) M6 flat washers and (6) M6 nylon lock nuts, (**Figure 4**). Do not tighten hardware.
5. Level and adjust the Sidebar and tighten all hardware. **NOTE: Torque all M6 nylon lock nuts to 7 lb-ft.**
6. Repeat steps for passenger side.
7. Do periodic inspections to the installation to make sure all hardware is secure and tighten.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For black finishes: Mild soap may be used to clean the Running Board.

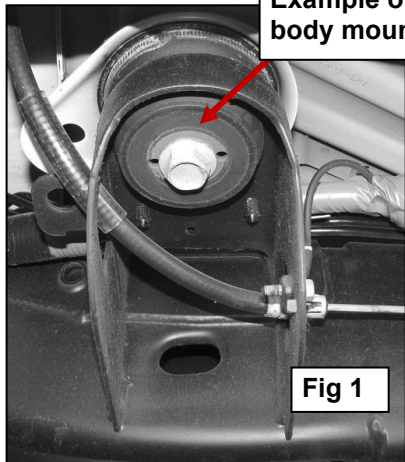

Example of GM factory body mount bolt

Fig 1



Fig 3 Slip M6 Square Head Bolts into channel

