

(6",5",4")RUNNING BOARD
For 2000-2018 Chevy Suburban 1500 (Excl. Z71 & with cladding and tube steps)/
2000-2018 GMC Yukon XL 1500 (Excl. Z71 & Denali with body cladding)/2002-2013 Chevy Avalanche 1500 with body cladding
Rev:20181101

Installation Instructions for IB03DJB2 by APS Auto Parts Specialist Inc.

Application: For 2000-2018 Chevy Suburban 1500 (Excl. Z71 & with cladding and tube steps)/
2000-2018 GMC Yukon XL 1500 (Excl. Z71 & Denali with body cladding)/
2002-2013 Chevy Avalanche 1500 with body cladding


Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#1	2	Running Board(use for left or right)	#6	1	Driver/Left Rear Mounting Bracket (DRM)
#2	1	Driver/Left Front Mounting Bracket (DFM)	#7	1	Passenger/Right Rear Mounting Bracket (PRM)
#3	1	Passenger/Right Front Mounting Bracket (PFM)	#8	12	M6 T-Bolts
#4	1	Driver/Left Center Mounting Bracket (DCM)	#9	12	M6 Flat Washers
#5	1	Passenger/Right Center Mounting Bracket (PCM)	#10	12	M6 Nylon Lock Nuts

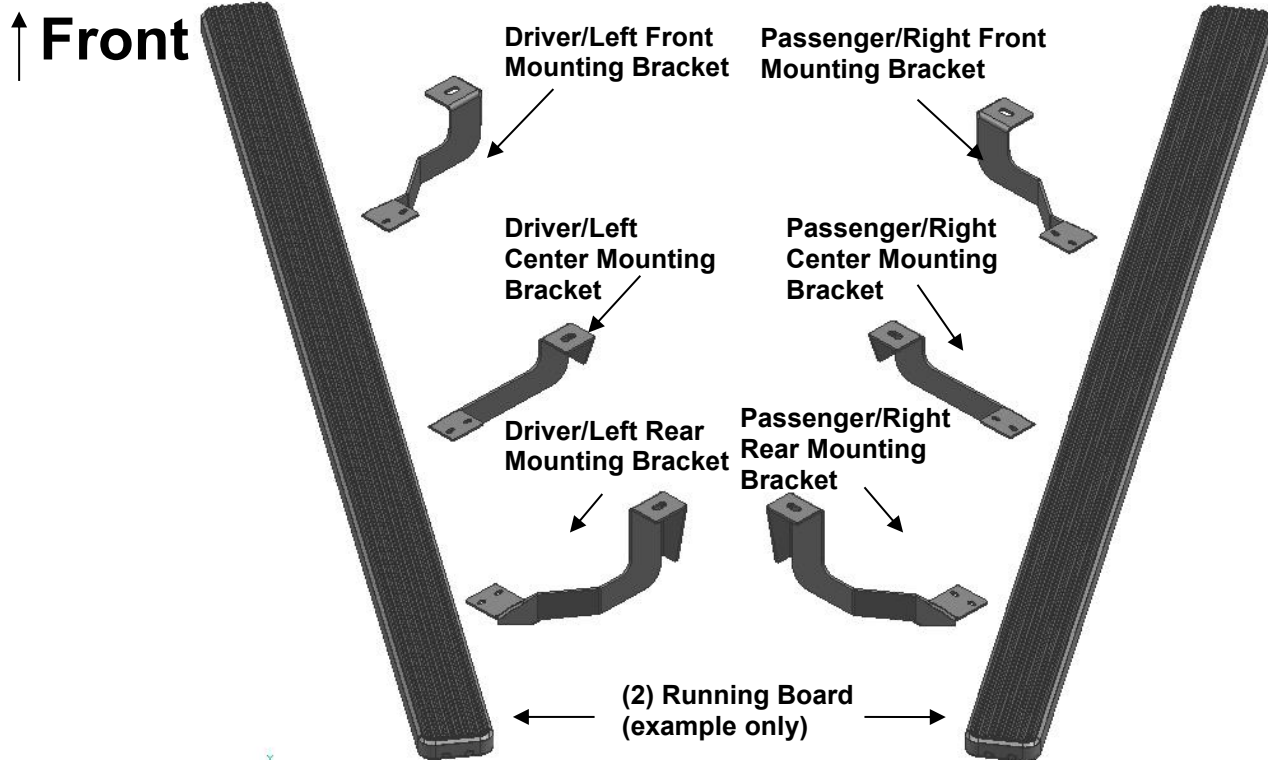**PROCEDURE:**



1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. ON MODELS WITH DEF TANK, SELECT A FLAT, LEVEL AREA FOR INSTALLATION.
2. Start the installation under the passenger side of the vehicle. Remove the front body mount hex bolt, (**Figures 1 & 2**). Do not remove the rubber bushings.
3. Hang the passenger side front Mounting Bracket from the body mount using the long factory hex bolt, (**Figures 1 & 2**). Do not fully tighten hex bolt at this time.
4. Repeat **Steps 1 & 2** for passenger side center and rear Bracket installation, (**Figures 1 & 2**). Adjust the Brackets so that they cannot come in contact with the factory steel body mount welded to the frame.
5. Select the Running Board. Slip (12) 6mm T-Bolts into each bottom channel (**Figure 3**). Carefully position the Running Board onto the (3) Mounting Brackets. **IMPORTANT:** Do not slide the Running Board on the Brackets or damage to the finish may result. Attach the Running Board to the Mounting Brackets with (2) M6 T-bolts,(2)M6 flat washers and (2)M6 Nylon lock nuts, (**Figure 4**). Do not tighten hardware.
6. Level and adjust the Running Board and tighten all hardware. **NOTE: Torque all M6 nylon lock nuts to 7 lb-ft.** Make sure that there is clearance between the Brackets and the factory steel body mount before fully tightening hardware.
7. Repeat **Steps 2—6** for Running Board installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For Black Finishes: Mild soap may be used to clean the Running Board.

Passenger Side Installation Pictured

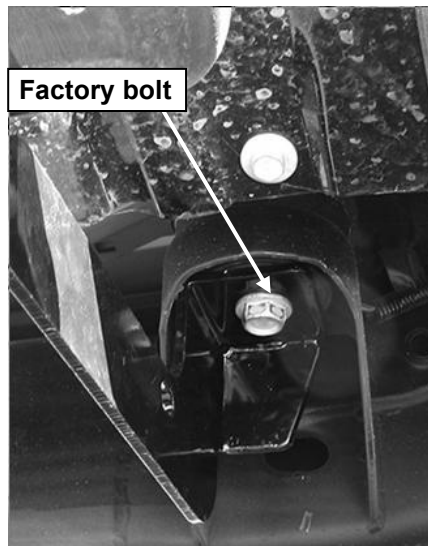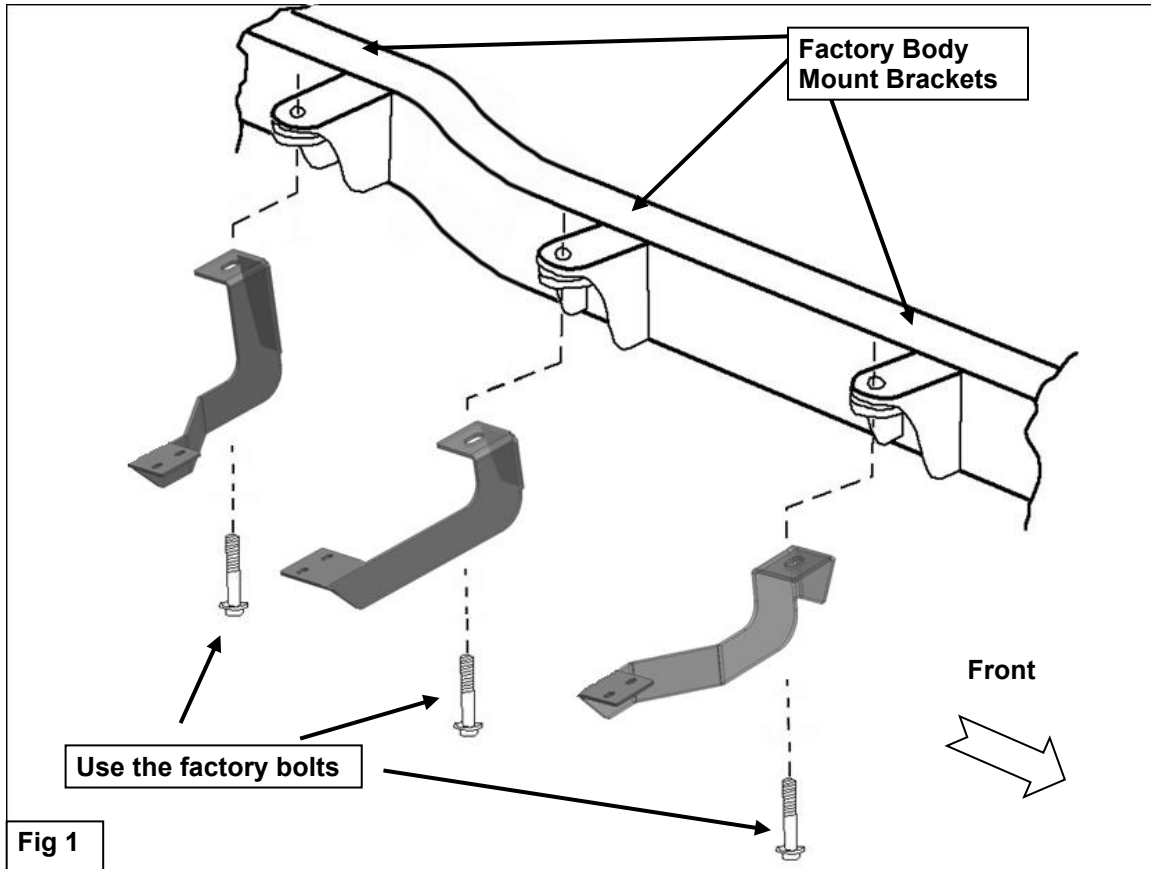


(Fig 2) Bracket installation pictured(example only)

(6",5",4")RUNNING BOARD
For 2000-2018 Chevy Suburban 1500 (Excl. Z71 & with cladding and tube steps)/
2000-2018 GMC Yukon XL 1500 (Excl. Z71 & Denali with body cladding)/2002-2013 Chevy Avalanche 1500 with body cladding
Rev:20181101



(Fig 3) Slip 6mm T-bolts into the bottom channel

**(2)M6T-bolts
(2)M6 Flat Washers
(2)M6 Nylon Lock nuts**

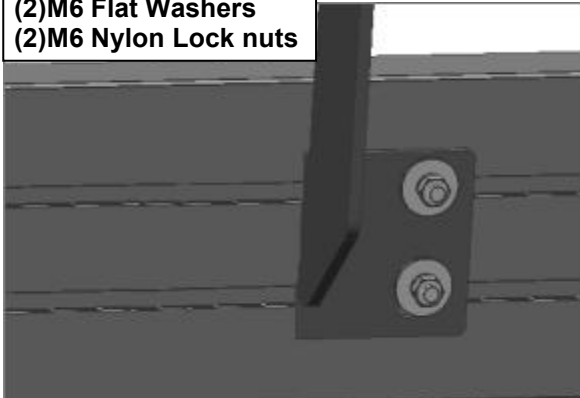

(Fig 4) Passenger/right bracket installed



Complete Installation