

Installation Instruction

Part#: IB03DJB4A

REV: 20160507

Application: For 92-94 Chevy Blazer 2 Dr (Full Size-Excl Zr2) / 88-98 Chevy Chevy / Gmc C / KReg Cab (Incl Z71) / 95-99 Chevy Tahoe 2Dr / 92-99 Gmc Yukon 2 Dr

| Item | Part Name | QTY | Item | Part Name | QTY |
|------|--|-----|------|------------------------------|-----|
| 1 | Driver/Left Sidebar | 1 | 8 | 12mmx1.75mm x 50mm Hex Bolts | 4 |
| 2 | Passenger/Right Sidebar | 1 | 9 | 12mm Flat Washers | 8 |
| 3 | Front Support Bracket, driver side (LF) | 1 | 10 | 12mm Lock Washers | 8 |
| 4 | Front Support Bracket, passenger side (RF) | 1 | 11 | 8mmx1.25mm x 30mm Hex Bolts | 16 |
| 5 | Rear Support Bracket, driver side (LR) | 1 | 12 | 8mm Lock Washers | 16 |
| 6 | Rear Support Bracket, passenger side (RR) | 1 | 13 | 8mm Flat Washers | 16 |
| 7 | 12mmx1.75mm x 120mm Hex Bolts | 4 | | | |



Bracket (LF)



Bracket (RF)



Bracket (LR)



Bracket (RR)

| Step | Installation Instruction | |
|------|--|--|
| 1 | <u>CHECK PART LIST AND MAKE SURE ALL COMPONENTE ARE PRESENT. READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DRILLING REQUIRED</u> | |
| 2 | <p>Identify the location on vehicle of the brackets & hardware. Secure the brackets and sealing washers to the side bar as shown in fig #1 .When installing side bar on pickup truck you must use the two lower mounting holes on bracket rear support bracket. Do not fully tighten hardware at this time.</p> | |
| 3 | <p>Locate two 12mm hex bolts, two 12mm flat washers and two 12mm lock washers. Remove the front and rear cab mount bolts located under the cab. Place the side bar under the vehicle and position each support bracket under the cab mounts. Secure the support brackets to the bottom of the cab mounts as shown in fig #2&3.Fully tighten all hardware at this time. Torque the 12mm x120mm bolt to 50ft.lbs, and the 12mm x50mm to 30ft lbs. Photos are for reference only, actual brackets & bars may be a little different.</p> | |


The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Installation Instruction

Part#: IB03DJB4A

REV: 20160507

Application: For 92-94 Chevy Blazer 2 Dr (Full Size-Excl Zr2) / 88-98 Chevy Chevy / Gmc C / KReg Cab (Incl Z71) / 95-99 Chevy Tahoe 2Dr / 92-99 Gmc Yukon 2 Dr

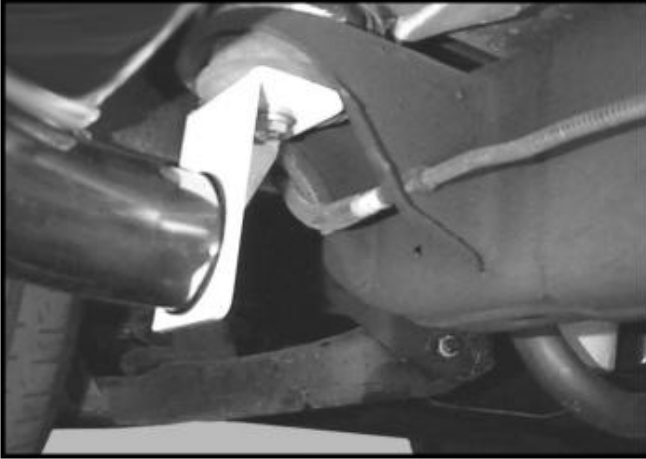

4 Repeat steps one through three on opposite side of vehicle.

5 Be sure to use all hardware supplied and tighten all bolts.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!