

iRunning Board Installation Instruction


Rev. 20180501

Part#: IB03RIJ7

Application: For 2008-2017 Buick Enclave / 2007-2010 Saturn Outlook / 2007-2015 GMC Acadia (Excl. Denali) / 2009-2017 Chevy Traverse

PARTS LIST:

Item	QTY	Description	Item	QTY	Description
#01 #02	2	STEP BOARD, PASSENGER (1) AND DRIVER (2)(SOLD SEPARATELY)	#12	6	M12 Hex Nuts
#03	1	Front Bracket Driver side (DFM)	#13	2	M10X30mm Hex Bolts
#04	1	Front Bracket Passenger side (PFM)	#14	2	M10 Flat Washers
#05	1	Rear Bracket Driver side (DRM)	#15	2	M10 Lock Washers
#06	1	Rear Bracket Passenger side (PRM)	#16	2	M10 Hex Nuts
#07	4	M12x50 Bolt Plates	#17	8	M6 Square Head Bolts
#08	2	M12x40 Bolt Plates	#18	8	M6 Flat Washers
#09	2	M10 Bridge Weld Nuts	#19	8	M6 Nylon Lock Nuts
#10	6	M12 Flat Washers	#20	2	Plastic Washer
#11	6	M12 Lock Washers			

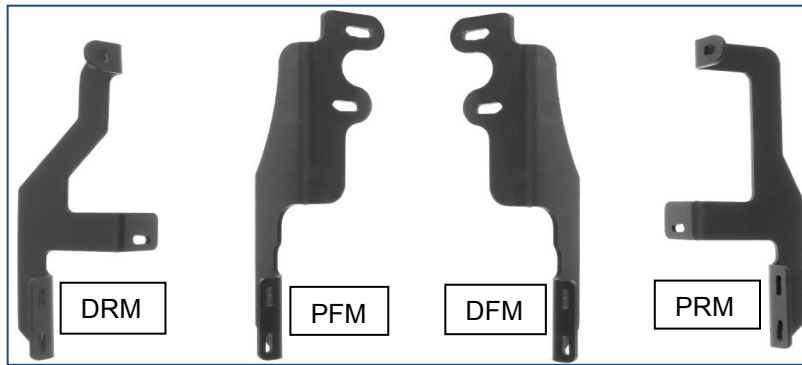

INSTALLATION INSTRUCTION:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

1. Remove contents from box and check for damage. Verify all parts are present. Read and understand instructions before beginning. **NOTE:** We do not recommend using closure strip for this application.
2. Determine passenger and driver brackets.
3. Attach front driver side bracket using two M12 bolt plates, M12 flat washers, M12 lock washers, and M12 hex nuts as shown. **SEE FIGURE 1**
4. Thread M10 hex head bolt through bridge weld nut, insert into hole, and use plastic washer to hold in place. **SEE FIGURE 2**
5. Insert M12 bolt plate into hole. **SEE FIGURE 2**
6. Attach rear driver side bracket to the previously inserted bolt plates. **SEE FIGURE 2**
7. Insert square head bolts as shown (2 per slot, 4 per Step board/Running board). **SEE FIGURE 4**
8. Attach Step board to brackets as shown. (**SEE FIGURE 5**). Make sure step board and brackets are properly aligned and tighten fasteners.
9. Repeat Installation for passenger side. Make sure that the front passenger bracket does not interfere with the metal fuel line. **SEE FIGURE 3.**
10. **INSTALLATION IS COMPLETE, SEE FIGURE 6.**

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For Polished Finishes: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

For black finishes: Mild soap may be used to clean the Running Board.

iRunning Board Installation Instruction

Rev. 20180501

Part#: IB03RIJ7

Application: For 2008-2017 Buick Enclave / 2007-2010 Saturn Outlook / 2007-2015 GMC Acadia (Excl. Denali) / 2009-2017 Chevy Traverse

