


**PARTS LIST:**

Item	QTY	Description	Item	QTY	Description
#01	1	Driver/Left Sidebar	#08	1	Passenger Rear Mounting Bracket (PRM)
#02	1	Passenger/Right Sidebar	#09	12	M8-1.25mm x 30mm Hex Bolt
#03	1	Driver Front Mounting Bracket (DFM)	#10	12	M8 Flat Washer
#04	1	Passenger Front Mounting Bracket (PFM)	#11	12	M8 Lock Washer
#05	1	Driver center Mounting Bracket (DCM)	#12	12	M6 Square Hex Bolt
#06	1	Passenger center Mounting Bracket (PCM)	#13	12	M6 Flat Washers
#07	1	Drive Rear Mounting Bracket (DRM)	#14	12	M6 Nylon Lock Nuts

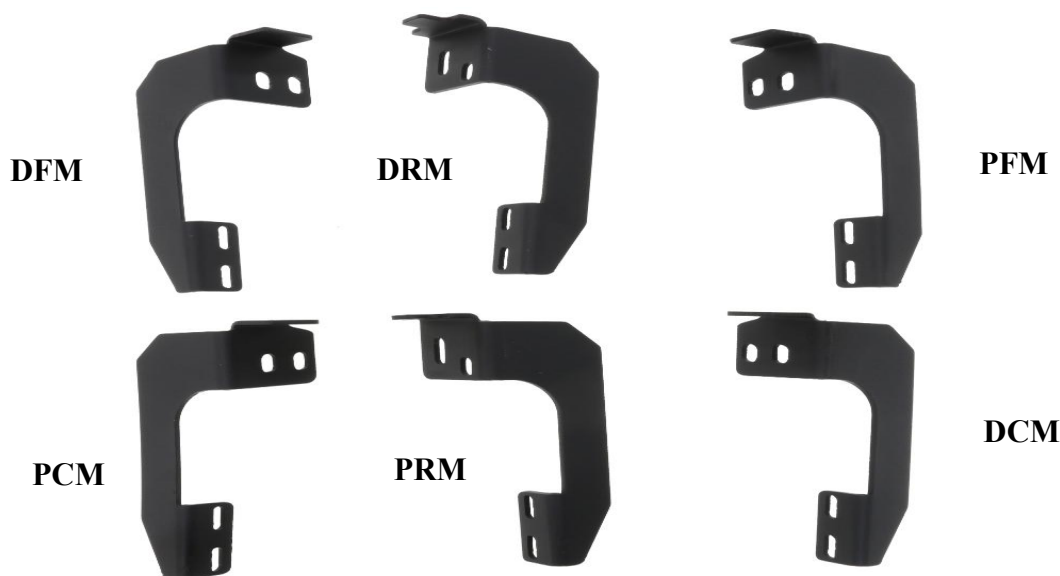

**INSTALLATION INSTRUCTION:**

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DRILLING REQUIRED.**


- Starting on the driver side front of the vehicle, locate the (2) factory threaded holes in the bottom of the outer frame channel, **(Figure 1)**. **NOTE:** The threaded holes may be filled with plastic plugs or covered in insulation. Remove plugs or insulation before proceeding. Repeat this step to locate the center and rear, **(Figure 2)**, mounting locations. **NOTE:** There may be (4) sets of threaded holes along the floor panel. This installation will use the first, third and fourth sets of holes only.
- Position the driver side Front Mounting Brackets up to vehicle. Hang the Bracket from the two threaded holes using the provided (2) M8 x 30mm Hex Bolts, (2) 8mm Flat Washers and (2) 8mm Lock Washers, **(Figure 3)**. Snug but do not tighten hardware at this time.
- Repeat Steps 2 - 3 to install the Center and Rear Mounting Brackets, **(Figures 4 & 5)**.
- Insert square head bolts as shown.(3 per slot,6 per board),SEE **Figure 6**.
- Carefully position the driver Sidebar onto the Mounting Brackets and attach it using the included (2)M6 Square Hex Bolt, (2) M6 Flat Washers and (2) M6 Nylon Lock Nuts, **(Figures 7)**. Snug but do not tighten hardware at this time.
- Align Sidebar properly and tighten all hardware.
- Repeat Steps 2 - 7 for the passenger Sidebar installation.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


**For Polished Finishes:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

**For black finishes:** Mild soap may be used to clean the Running Board.


## Driver Side Installation Pictured

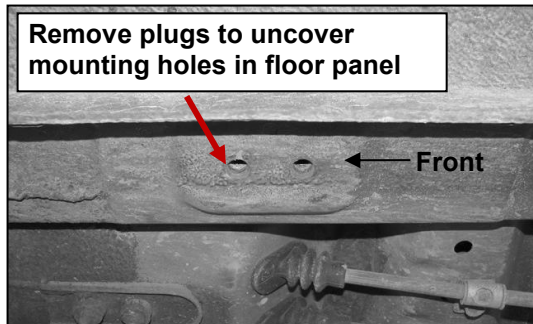


(Fig 1) Driver Side Front Mounting Location

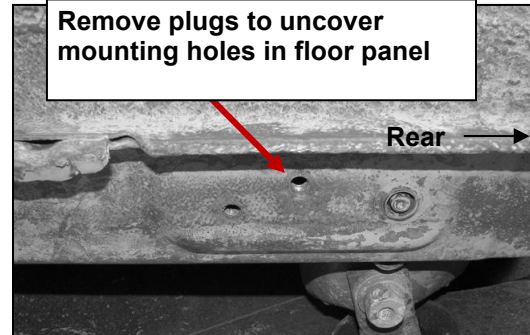

(Fig 2) Driver Side Rear Mounting Location

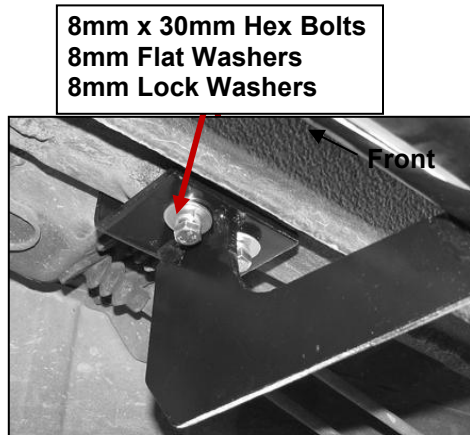

(Fig 3) Driver Side Front Mounting Bracket

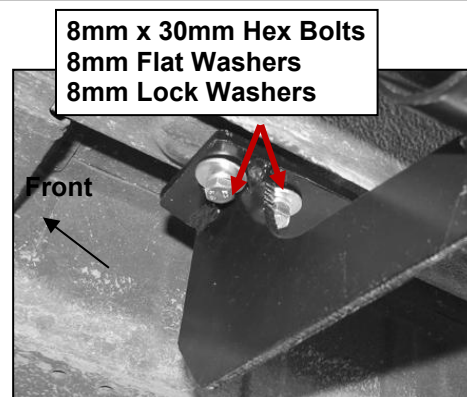


(Fig 4) Driver Side Center Mounting Bracket



(Fig 5) Driver Side Rear Mounting Bracket



Fig 6 Slip M6 Square Head Bolts into channel

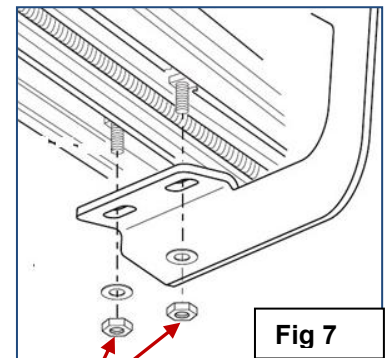

M6 Lock Nut  
M6 Flat Washer