

# Installation Instructions for IB08EJF2

by APS Auto Parts Specialist Inc.


Application: FOR 2003-2008 Honda Pilot /2002-2006 Acura MDX  
Estimated Time: 1 to 2 hours



Disclaimer: Instructions intended for persons aged 18+ please do not attempt without adult supervision. Instructions are not intended to replace professional installation. Damage from improper installation, misuse or modification to the product voids the manufacturer's warranty.

**PARTS LIST:**

Item	QTY	Description	Item	QTY	Description
#01	1	Driver/ Left Sidebar	#11	4	M10 Lock Washer
#02	1	Passenger/ Right Sidebar	#12	4	M10 Hex Nut
#03	1	Driver/Left Front Mounting Bracket (DFM)	#13	24	M8x35mm Hex Bolts
#04	1	Passenger/Right Front Mounting Bracket (PFM)	#14	24	M8 Flat Washers
#05	1	Driver/Left Rear Mounting Bracket (DRM)	#15	24	M8 Lock Washers
#06	1	Passenger/Right Rear Mounting Bracket (PRM)	#16	24	M8 Hex Nut
#07	1	Driver/Left Support Bracket (DRB)	#17	20	M6 Square Hex Bolt
#08	1	Passenger/Right Support Bracket (PRB)	#18	20	M6 Flat Washers
#09	4	M10X1.5-30 Hex Bolt	#19	20	M6 Nylon Lock Nuts
#10	4	M10 Flat Washer			

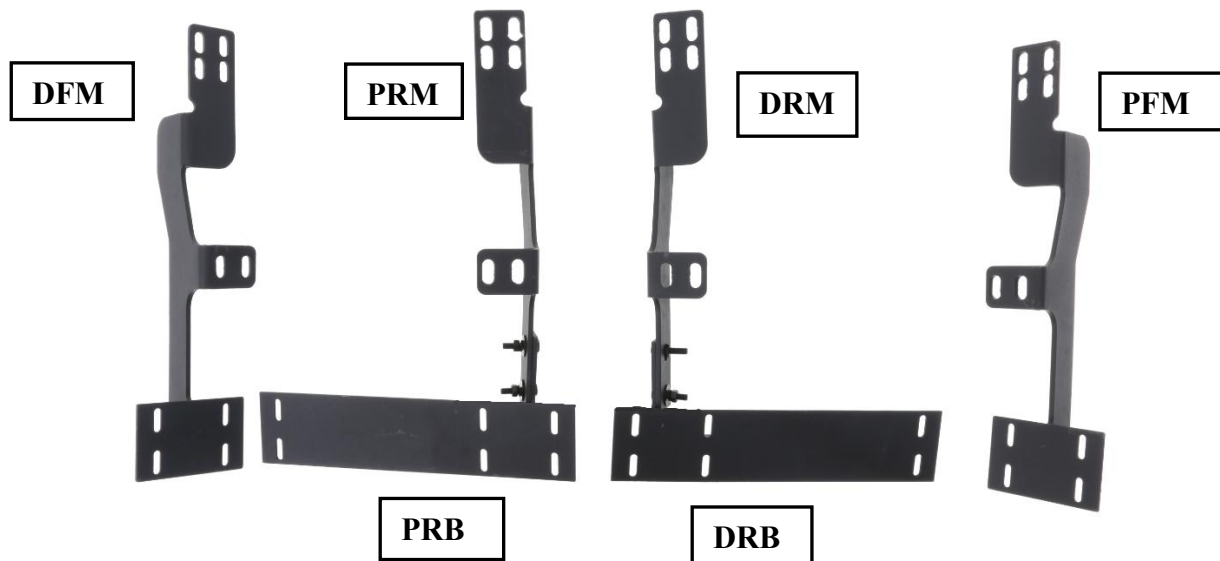

**INSTALLATION INSTRUCTION:**

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DRILLING REQUIRED.**

1. Begin installation by working on driver side of the vehicle
2. From underneath vehicle, place drivers side front bracket in position as shown in **Fig.1** Attach using hex head bolts supplied with flat washers and lock washers and nuts, Do not fully tighten at this time.
3. Attach and secure Rear Mount Bracket to underside of vehicle rear body mount in same manner as the front. See **Fig.2** Do not fully tighten at this time.
4. Slip (10) M6 Square Head Bolts into each bottom channel (**Figure 3A**). Carefully position the Running Board onto the Mounting Brackets. Attach the Running Board to the Mounting Brackets with (6) M6 Square Head Bolts, (6) M6 flat washers and (6) M6 lock nuts, (**Figure 3B**). Do not tighten hardware at this time.
5. Repeat steps 1-4 on Passenger side. Align side bar with vehicle and fully tighten all nuts and bolts.
6. Installation complete.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


**For Polished Finishes:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

**For black finishes:** Mild soap may be used to clean the Running Board.



**Fig.1**

**\*Pictures are for reference only, actual brackets & bars may be a little different \***

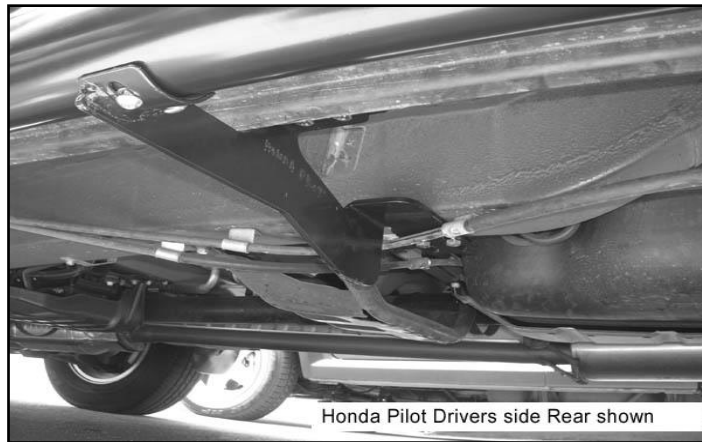


**Fig.2**



**Fig.3A**

(6)6mmT-bolts  
(6)6mm Flat Washers  
(6)6mmLock nuts

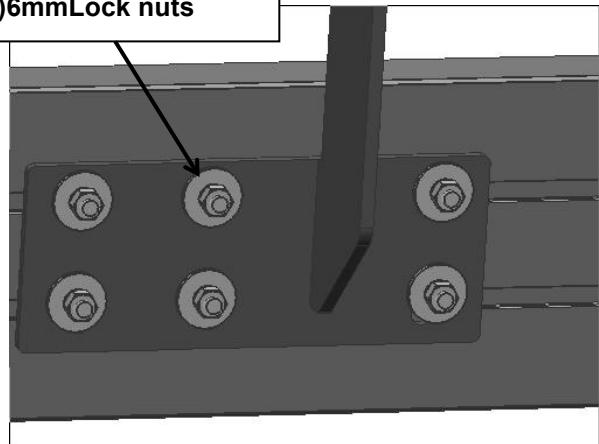

**Fig.3B**