

# iRunning Board Installation Instruction


Rev. 20180501

**Part#: IB10RIF3**

**Application: For 2005-2010 Jeep Grand Cherokee / 2006-2010 Jeep Commander**

## **PARTS LIST:**

Item	QTY	Description	Item	QTY	Description
#01	2	STEP BOARD( Driver+Passenger)	#06	8	M8 Hex Nuts
#02	4	Mounting Bracket	#07	4	M8 Clip Nut
#03	12	M8x30mm Hex Bolt	#08	8	M6 Square Head Bolt
#04	20	M8 Flat Washers	#09	8	M6 Nylon Lock Nuts
#05	12	M8 Lock Washers	#10	8	M6 Flat Washers

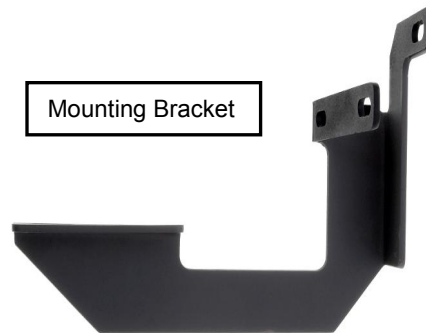

## **INSTALLATION INSTRUCTION:**

1. Remove contents from box and check for damage. Verify all parts are present. Read and understand instructions before beginning.
2. Both front and rear brackets are the same for each side.
3. Locate driver side mounting locations on vehicle. **(See Figure 1).**
4. Attach brackets to underside of rocker panel as shown. Hand tighten. **(See Figure 1 & 2).**  
**For jeep Commanders only:** To attach the passenger side front bracket, remove the four bolts that secure the rear air and heat line shroud. Remove the shroud to gain access to top mounting location on the bracket. After bracket is installed and fasteners are tightened, reattach shroud with the four existing bolts previously removed. **(See Figure 3).**
5. Insert square head bolts as shown (2 per slot, 4 per Step board) **(See Figure 4).**
6. Attach Step board / Running board to brackets as shown. **(See Figure 5).** Align and tighten all hardware.
7. Repeat Installation for passenger side.
8. **INSTALLATION IS COMPLETE. (See Figure 6).**

**To protect your investment,** wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For Polished Finishes:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

**For black finishes:** Mild soap may be used to clean the Running Board.

# iRunning Board Installation Instruction

Rev. 20180501

Part#: IB10RIF3

Application: For 2005-2010 Jeep Grand Cherokee / 2006-2010 Jeep Commander

