


**PARTS LIST:**

Item	QTY	Description	Item	QTY	Description
#01	2	Running Board(use for left or right)	#06	4	8mm Hex Nuts
#02	4	Mounting Brackets( <b>universal</b> )	#07	16	6-1.0mm x 20mm T-Bolts
#03	4	8-1.25mm x 35mm Hex Bolts	#08	16	6mm x 22mm OD x 2mm Flat Washers
#04	8	8mm Lock Washers	#09	16	6mm Lock Nuts
#05	8	8mm x 24mm OD x 2mm Flat Washers			

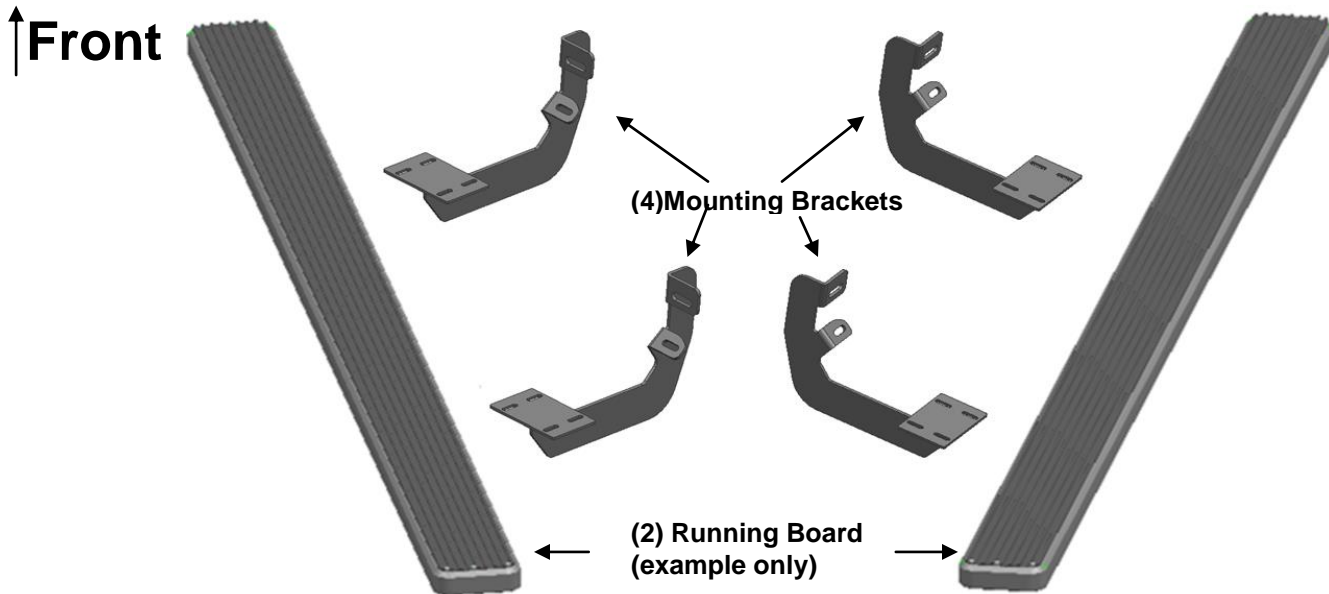

**PROCEDURE:**

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Start installation at the front of the driver side of the vehicle and locate the factory threaded holes or stud located on the side of the inner body panel, **(Figure 1)**. **NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes .
- Select (1) Mounting Bracket. Attach the Bracket to the mounting location thread stud with (1) 8mm x 24mm Flat Washer (1)8mm Lock Washer and (1) 8mm Hex Nut. Next, insert (1) 8mm x 35mm Hex Bolt with (1) 8mm Lock Washer and (1) 8mm x 24mm Flat Washer through the remaining lower hole in the Bracket and into the threaded hole, **(Figures 1, 2 and 3)**. Do not tighten hardware at this time.
- Repeat the appropriate **Steps 2—3** to install rear Mounting Brackets. **NOTE: All the brackets are universal.**
- Once all two Mounting Brackets are partially installed, Select the Running Board. Slip (8) 6mm T-Bolts into each bottom channel **(Figure 4)**. Carefully position the Running Board onto the Mounting Brackets. Attach the Running Board to the Mounting Brackets with (4) 6mm T-bolts,(4)6mm flat washers and (4)6mm lock nuts, **(Figure 5)**. Do not tighten hardware at this time.
- Level and adjust the Running Board and tighten all hardware at this time.
- Repeat **Steps 2—6** for passenger Running Board installation.
- Do periodic inspections of the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For Polished Finishes:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

**For Black Finishes:** Mild soap may be used to clean the Running Board.

### Driver Side Installation Pictured

