

Installation Instruction

Part#: IB20DAD0A

REV: 20150701

Application: For 2007 TOYOTA TUNDAR REG CAB

Item	Part Name	QTY	Item	Part Name	QTY
1	Driver/ Left Sidebar	1	6	Rear Passenger Side Mounting Bracket (RR)	1
2	Passenger/ Right Sidebar	1	7	M8 Hex Head Bolts	28
3	Front Driver Side Mounting Bracket (LF)	1	8	M8 Flat Washers	28
4	Rear Driver Side Mounting Bracket (LR)	1	9	M8Lock Washers	28
5	Front Passenger Side Mounting Bracket (RF)	1			




Step	Installation Instruction
------	--------------------------

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTALLATION INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

1	Begin installation by working on driver side of the vehicle.
2	Remove plastic plugs on rocker panel to locate mounting holes for bracket. Attach and secure Front and Rear Mount Bracket to existing holes using M8 X 30mm hex head bolts, 8mm flat washers, and 8mm lock washers. For each outer hole and hand tighten.
3	Attach Side Tube to Front and Rear Brackets using M10 x 25mm bolts, 10mm flat washers. Hand tighten. Adjust Side Tube so that it is level and centered, and tighten all bolts to complete the driver-side assembly.
4	Repeat process for driver side of vehicle to complete installation.

Passenger side brackets

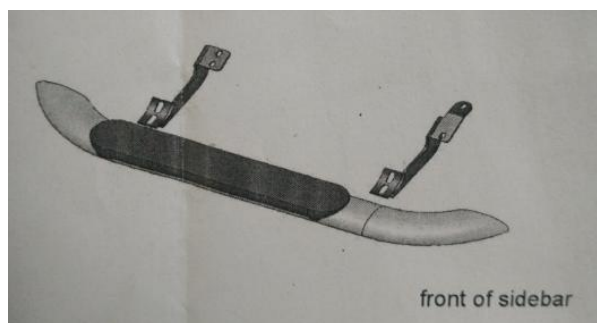

TO Protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.
For Polish Surface: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.
For black finishes: Mild soap may be used also to clean the Sidebar.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!