I - Sheet Number WIN03 Rev.D



# Ventvisor® Deflector

For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.

#### **Important Safety Information**



- CAUTION Before driving, ensure that the wind deflector is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.Periodically check all components for tightness.

**Contents - 2 Piece Set NOTE:** Actual product may vary from illustration.







Alcohol Pad x2

#### **Contents - 4 Piece Set**











Alcohol Pad x4


#### **Tools Required**



## **Preparation Before Painting / Installation**

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.
- Ensure vehicle surface and part are above 60°F (15°C) prior to installation.



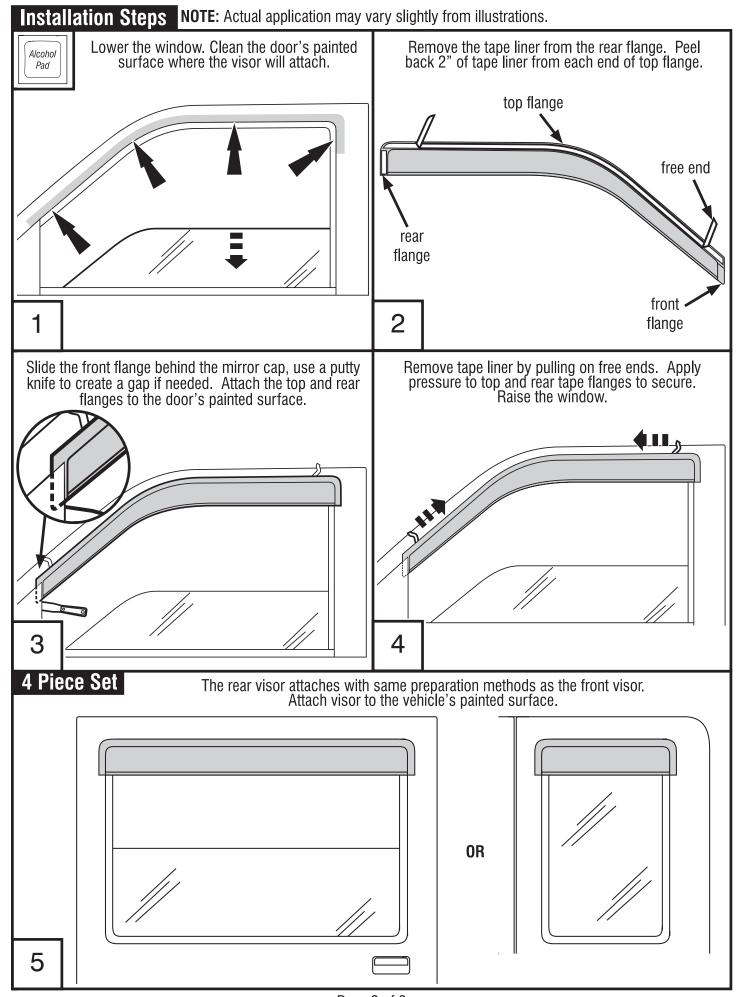

Page 2 of 3



Example of completed installation

# **Care and Cleaning**

• Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



## **Congratulations!**

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com © 2025 Husky Liners, Inc. All rights reserved. Husky® and the Husky® logo are trademarks of Husky Liners, Inc.