

Installation Instructions

I - Sheet Number WIN109 Rev.D



Ventvisor® Deflector


**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

Important Safety Information




- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set **NOTE:** Actual product may vary from illustration.

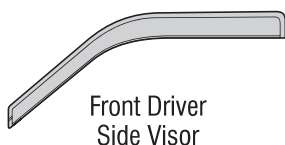


Front Driver
Side Visor

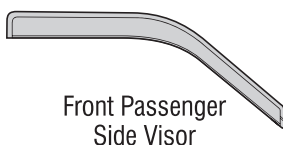

Front Passenger
Side Visor



Alcohol Pad x2



Scotchbrite Pad


Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor

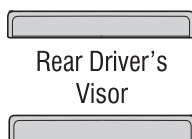


Rear Driver's
Visor



Rear Passenger's
Visor



Alcohol Pad x4




Scotchbrite Pad

Tools Required



Car Wash Supplies



Clean Towel



Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps **NOTE:** Actual application may vary slightly from illustrations.




Clean the rubber with an alcohol pad. Wipe dry with a soft cloth. If equipped with chrome trim around the outside of the door, clean the chrome with an alcohol pad, and wipe dry with a soft cloth.

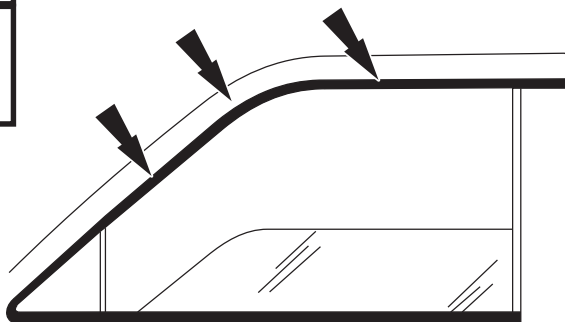


1

buff with scotchbrite and clean
black vinyl trim with alcohol pad

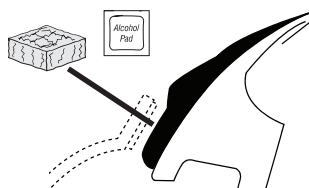

OR


clean
chrome
trim
with
alcohol
pad

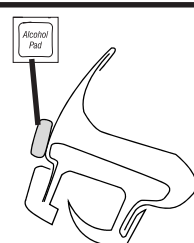

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Remove tape liner from front and rear flanges of visor. Peel back 2" (5 cm) of tape liner from each end of the lateral flange.

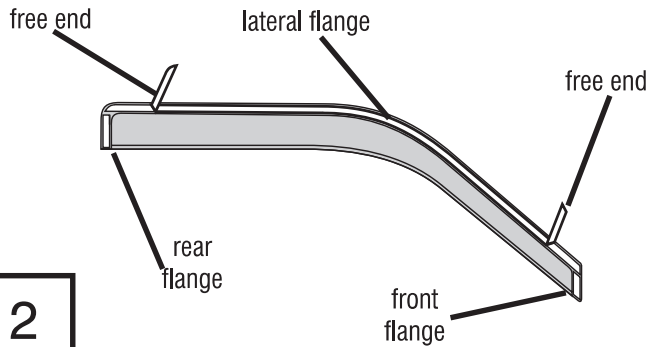


2

Align visor to the previously cleaned surface. The lateral flange attaches to the chrome or black trim. The front flange will attach on top of the mirror base plate.

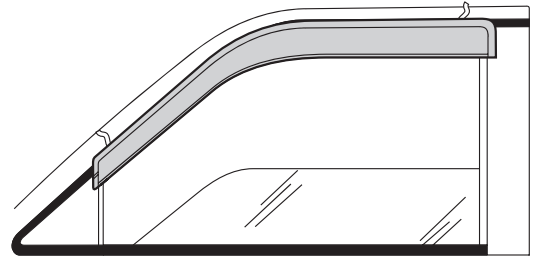


3

Depending on your application, see the appropriate cross section below for proper visor placement.

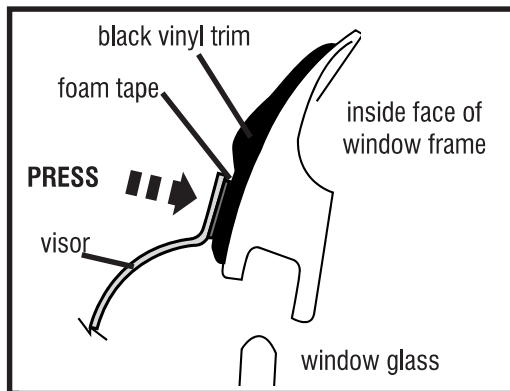


4

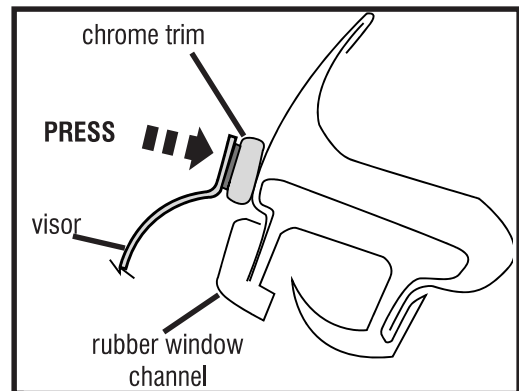


OR

Gently press the exposed areas of tape against the surface and verify position. With the visor in its final position, remove the remaining tape liner by pulling on free ends.

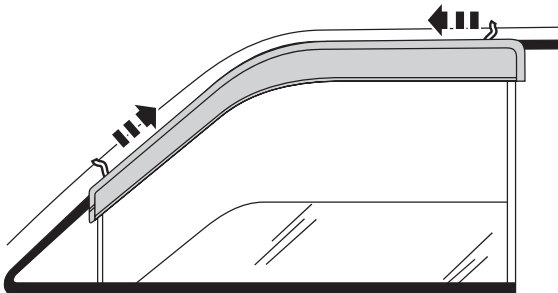

5


Apply pressure along all flanges to ensure proper adhesion of tape.

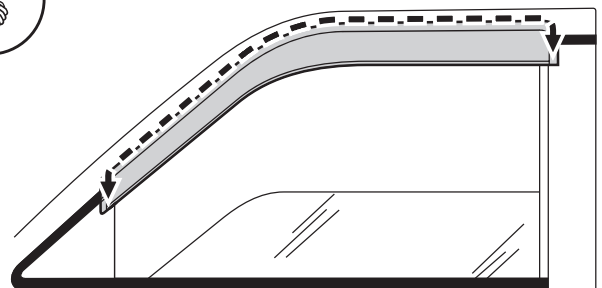

6

4 Piece Set

The rear visor attaches with the same preparation methods as the front visor.

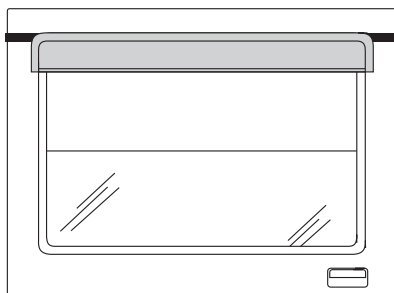

7

Repeat **Steps 1-7** for opposite side.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at [huskyliners.com](https://www.huskyliners.com)

© 2023 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.