




INSTALLATION INSTRUCTIONS

**2.5" MAX BULL BAR FOR FORD EXPLORER 2020 PART #
MBB-FOB502**


PARTS LIST:

1	Driver/Left Mounting Bracket	4	Flat Washer D10 (10×30×2.5mm)
1	Passenger/Right Mounting Bracket	8	Flat Washer D12 (12×37×3mm)
2	Licence Bracket 1	4	Flat Washer D6 (6×12×1.6mm)
1	Licence Bracket 2	2	Hex Button Head Bolt M6_20
2	U bolt M10×119.4	4	Hex Nut M6
4	PVC Plastic Block ϕ 10 (0.7*40*40mm)	4	Hex Nut M10
1	Allen Wrench S=4	4	Hex Nut M12
4	Lock Washer D6	4	Hex Bolt M12_40
4	Lock Washer D10	4	Assembly Bolt M6_20
4	Lock Washer D12		

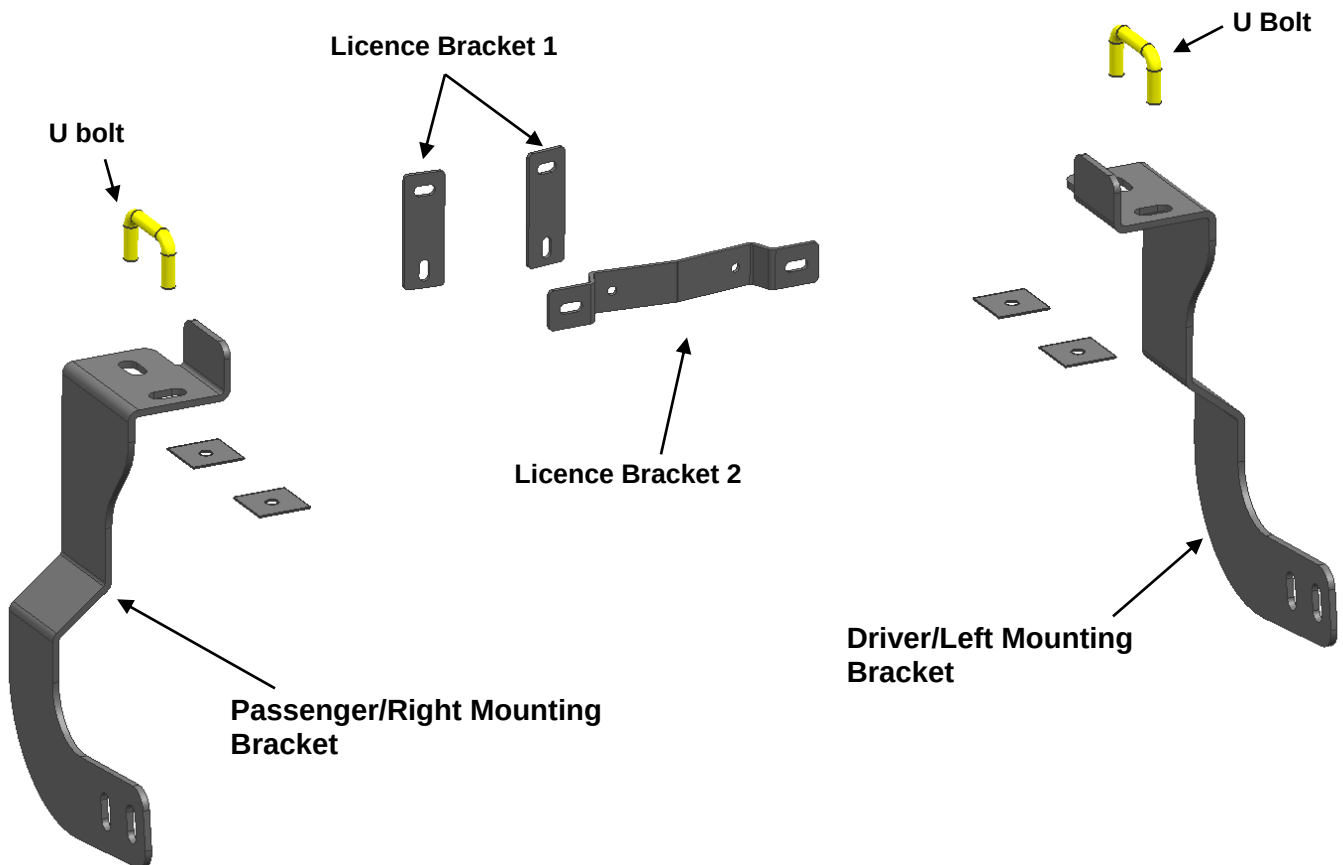**PROCEDURE:**


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. CUTTING IS REQUIRED. ASSISTANCE IS RECOMMENDED.**
- Use standard parts U bolt M10X119.4 and PVC Plastic Block ϕ 10 (0.7*40*40mm) to install U bolts in the right girder, then use PVC Plastic Block to fix the U bolts.
- Use standard parts Lock Washer D10, Flat Washer D10 and Hex Nut M10 to install brackets on U bolts.
- Use standard parts Lock Washer D12, Flat Washer D12, Hex Nut M12 and Hex Bolt M12_40 to install bull bar on the brackets.
- Use standard parts Lock Washer D6, Flat Washer D6 (6×12×1.6mm), Hex Nut M6 and Assembly Bolt M6_20 to install licence brackets on the bull bar.

BRACKETS FOR 2.5" BULL BAR FOR FORD EXPLORER 2020

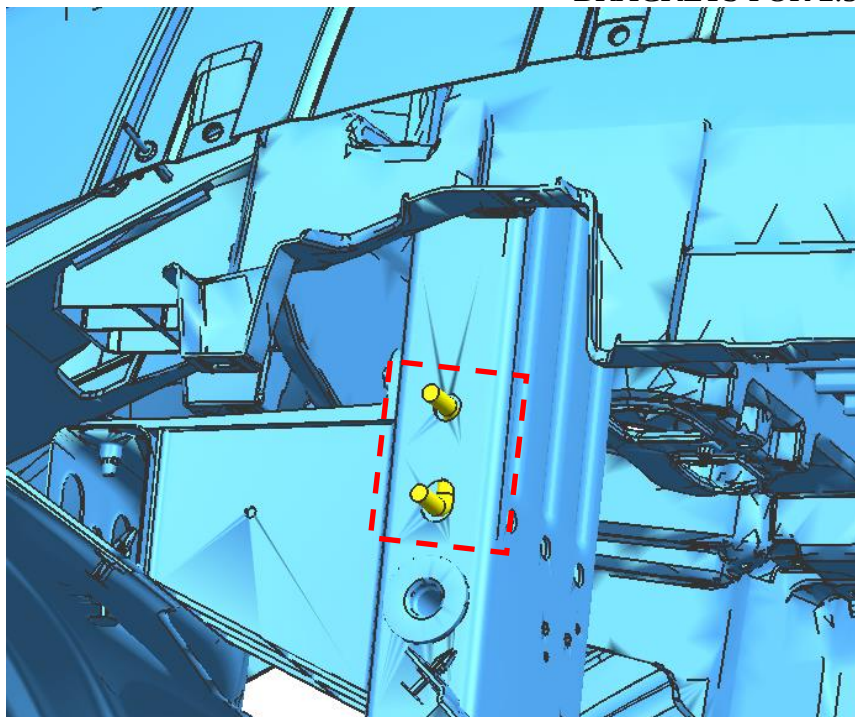


Install U bolts in the right girder and install symmetrically on the left side.

Use PVC Plastic Block to fix U Bolt.

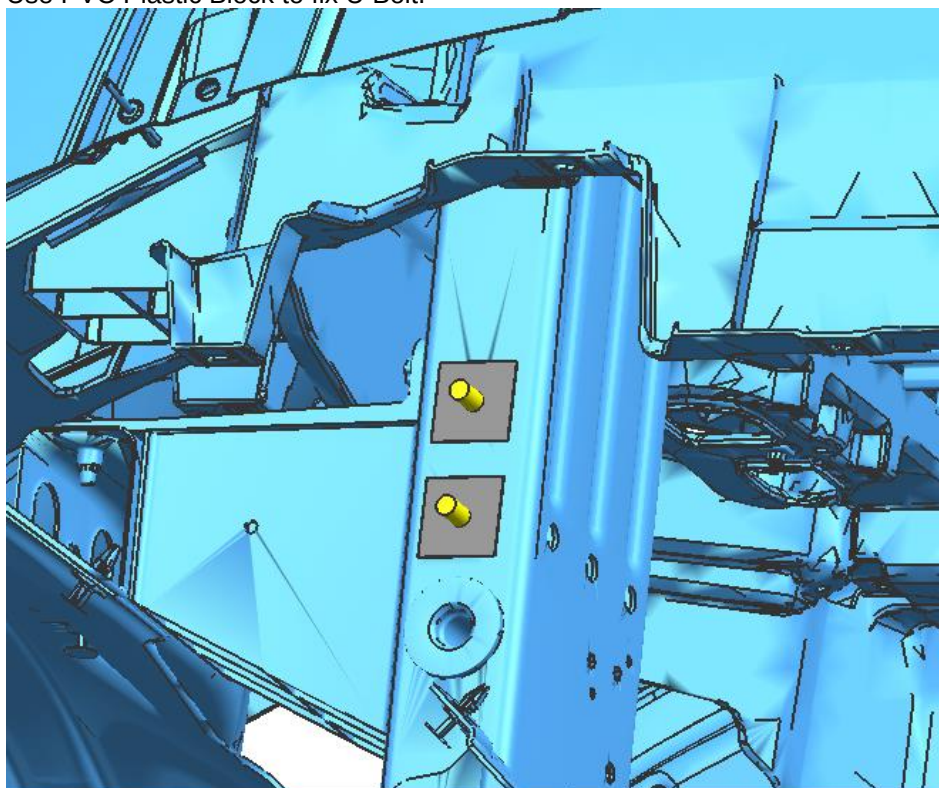


BRACKETS INSTALLATION:

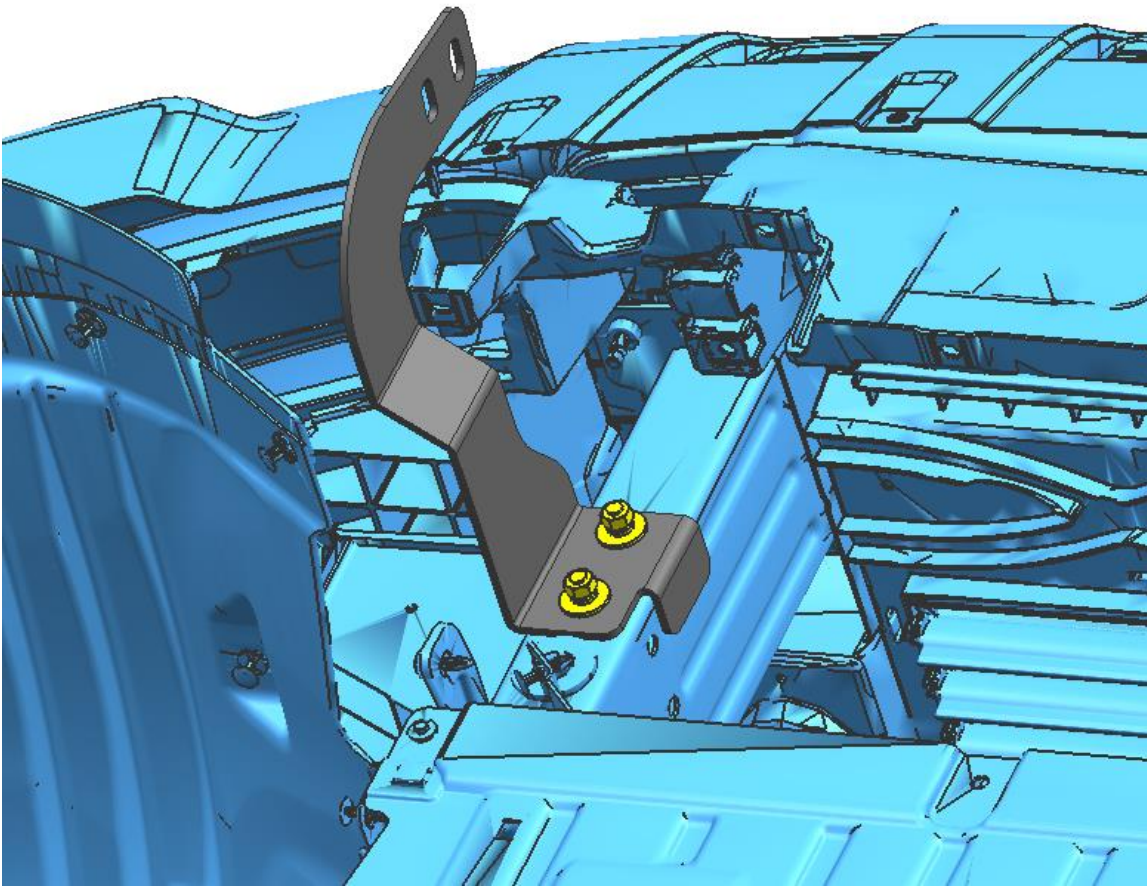


Right brackets installation, symmetrical installation on the left brackets.


PVC Plastic Block ϕ 10 (0.7*40*40mm)

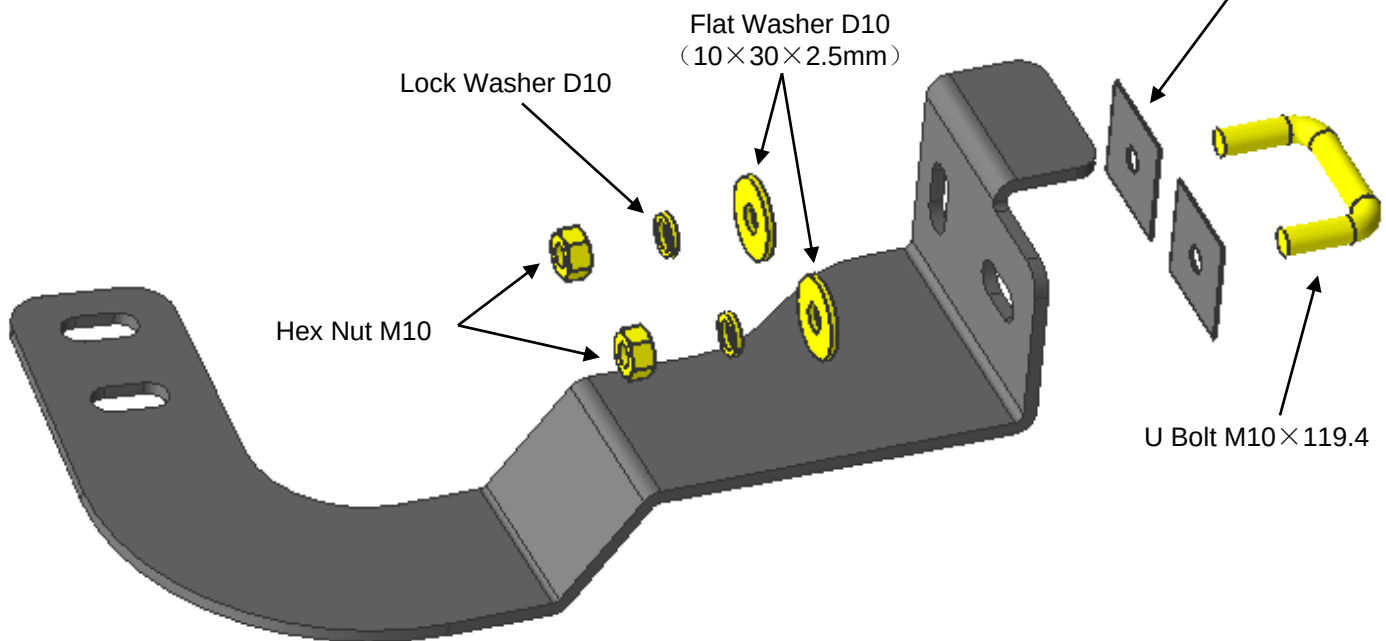

BULL BAR INSTALLATION:

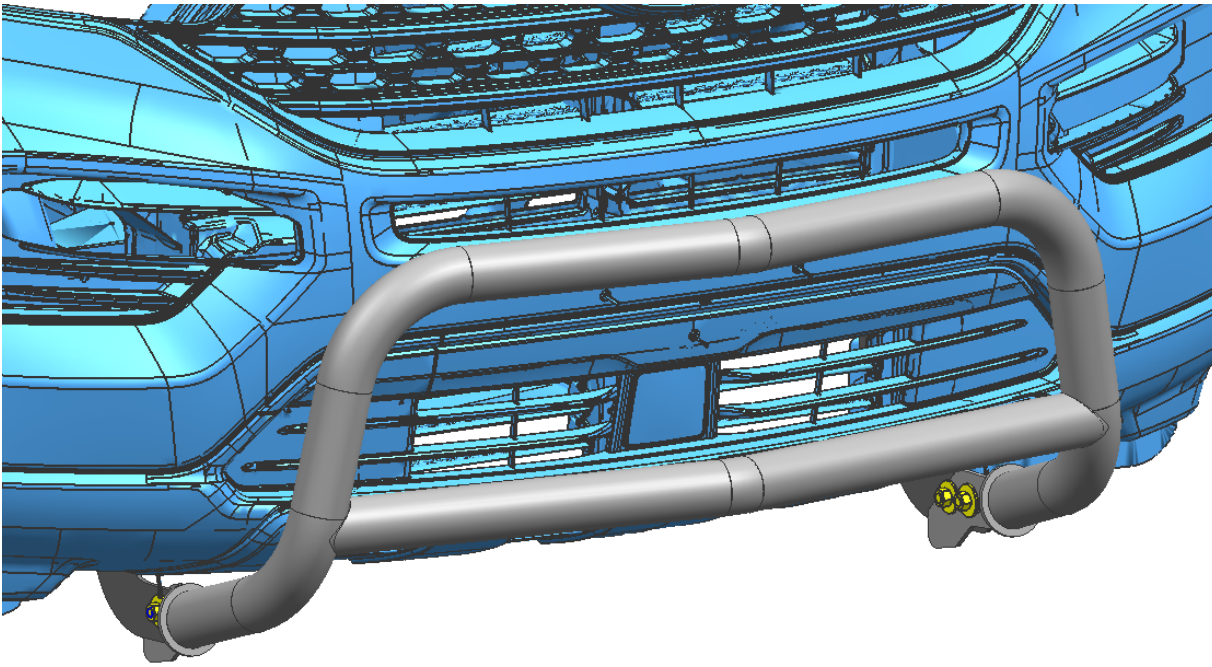


Install the bull
bar on the
brackets.

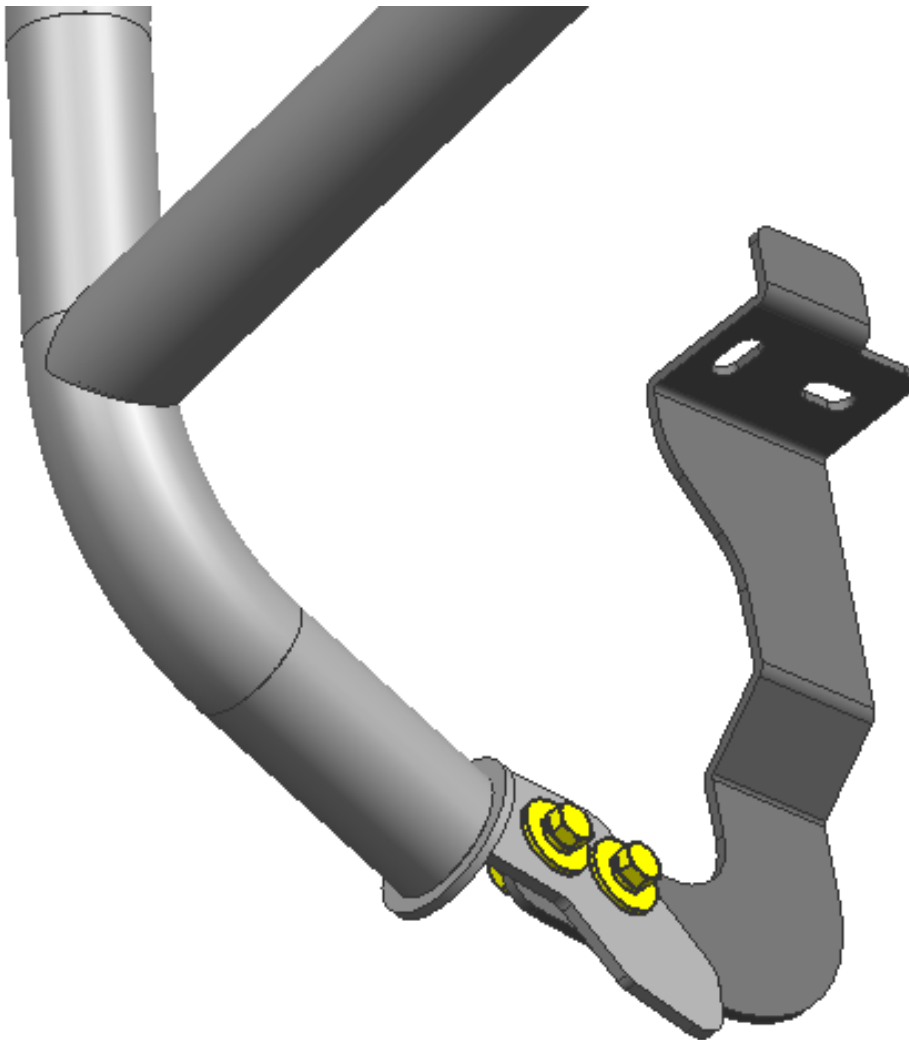

RIGHT SIDE
INSTALLATION.
Pay attention to
symmetrical
installation

BRACKETS FOR 2.5" BULL BAR FOR FORD EXPLORER 2020

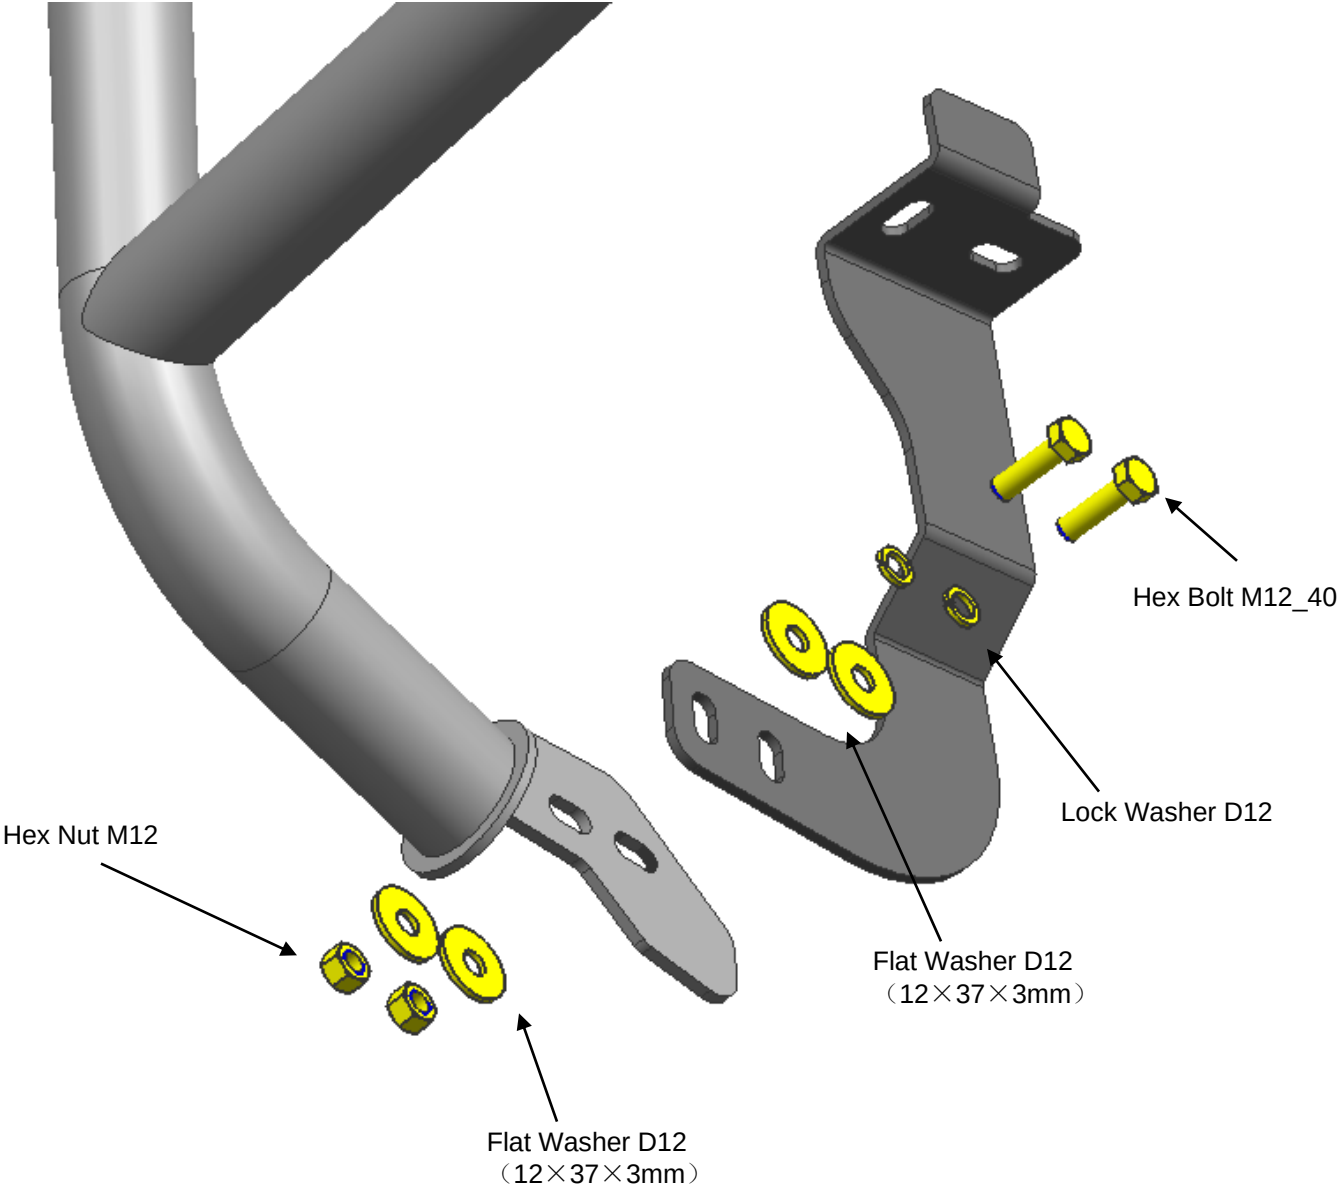

LICENCE BRACKET INSTALLATION:

