



2015-2020 GMC YUKON XB LED HEADLIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES



1 X FUSE TAP / DRL HARNESS

IMPORTANT: If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the tail lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these headlights. This is not a defect in the headlight, and caused by un-matched impedance with your original vehicle settings.

2015-2020 GMC YUKON




REQUIRED TOOLS

- RATCHET
- 7MM SOCKET
- 10MM SOCKET
- T20 TORX BIT
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL

INSTALLATION PROCESS


1. Remove the six (6) plastic clips holding on the grille cover and remove the grille cover off of the truck.

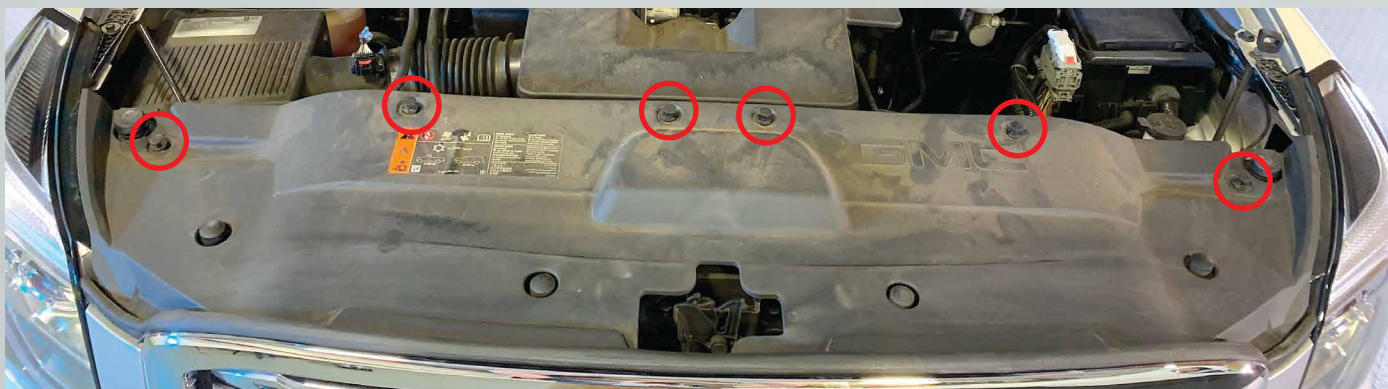

2. Remove the six (6) 10mm bolts holding on the top of the bumper and grille.




3. Locate this connector and unplug it. Do this by pulling the red locking tab out(#1), then press down the release tab(#2), and pull the connector apart.

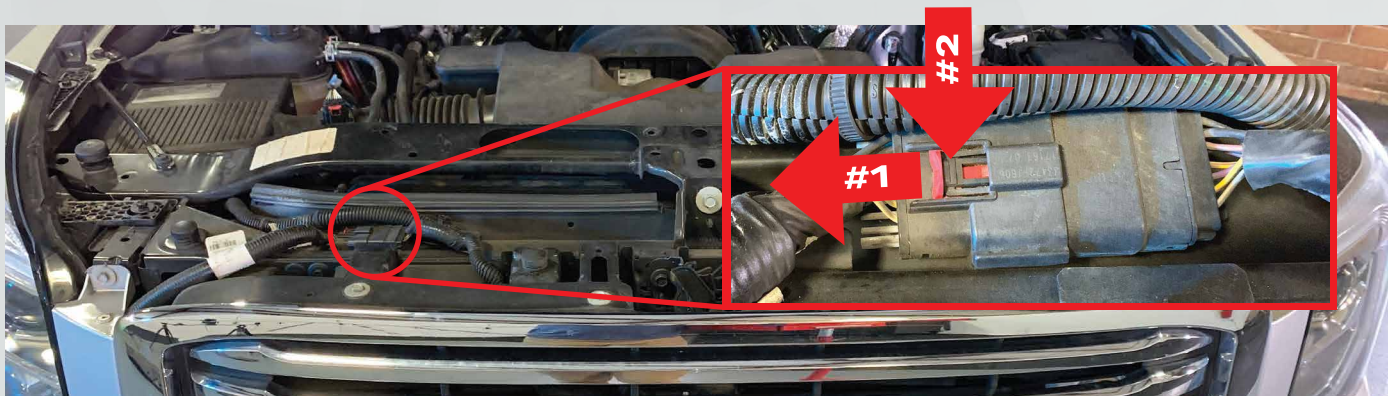


4. Remove the six (6) 7mm bolt from the side of the bumper. Repeat on the other side of the vehicle.




5. Get underneath the front bumper and locate and remove these two (2) 10mm bolts.

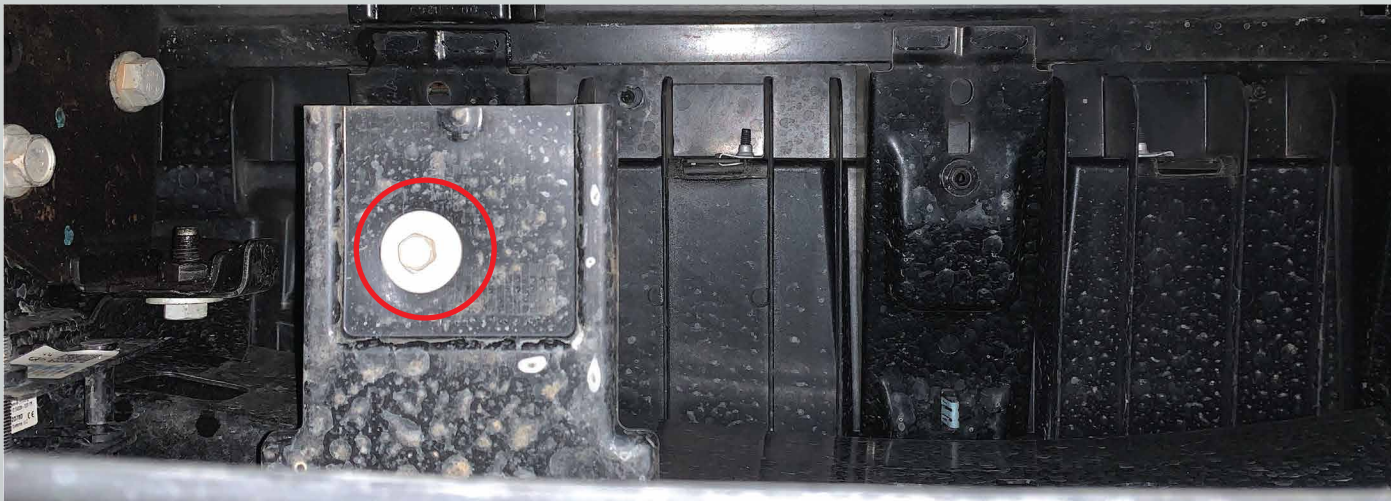


6. Remove three (3) 10mm bolts(**red**) holding the bumper to the fender liner and pry out the push pin(**blue**). Repeat this on the other side of the bumper

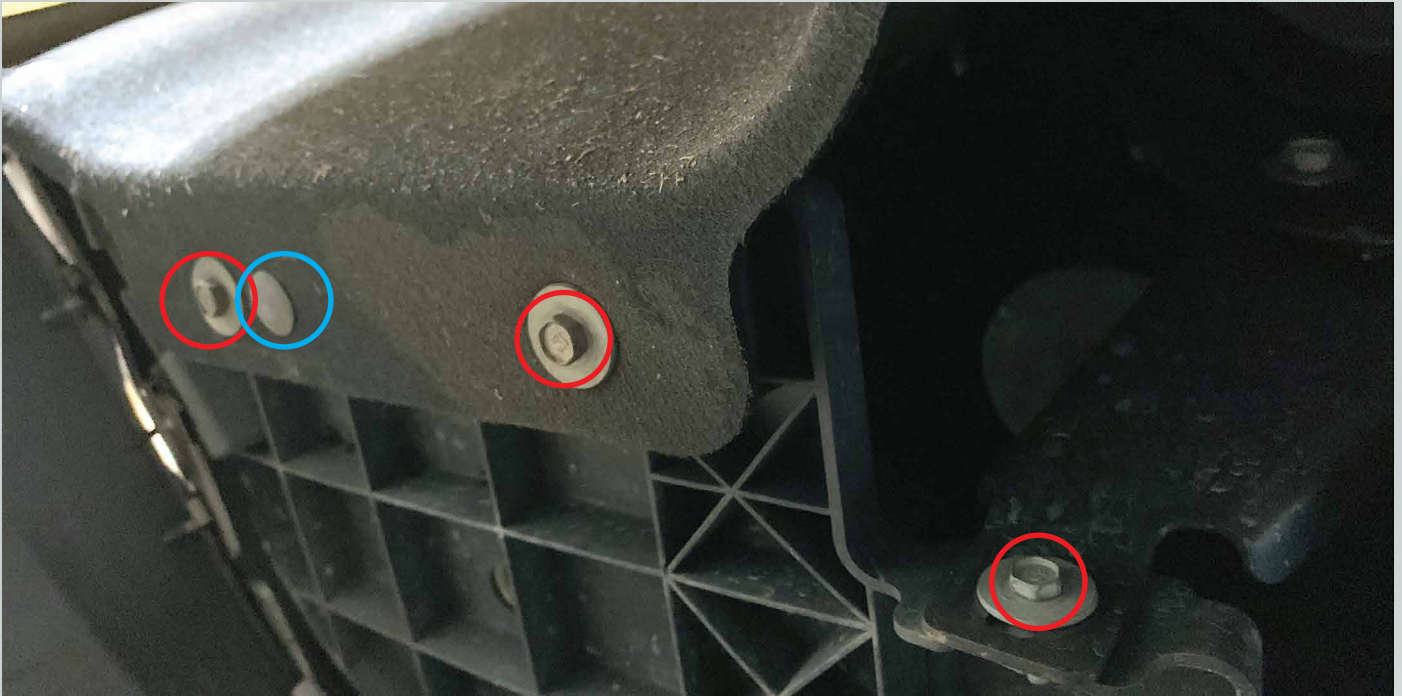

7. Locate these 2 tabs from underneath the bumper and press up on these to release the bumper.

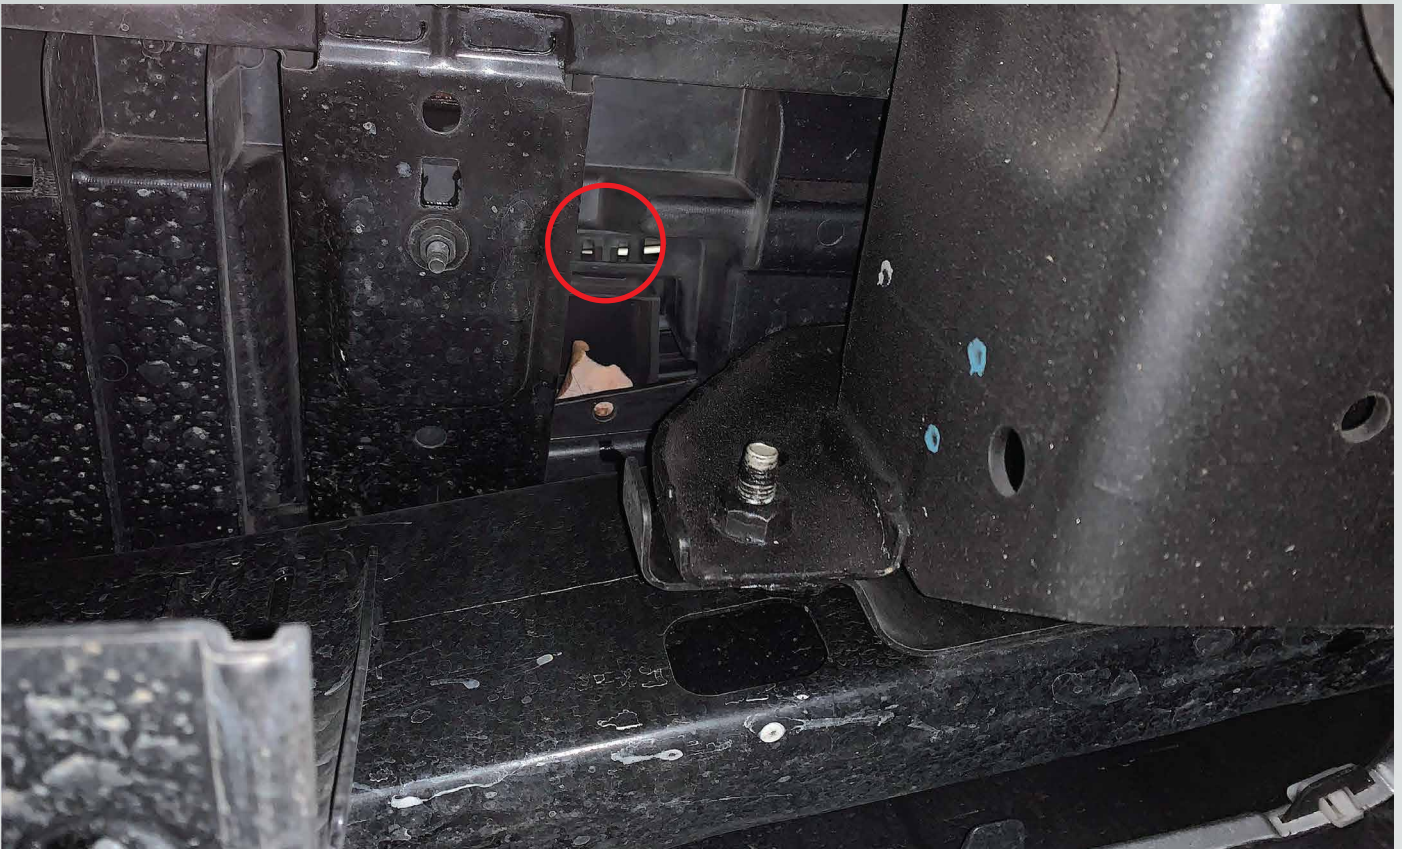

8. Pry up under the bumper sides to release the bumper from the fender.

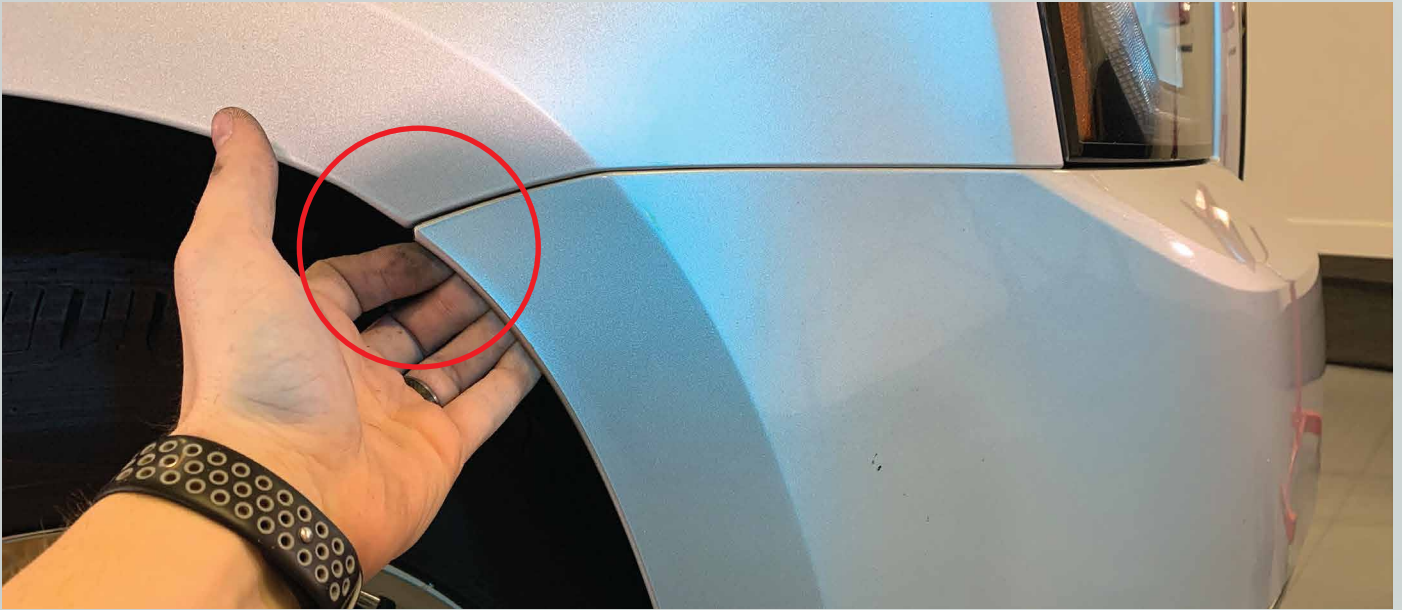


9. Pry up on these three (3) tabs to release the bumper.



10. Remove the bumper from the vehicle by sliding it forward.

11. Remove two (2) 10mm bolts the secure the bottom of the headlight.

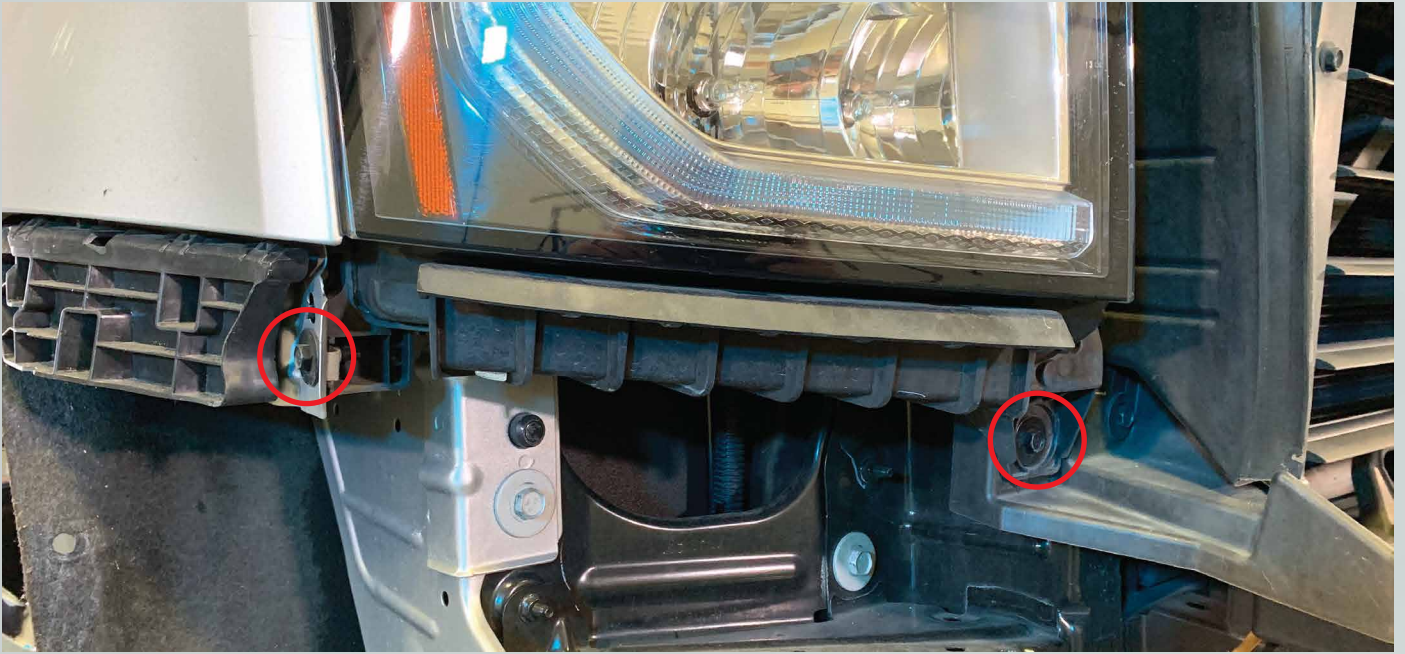


12. Remove the two (2) 10mm bolts from the top of the headlight and slide it forward to remove from vehicle.



13. Unplug the headlight by pulling the red locking tab out(#1), then press down the release tab(#2), and pull the connector apart.




14. Remove the bracket off the bottom of the headlight by removing the three (3) T20 Torx. Transfer the bracket and bolts onto the XB headlight.

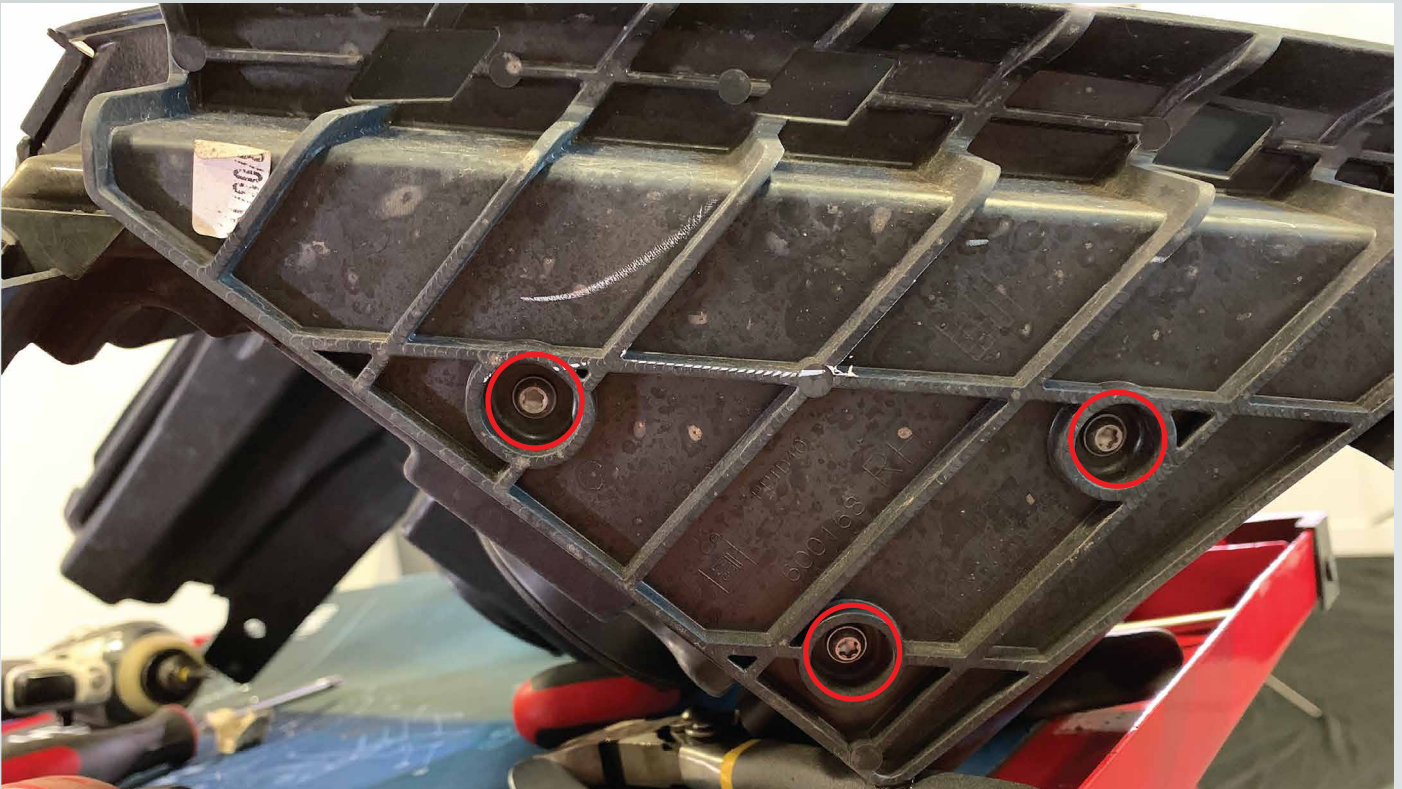


15. Repeat steps #11-14 on the other headlight.


16. Locate the fuse box behind the driver side headlight and locate fuse position #75.

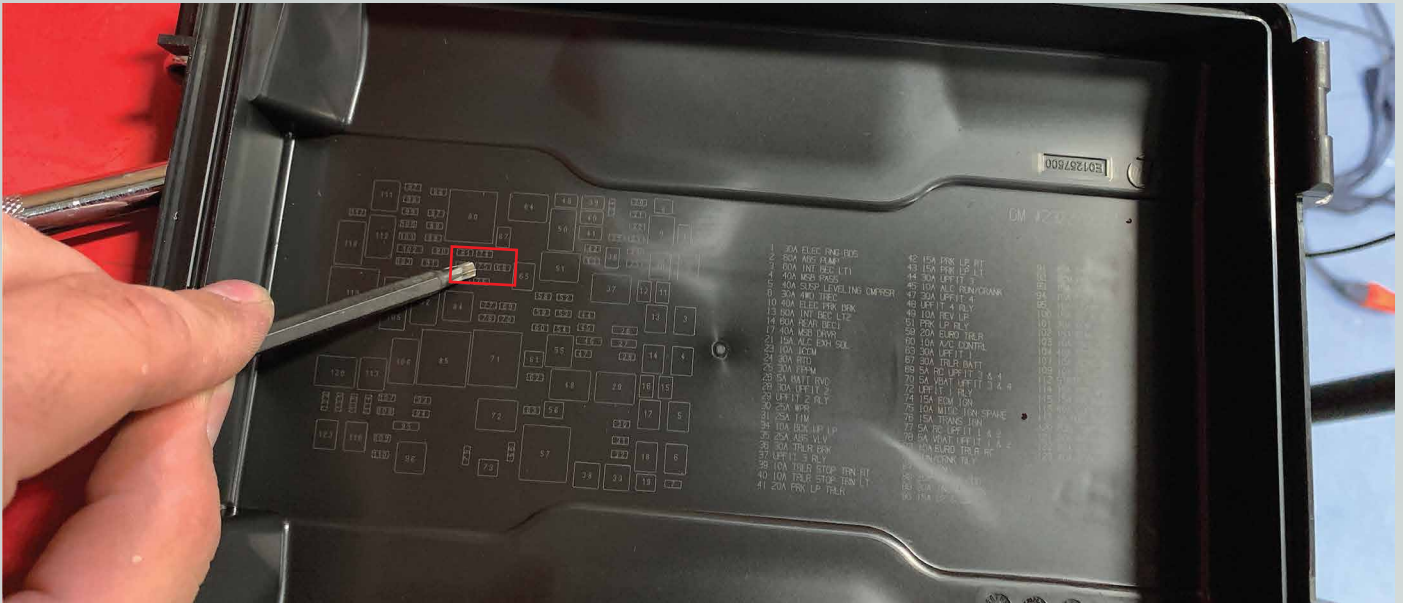


17. Locate the supplied DRL harness and plug it in fuse position #75. Then run the shorter end of the harness to the driver side headlight area and the longer side to the passenger headlight area.

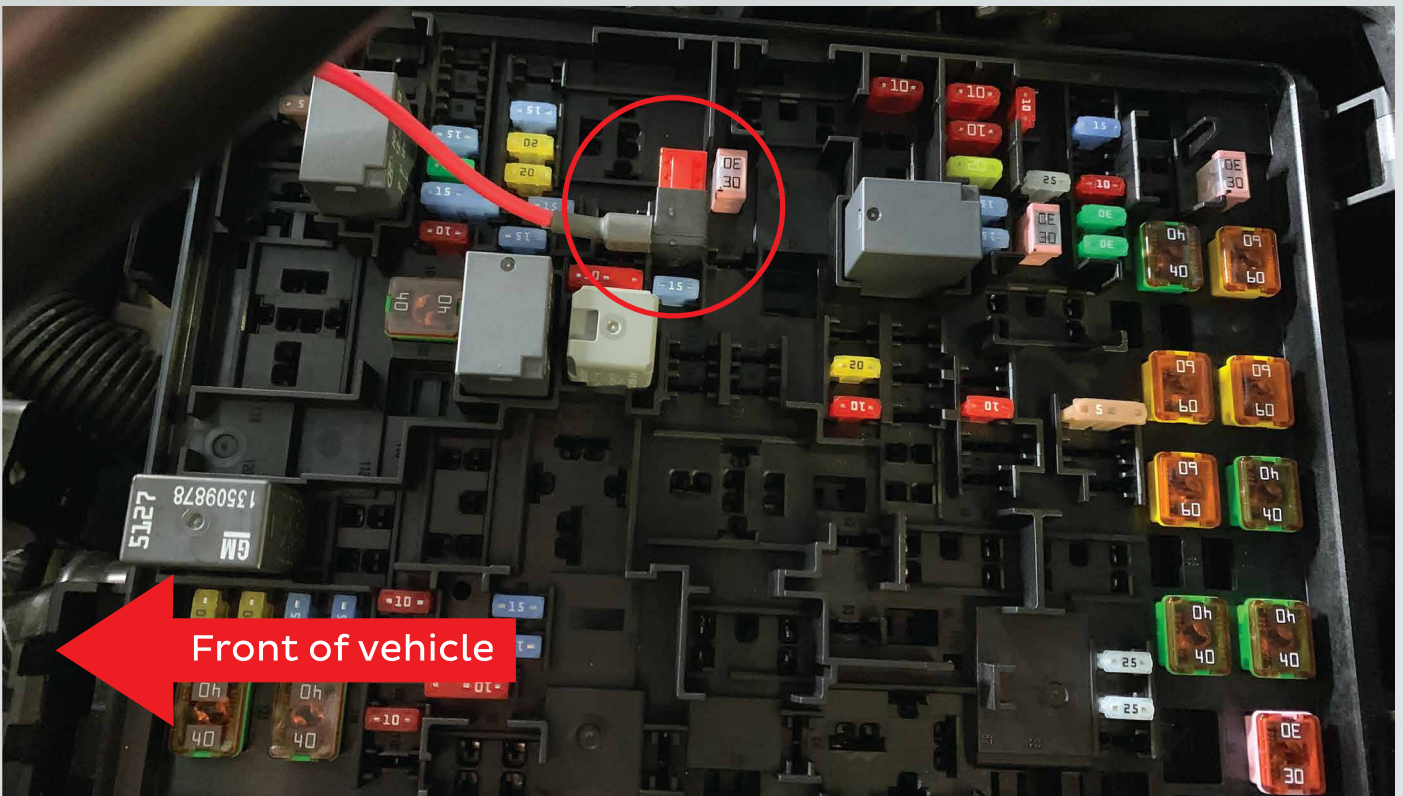


18. Grab one of your XB headlights and plug in the DRL harness to the headlight wiring.

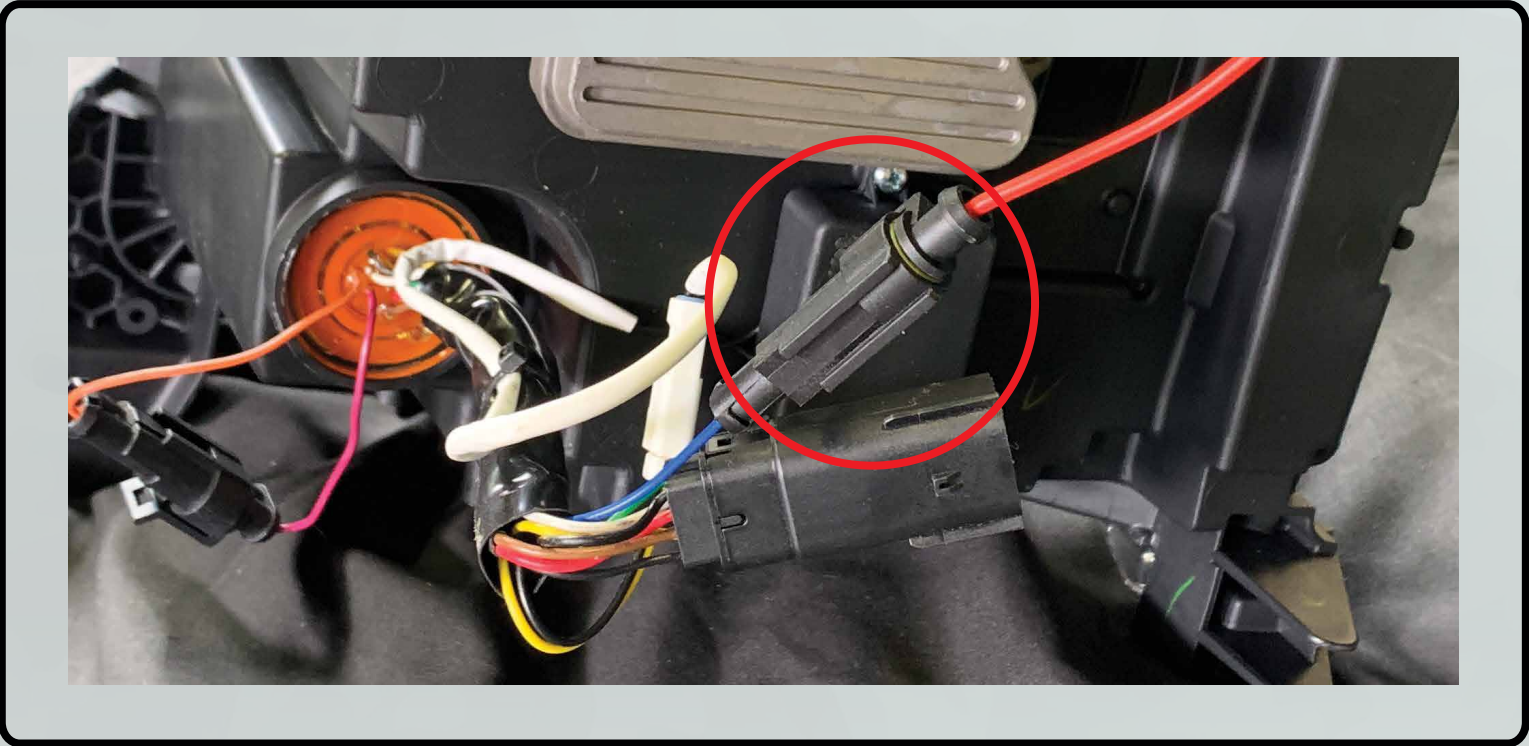

19. Plug in the multipin connector to the headlight wiring.

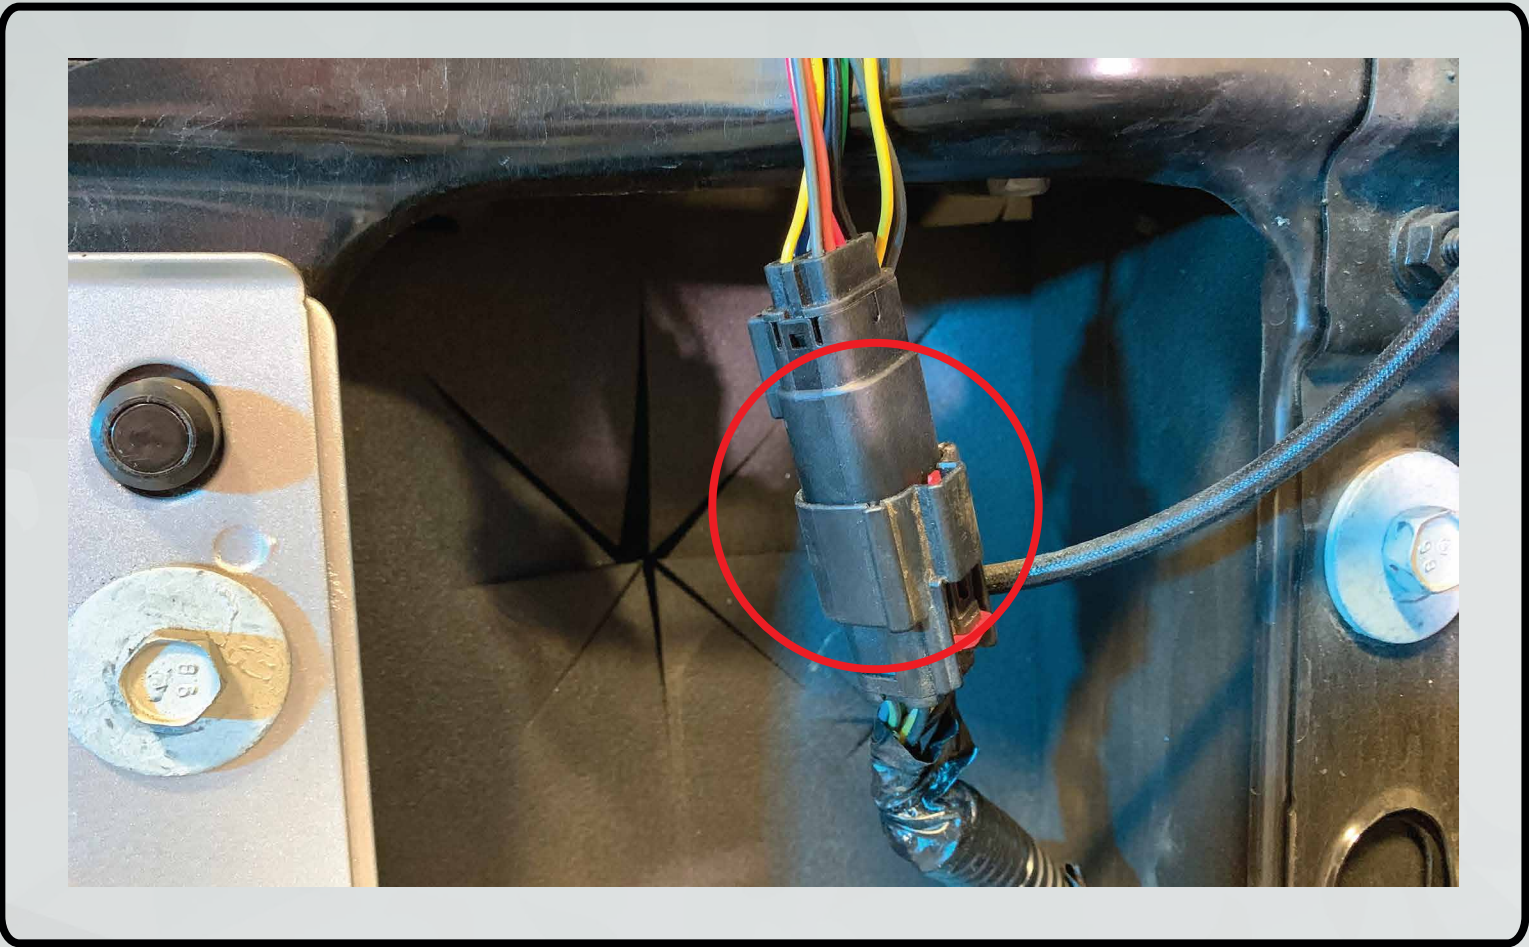


20. Choose whether you want a solid or sequential turn signal. To have a sequential turn signal leave these 2 connectors unplugged. To have a solid turn signal simply plug these 2 connectors into each other.

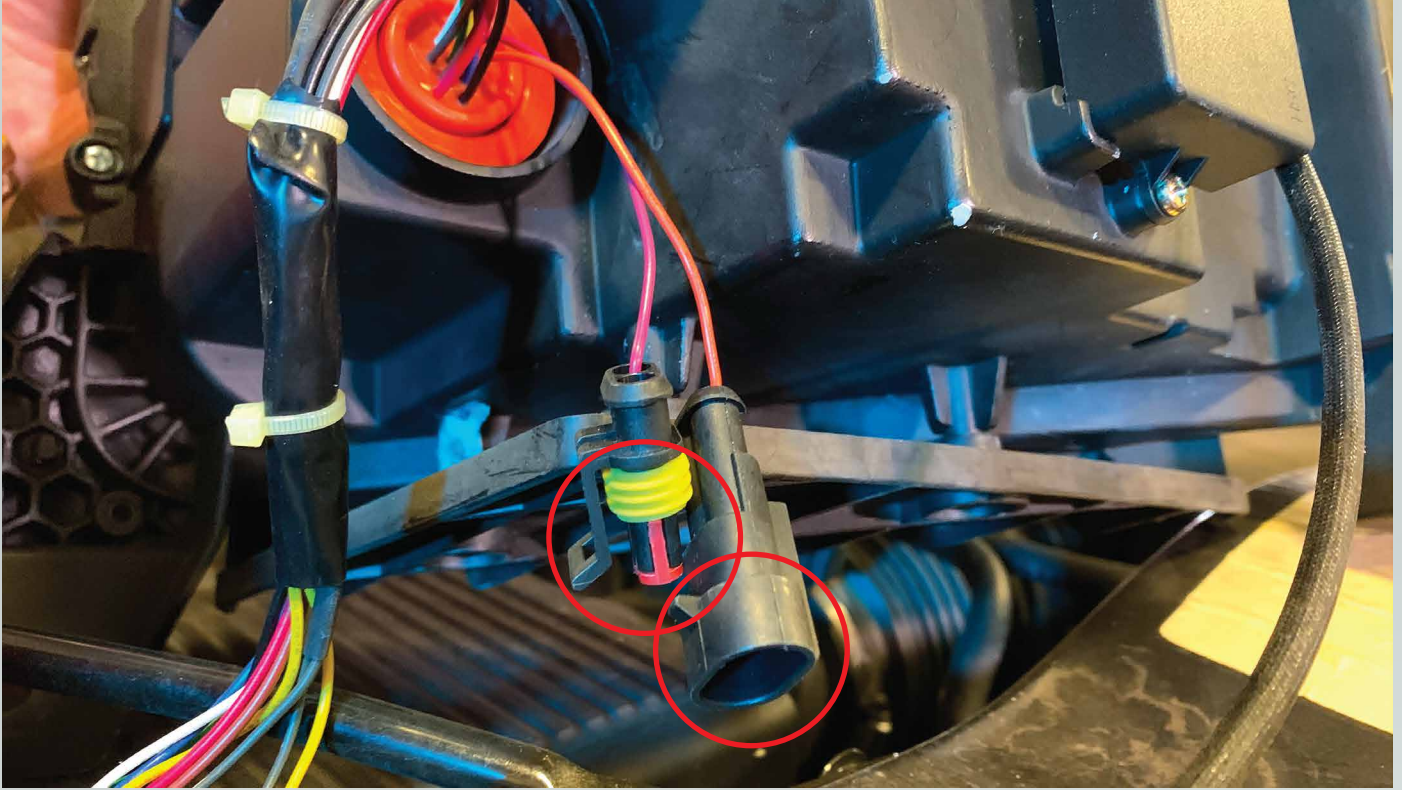


21. Place the headlight in its place on the truck and thread in the bolts.
22. Repeat step 18-21 on the other side of the truck.
23. Turn the truck on and test all of the functions to make sure everything works.
24. Reassemble the truck in the reverse order that you took it apart.

25. To adjust the height of the headlight beam insert a philips head screwdriver into this slot and rotate it clockwise to make the beam go down and counter clockwise to make the beam go up.

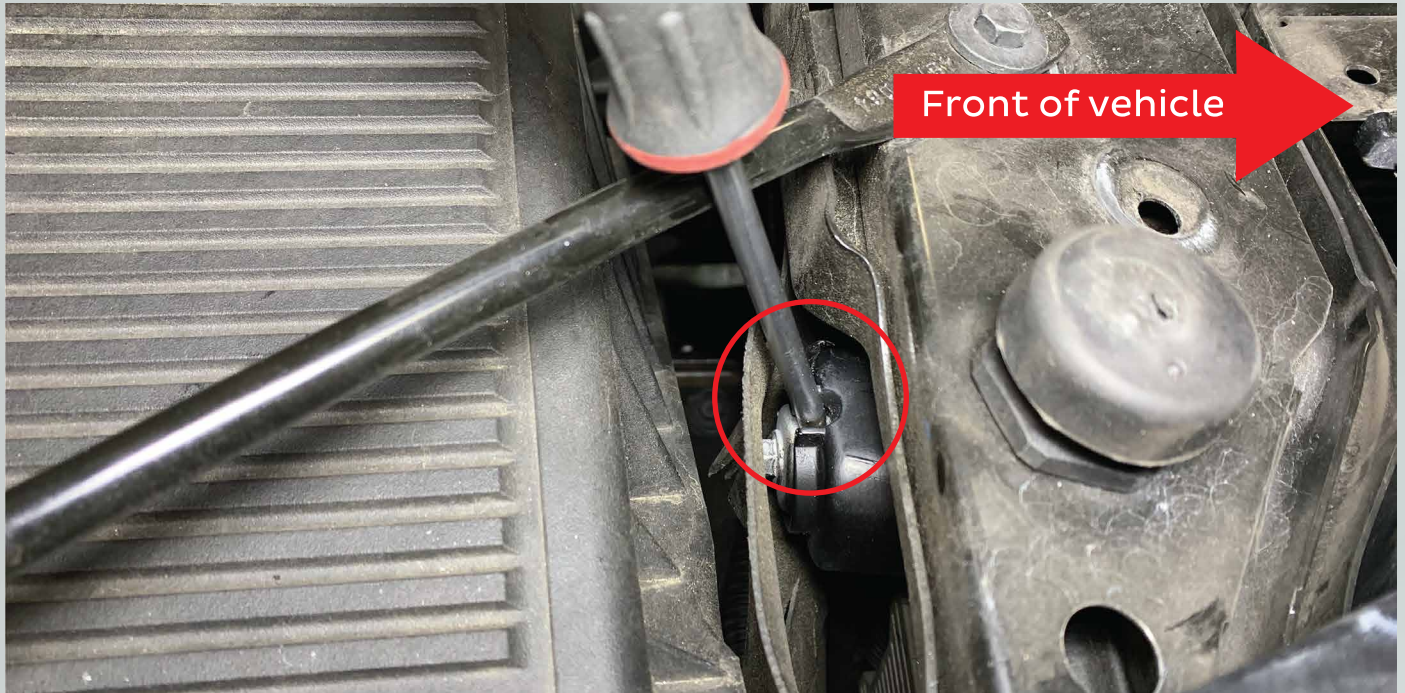

- Please refer to the aiming standards below when adjusting your headlight beam.

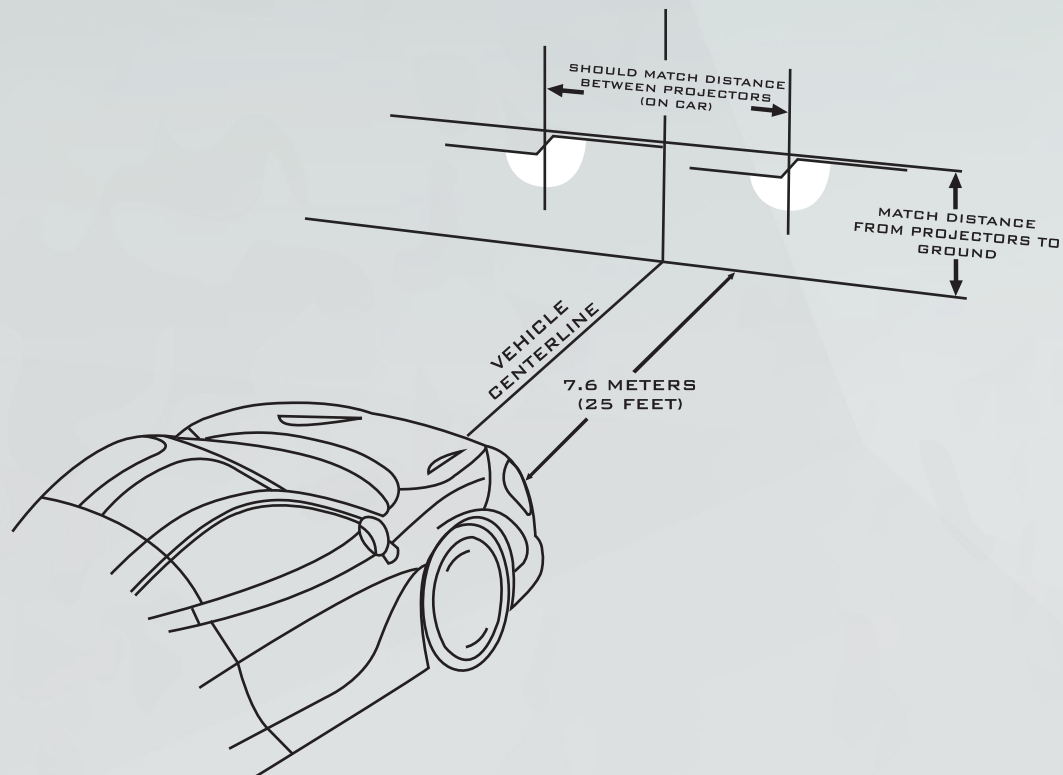

ENJOY YOUR NEW MORIMOTO XB HEADLIGHTS!