



2015-2020 CHEVY TAHOE XB LED HEADLIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES



1 X FUSE TAP / DRL HARNESS



2 X RUBBER TRIM PIECES

IMPORTANT: If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the tail lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these headlights. This is not a defect in the headlight, and caused by un-matched impedance with your original vehicle settings.

2015-2020 CHEVY TAHOE




REQUIRED TOOLS


- RATCHET
- 7MM SOCKET
- 10MM SOCKET
- T20 TORX BIT
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL
- PHILIPS HEAD SCREWDRIVER

INSTALLATION PROCESS


1. Remove the twelve (12) plastic clips holding the grille cover.

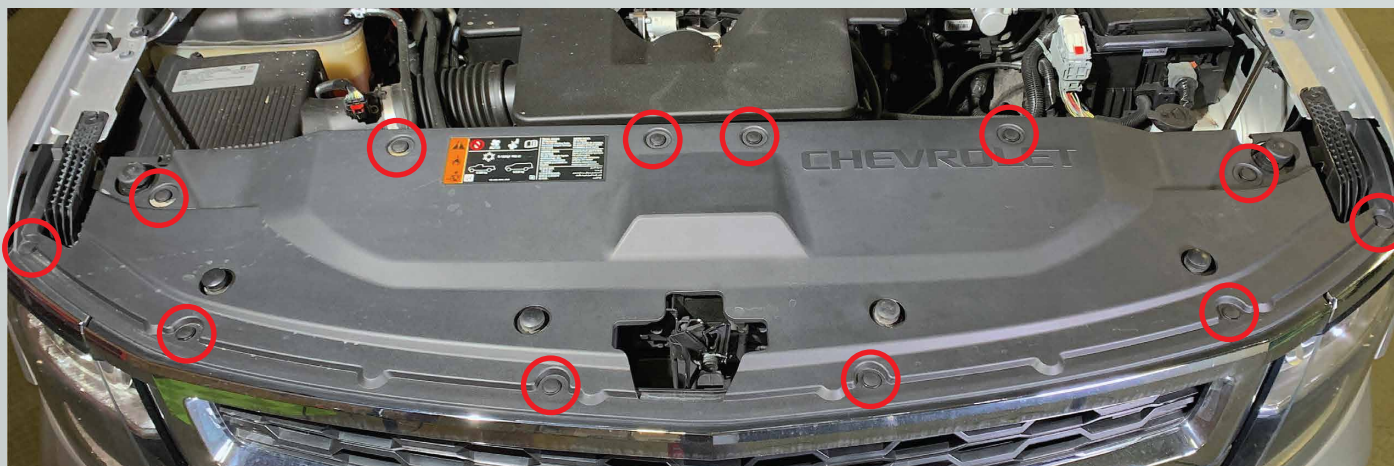

2. To remove clips, take a flat head screwdriver or trim tool and pry up on the head til it stops. Then pry up on the bottom part of the clip to remove it.

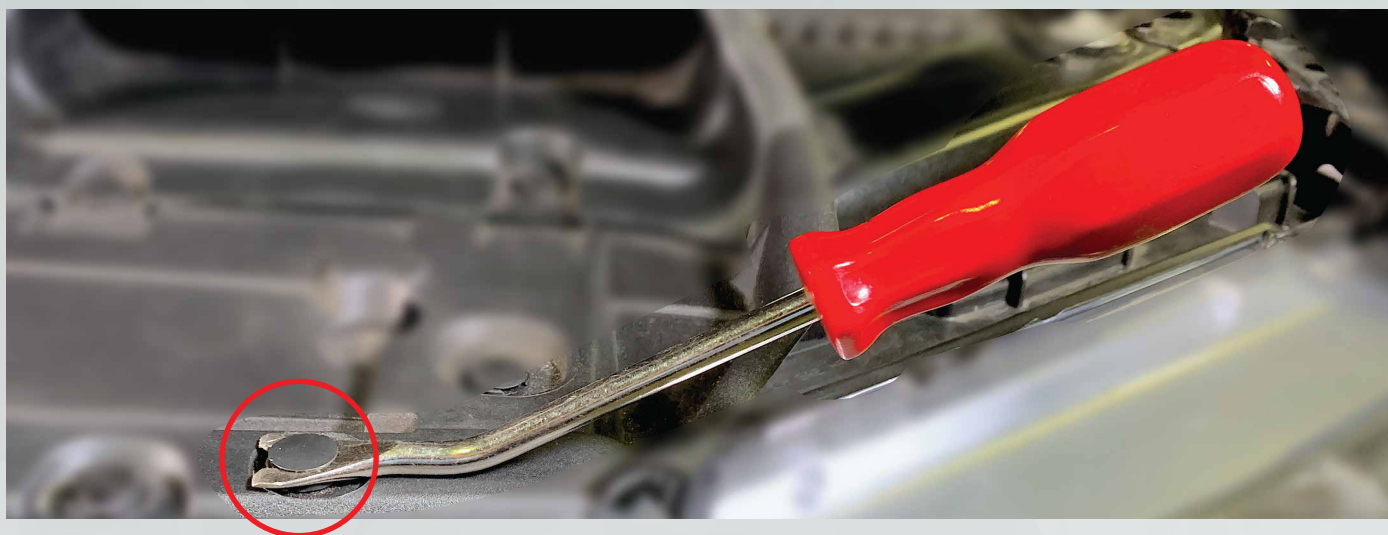


3. Remove these six (6) 10mm bolts holding the top of the grille.

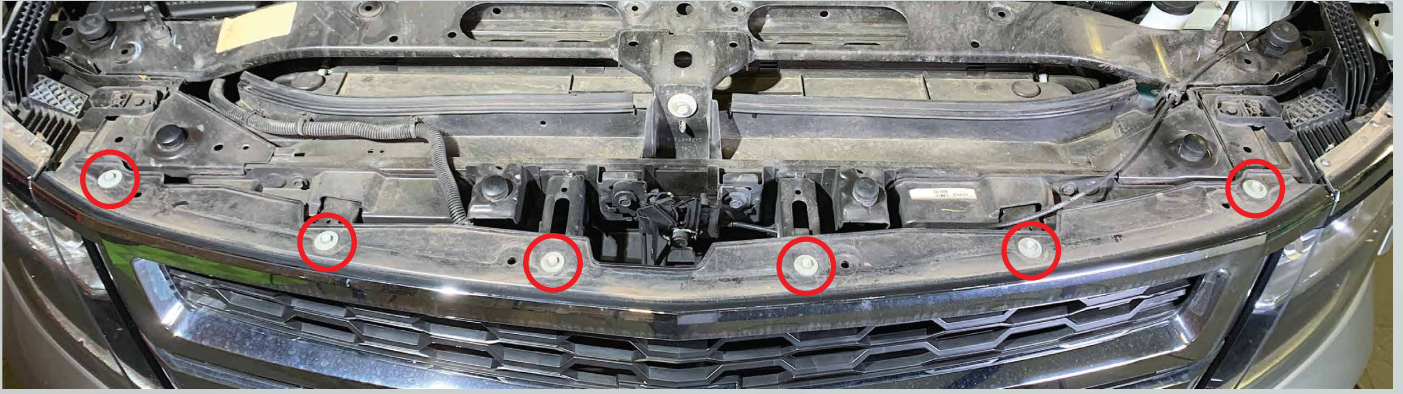

4. Jump over to the wheel well and remove these six (6) 7mm bolts holding the side of the bumper. Repeat this on the other side of the vehicle.



5. From underneath the vehicle, remove these two (2) 10mm bolts holding the middle of the bumper.

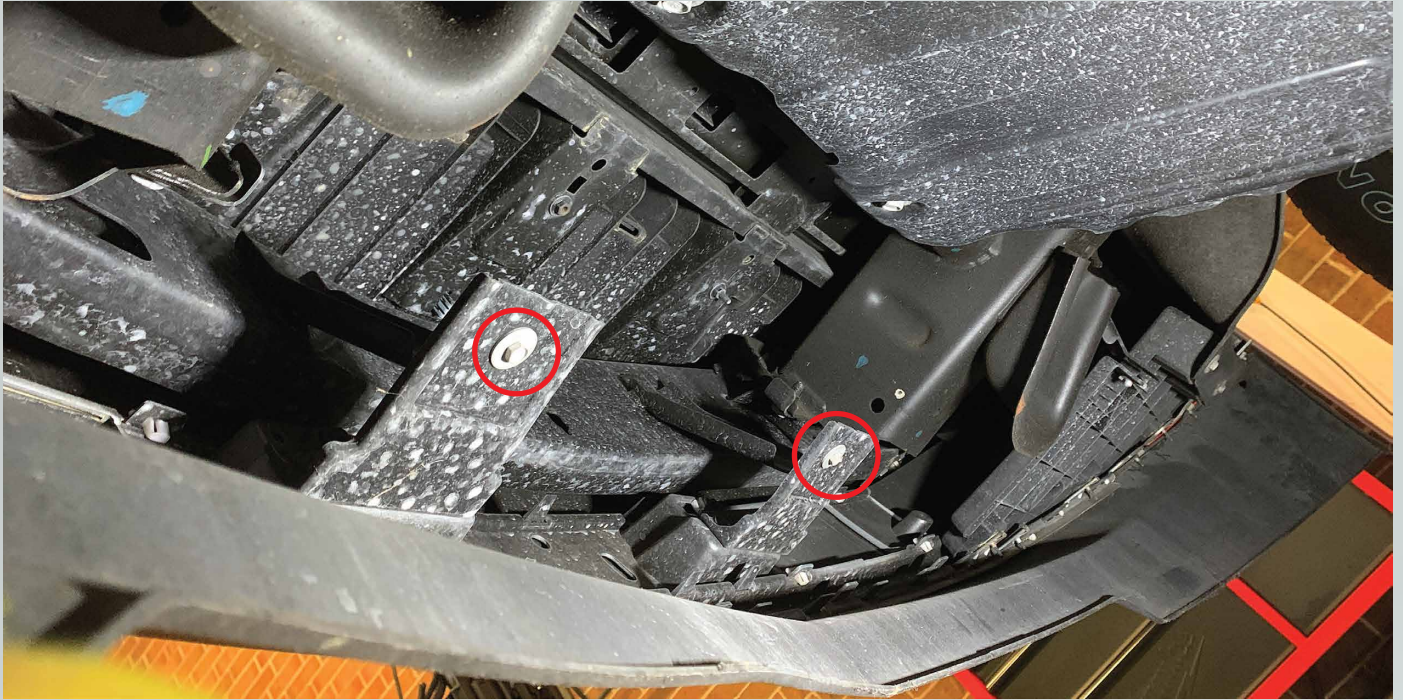


6. Also underneath the bumper, remove these three (3) 10mm bolts and one (1) plastic clip by the fender liner. Repeat this on the other side of the bumper.




7. Pull the bumper away from the fender to release the locking tabs. Make sure you pull the bumper far enough forward so that it releases from underneath the headlight also.



8. Get a pry tool or a flat head screwdriver and pry up in these spots at the top of the grill to release the grille.

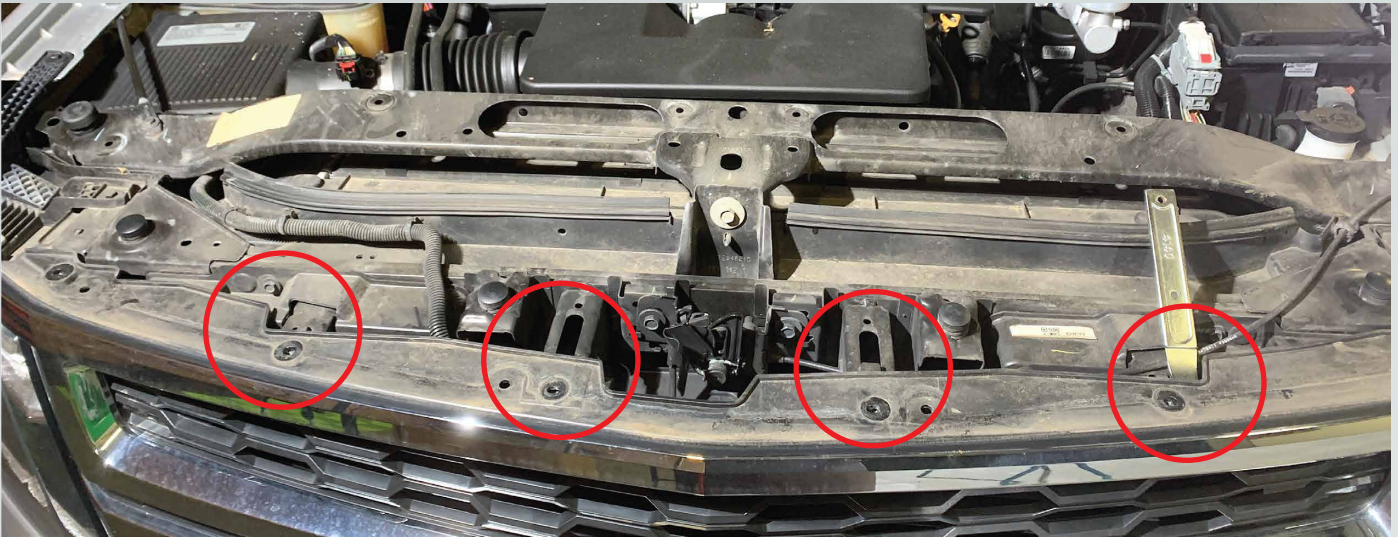

9. Pull the grille forward and locate these two (2) locking tabs behind the grill. With a flat head screwdriver, pry up the locking tab and slide the bumper slightly forward so the tab doesn't lock again.

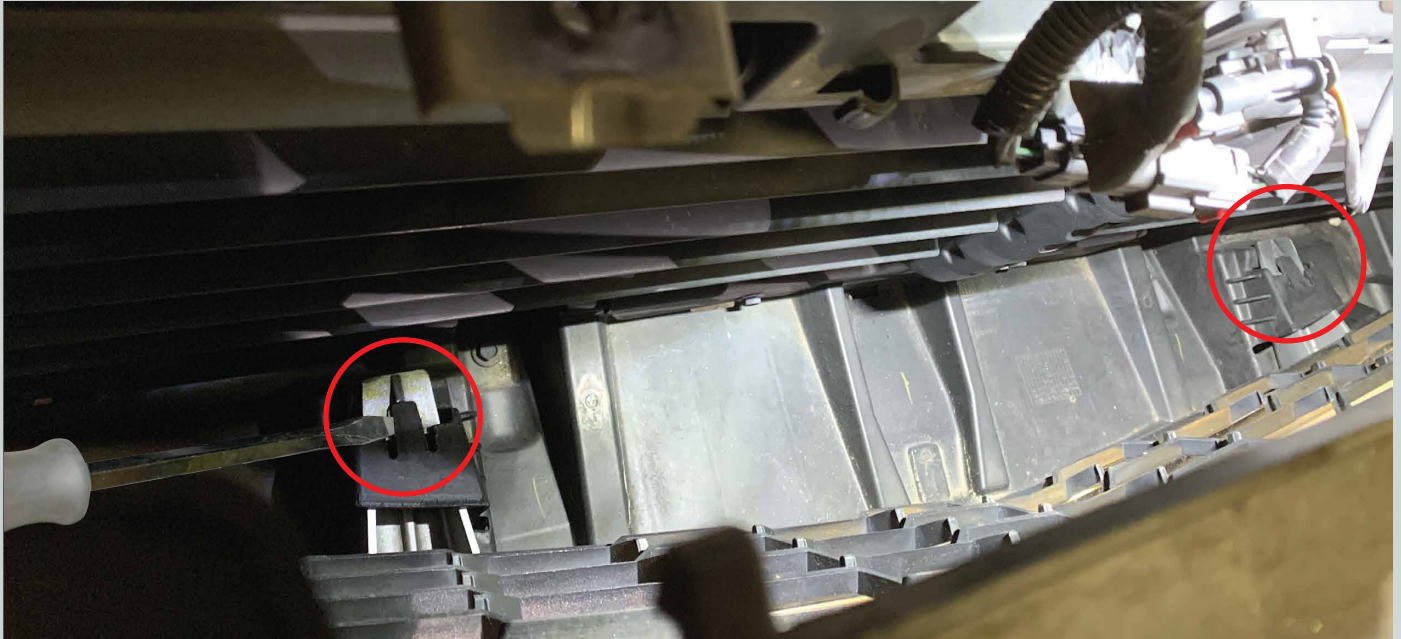


10. If your vehicle is equipped with fog lights you will have this plug at the top of the grille. Unplug this by sliding the red tab to the left, then press down the release tab and pull the connector apart.



11. Remove the bumper off of the vehicle and set it off to the side.


12. Remove these two (2) 10mm bolts holding the top of the headlight.

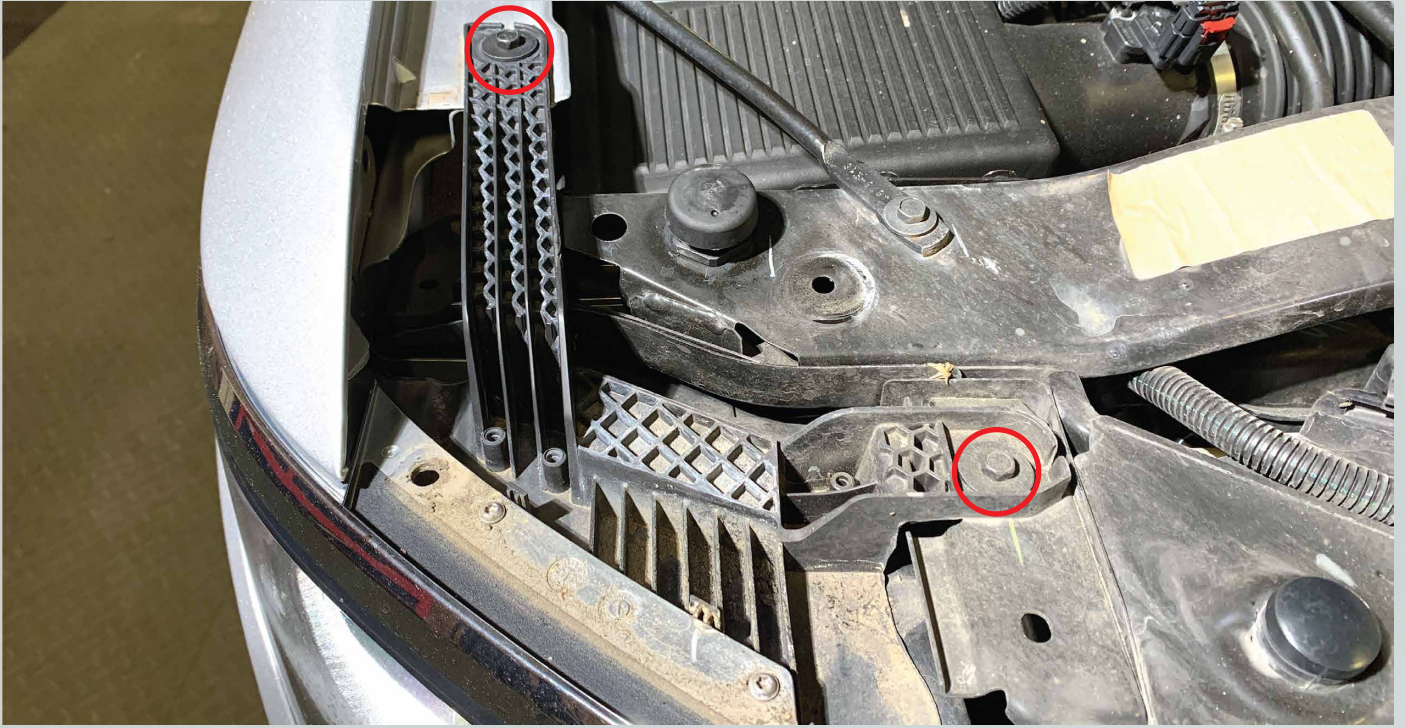

13. Remove these two (2) 10mm bolts holding the bottom of the headlight.




14. Pry up under the top headlight tab to release the top of the headlight.

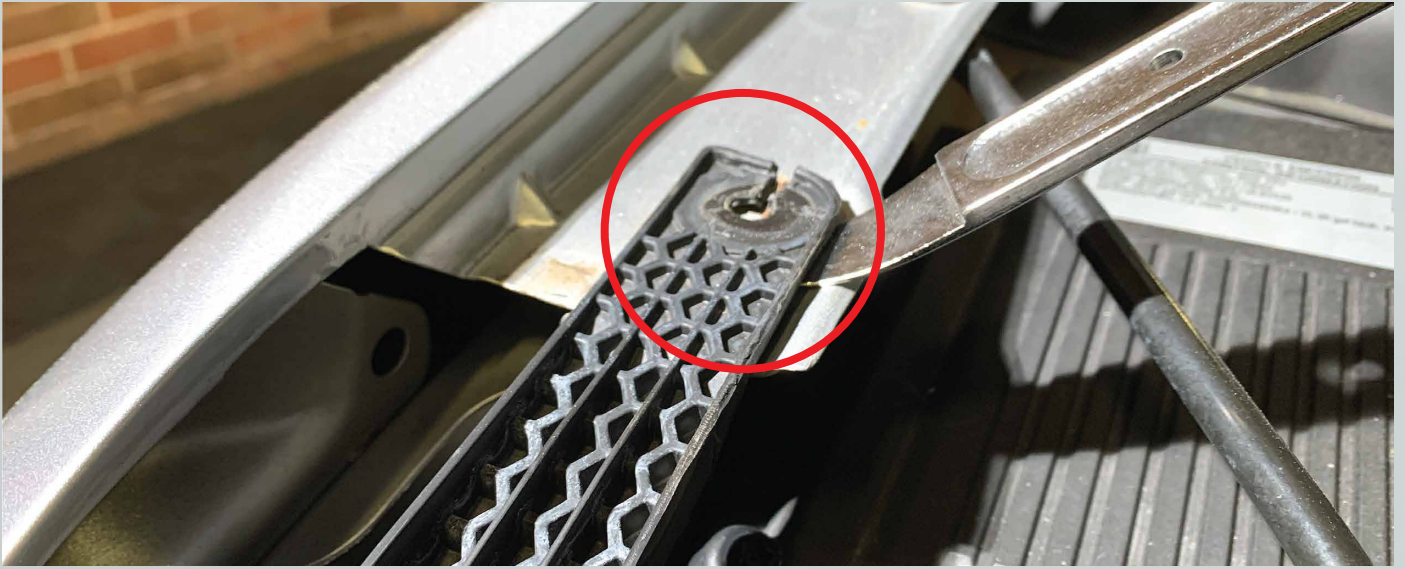

15. At the bottom of the headlight, pry this fender tab away from the headlight to release the headlight. Then slide the headlight forward.




16. Unplug the connector on the back of the headlight by sliding the locking pin back away from the headlight (#1), then press the release tab down (#2) and slide the connector away from the headlight.

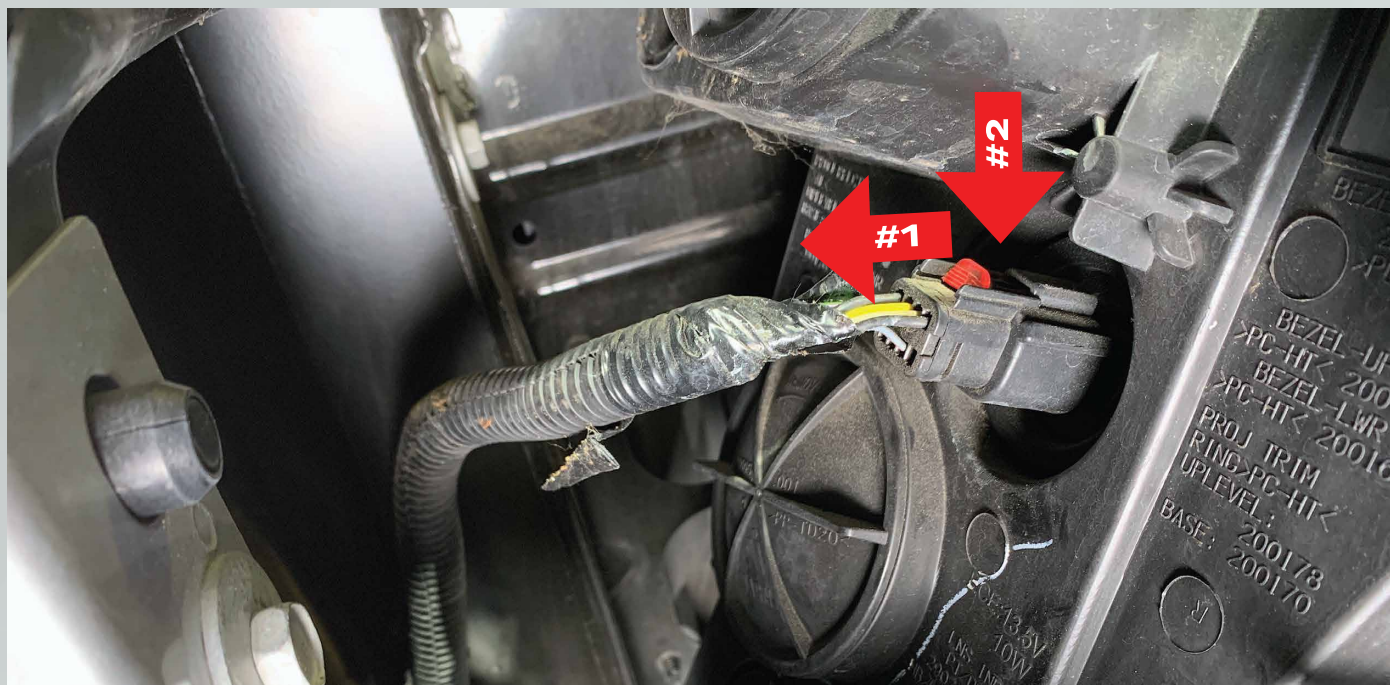


17. Remove the headlight off of the vehicle and repeat steps #12-16 on the other headlight.


18. Locate your fuse box on the driver side of the engine bay, open it, and locate fuse position #75.

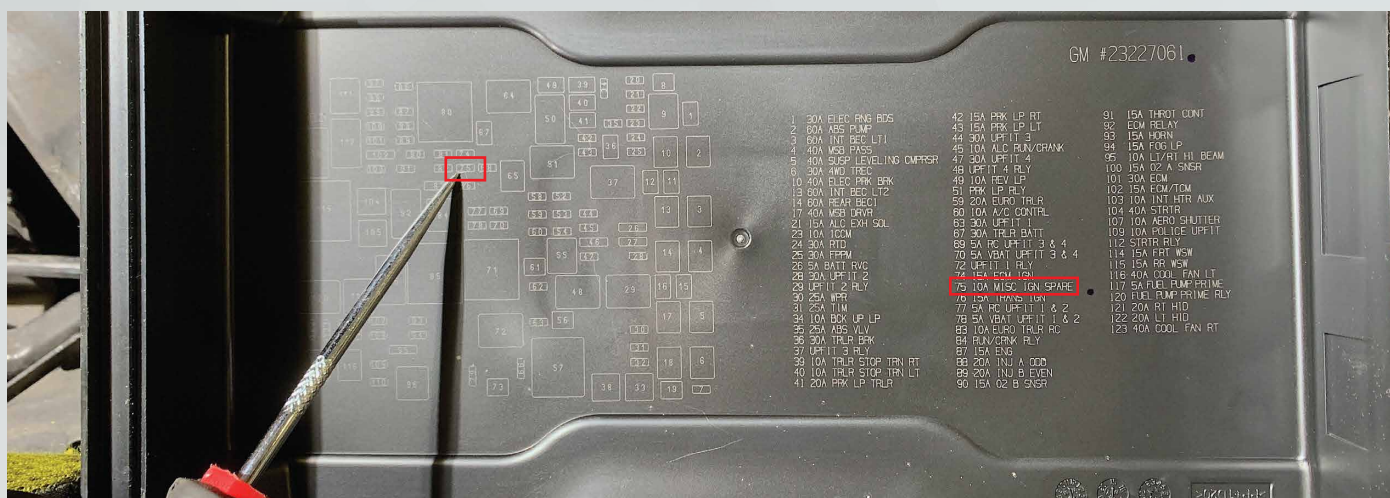


19. Locate the included fuse tap harness. Plug the fuse side into fuse position #75. Then run the shorter wire, of the DRL harness, to the driver side headlight area and run the longer side to the passenger headlight area.

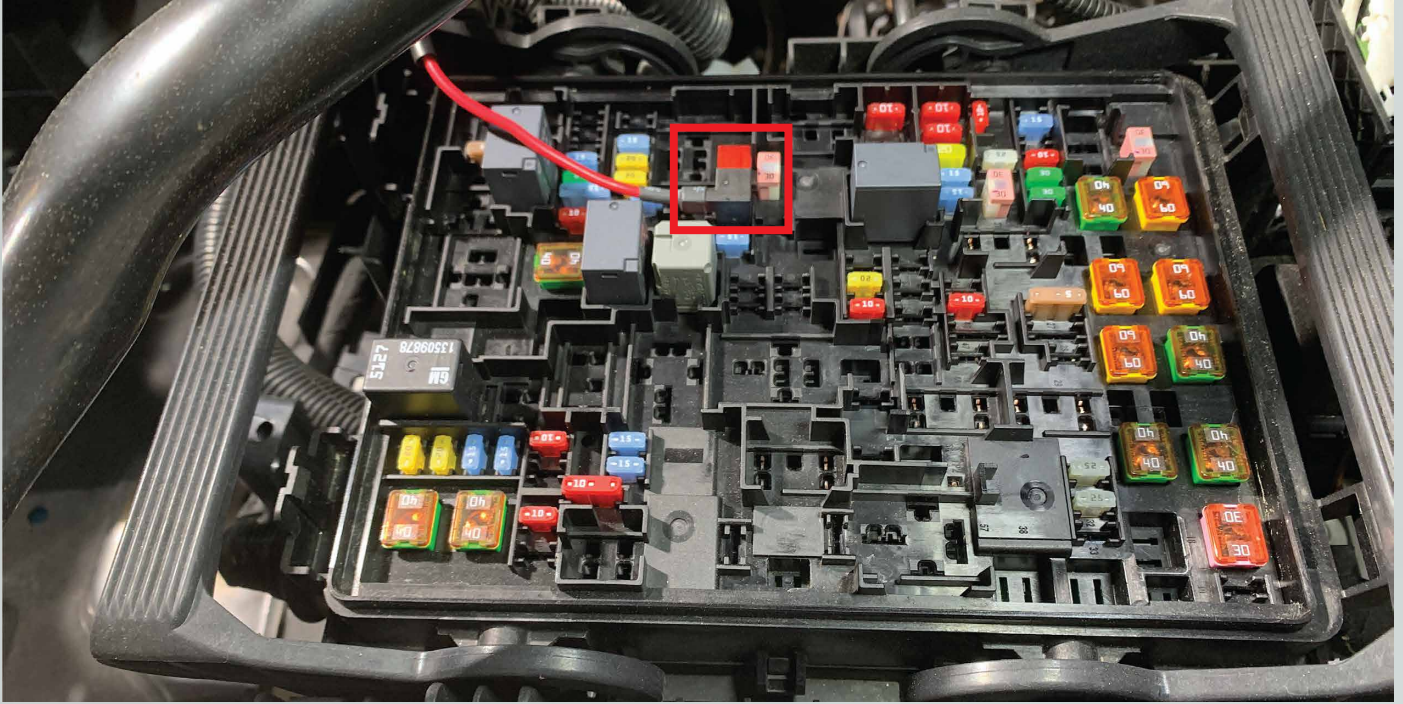

20. With your headlight on a table, remove these three (3) T20 Torx screws and bracket from the bottom of the headlight and transfer them to your Morimoto headlight.

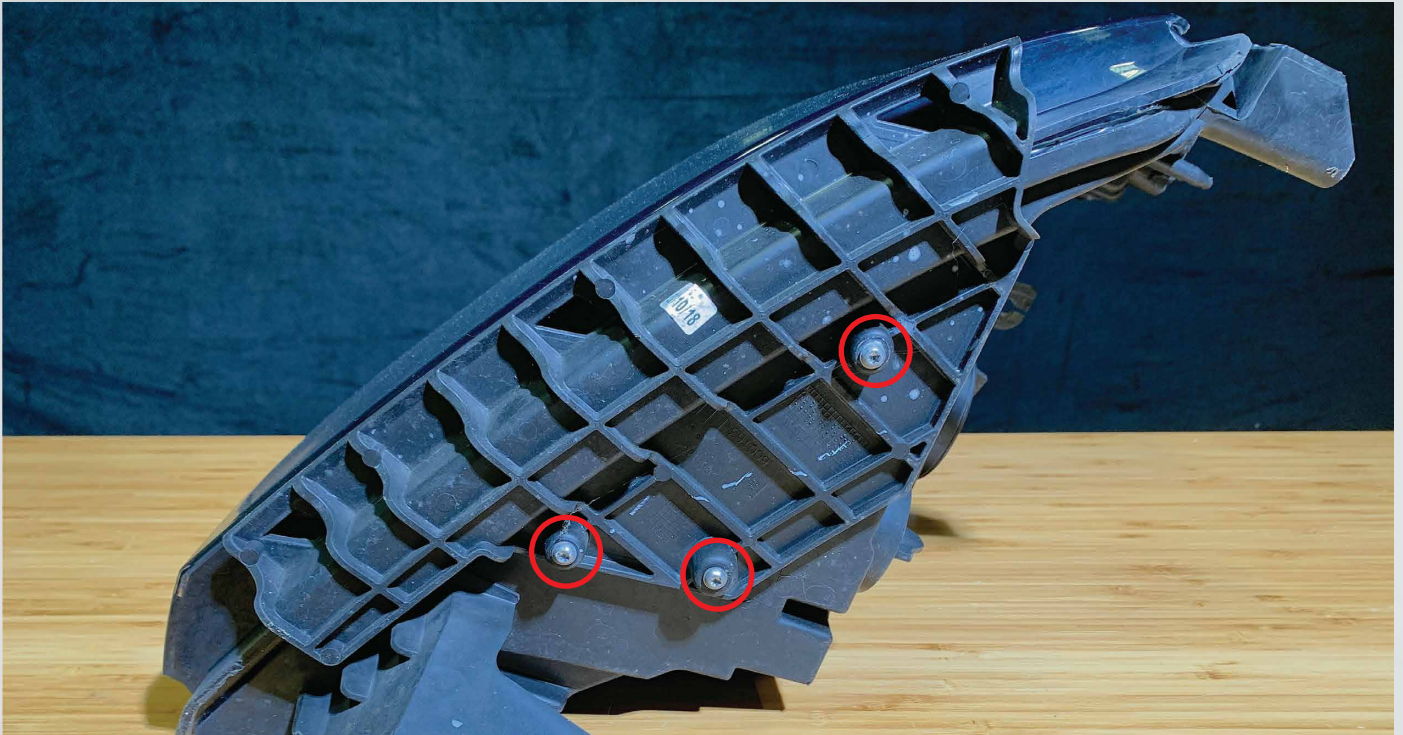

21. On the top of the headlight, remove these five (5) T20 screws.

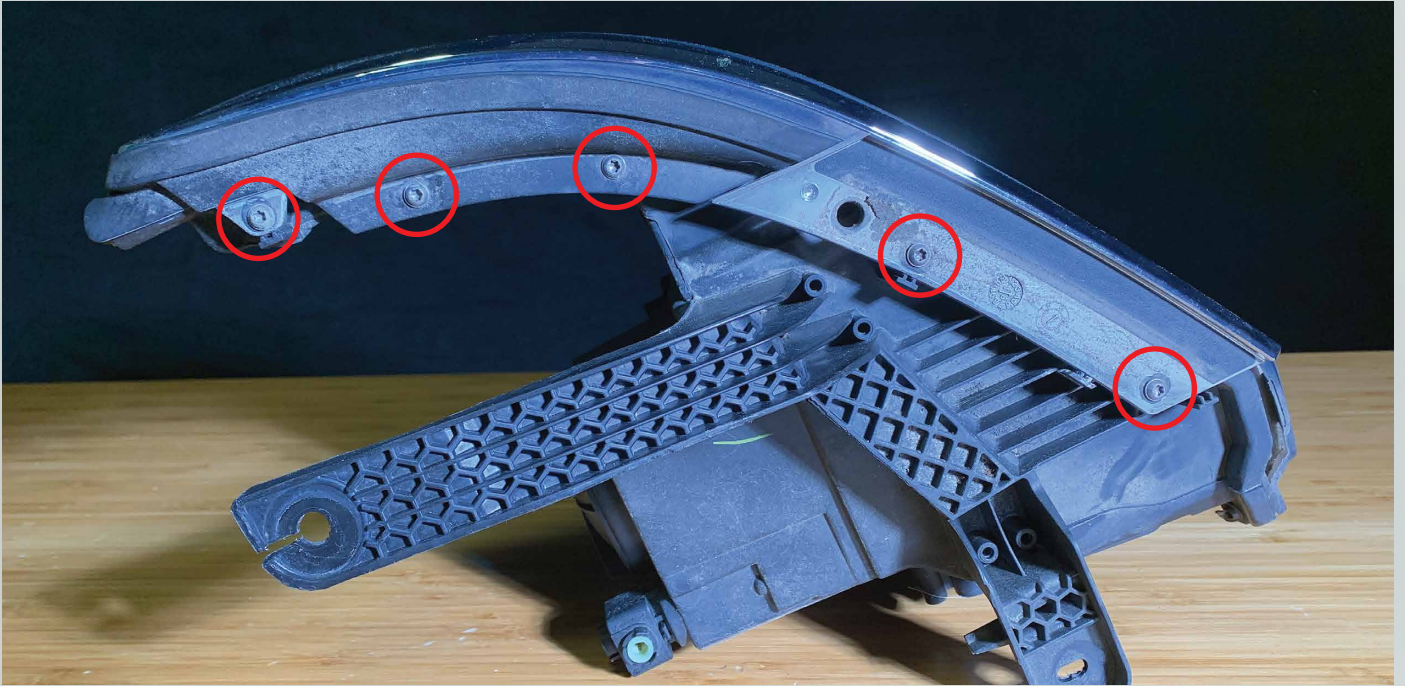

22. Pry up under the chrome trim to release the double sided tape holding it to the headlight lense. Remove the chrome trim piece off of the headlight and swap it over to your Morimoto headlight.




23. Also install the included rubber trim piece over top of the chrome trim piece. Secure the rubber trim via the two (2) T20 torx screws and secure the chrome piece via the three (3) T20 torx screws.




24. Repeat steps #20-23 on the other headlight.

25. Get one of the headlights and bring it over to the vehicle, plug in these two (2) connectors.

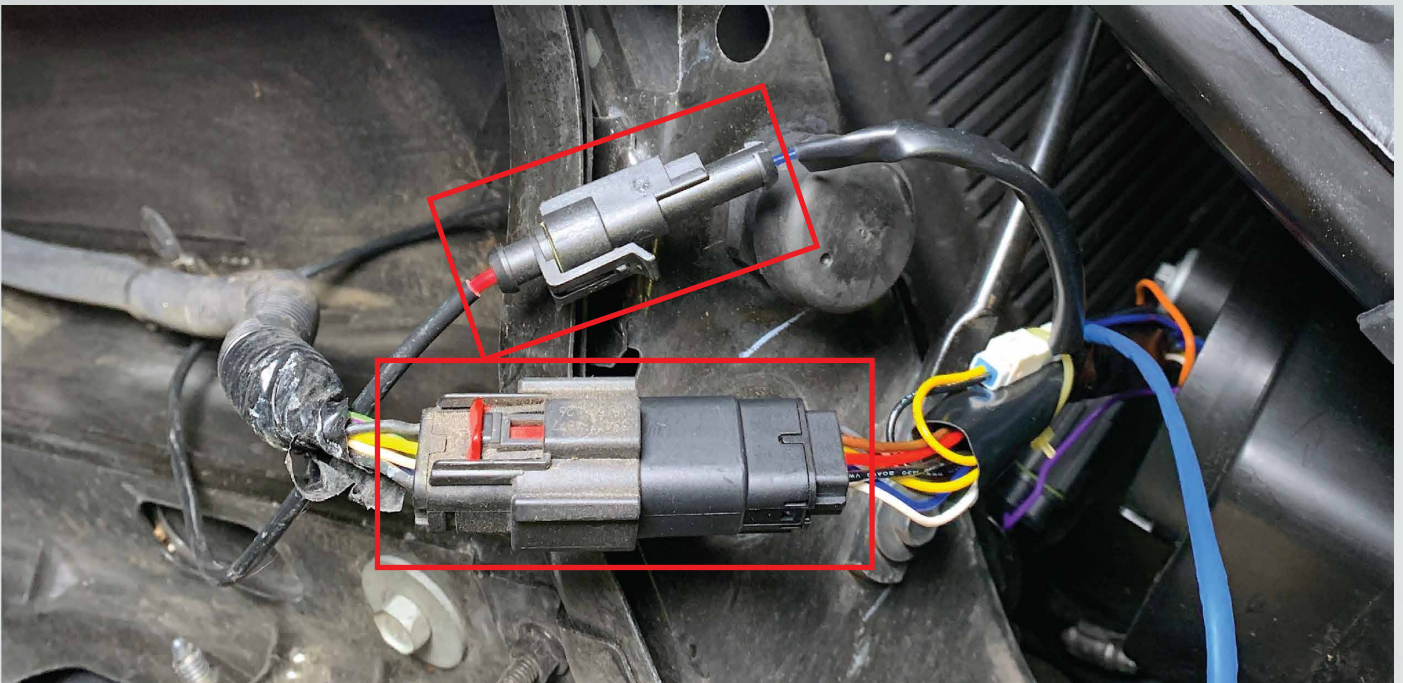

26. Select whether you want a sequential or solid turn signal via this connector. Leave it plugged in for the sequential option, or unplug it for the solid option.

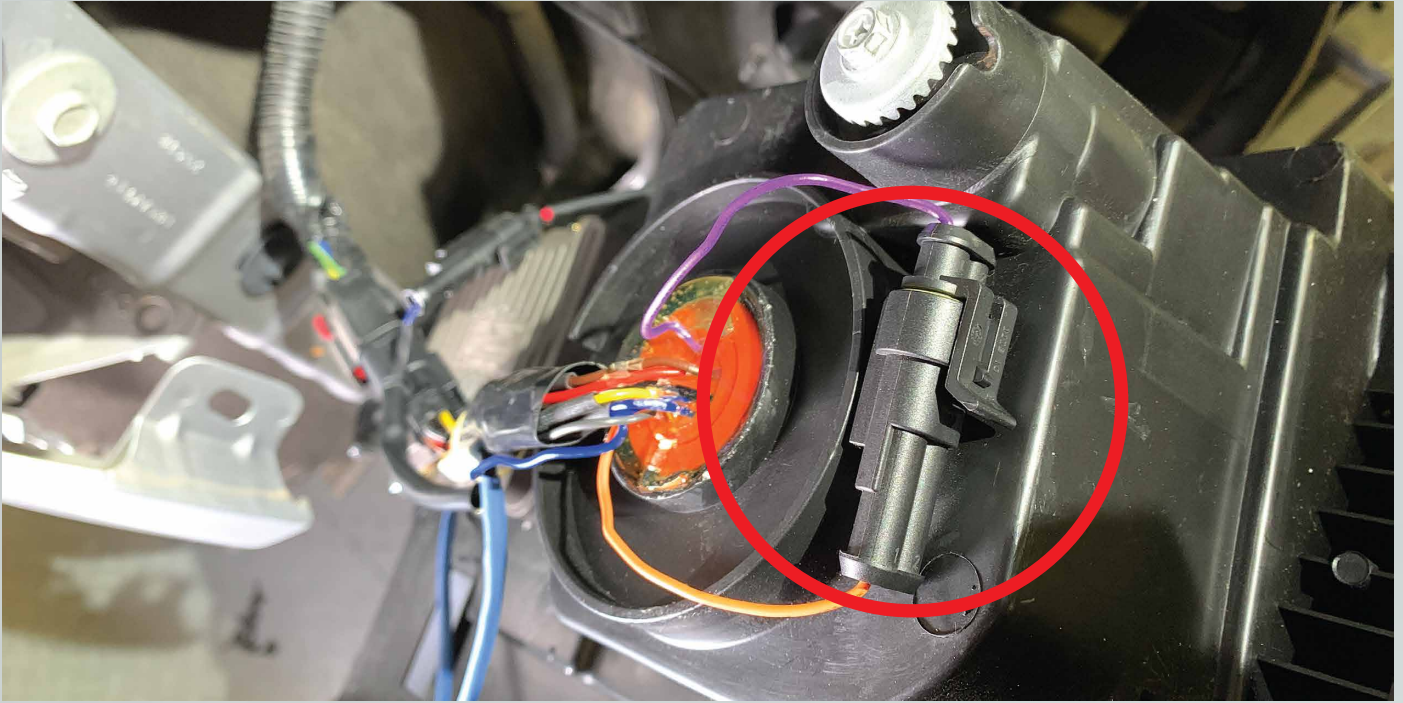

27. Place the headlight in it's place on the vehicle and thread in the bolts.

28. Repeat step# 25-27 on the other side of the vehicle.


29. Turn the vehicle on and test all of the functions to make sure everything works.

30. Reassemble the vehicle in the reverse order that you took it apart.

31. With a philips head screwdriver, adjust the low beam height by rotating this bolt.



- Please refer to the aiming standards below when adjusting your headlight beam.

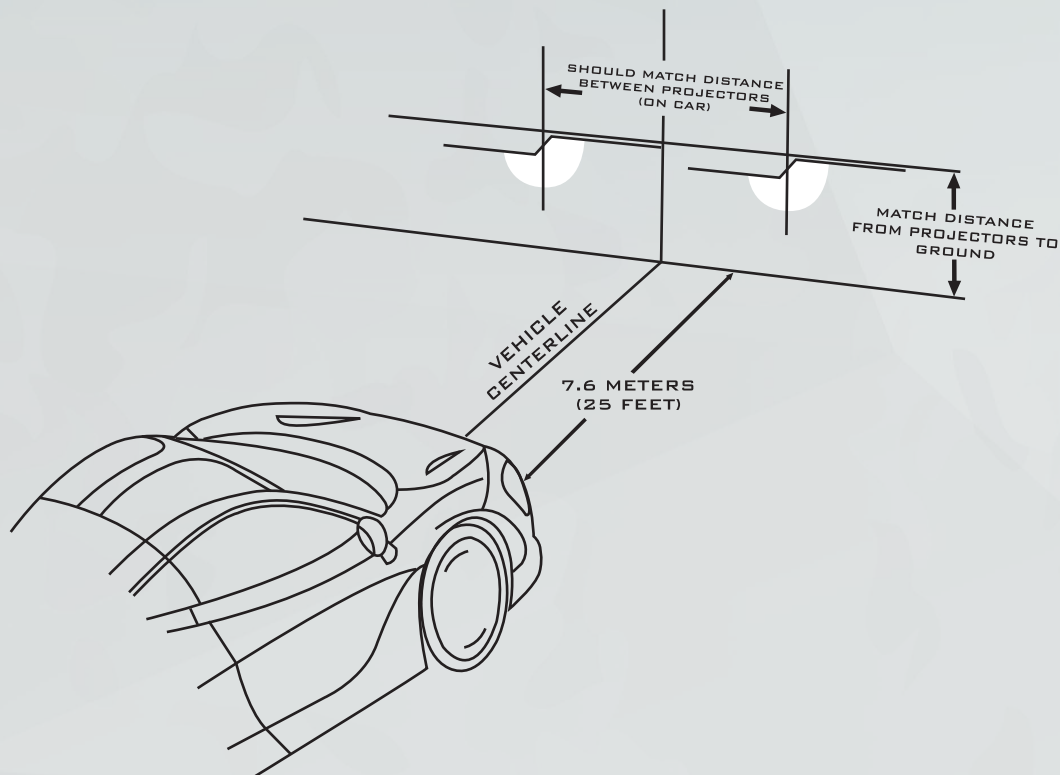

ENJOY YOUR NEW MORIMOTO XB HEADLIGHTS!

