

BRN04CCK : NISSAN TITAN 65" BED (2004+)
BEDRUG® BEDLINER INSTALLATION INSTRUCTIONS
WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER
FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!


1. Read all instructions before installing.
2. NOTE: TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENERS TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.
3. Remove factory tie down hooks ('04 - '15 models), tailgate cover and plastic liner (if equipped).
4. Remove BedRug floor, siderugs, floor rib filler strips, and installation kit from box.
5. For 2016 and newer models, attach six (6) 1 3/4" wide floor rib filler strips, and two (2) 3 3/4" wide floor rib filler strips to location on foam side of BedRug floor with double sided tape included in the kit. Floor rib filler strip locations are scored as dashed lines into backside of part. For 2015 and older models, attach four (4) 2 3/8" wide floor rib filler strips and two (2) 3 3/4" wide floor rib filler strips to locations on foam side of BedRug floor with double sided tape included in the kit. Floor rib filler strip locations are scored as solid lines into backside of part. For models without Utili-Track Bed System, attach four (4) 1 3/4" floor rib filler strips, stacked (2) pieces thick, in deep areas.
 NOTE: The floor rib filler strips fit both Titan bed sizes. Score lines indicate where to cut the strips for the Crew Cab versions.

For models with Utili-Track Bed System, discard four (4), 1 3/4" wide floor rib filler strips, and cut along bold perforation only (see Illustration 1.1).


6. If truck is equipped with the Utili-Track Bed System:
 - A. Cut top edge of bulkhead panel just below the top strip of loop where part will fit below Utili-Track rail. (see Illustration 1.2) Be sure not to cut any sewn seams!

Attach two (2) 1 3/4" filler strips on top of each other in each of these areas. Discard the four (4) filler strips if the vehicle has the Utili-Track rails.

IMPORTANT: DO NOT CUT OUTER PERFORATIONS. THESE ENABLE MATERIAL TO FOLD UP IF UTILI-TRACK BED SYSTEM IS ARE USED.

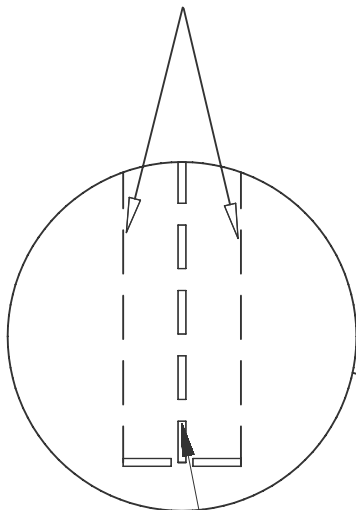

Cut along **BOLD** perforations **ONLY** if Utili-Track Bed System rails are to be used.

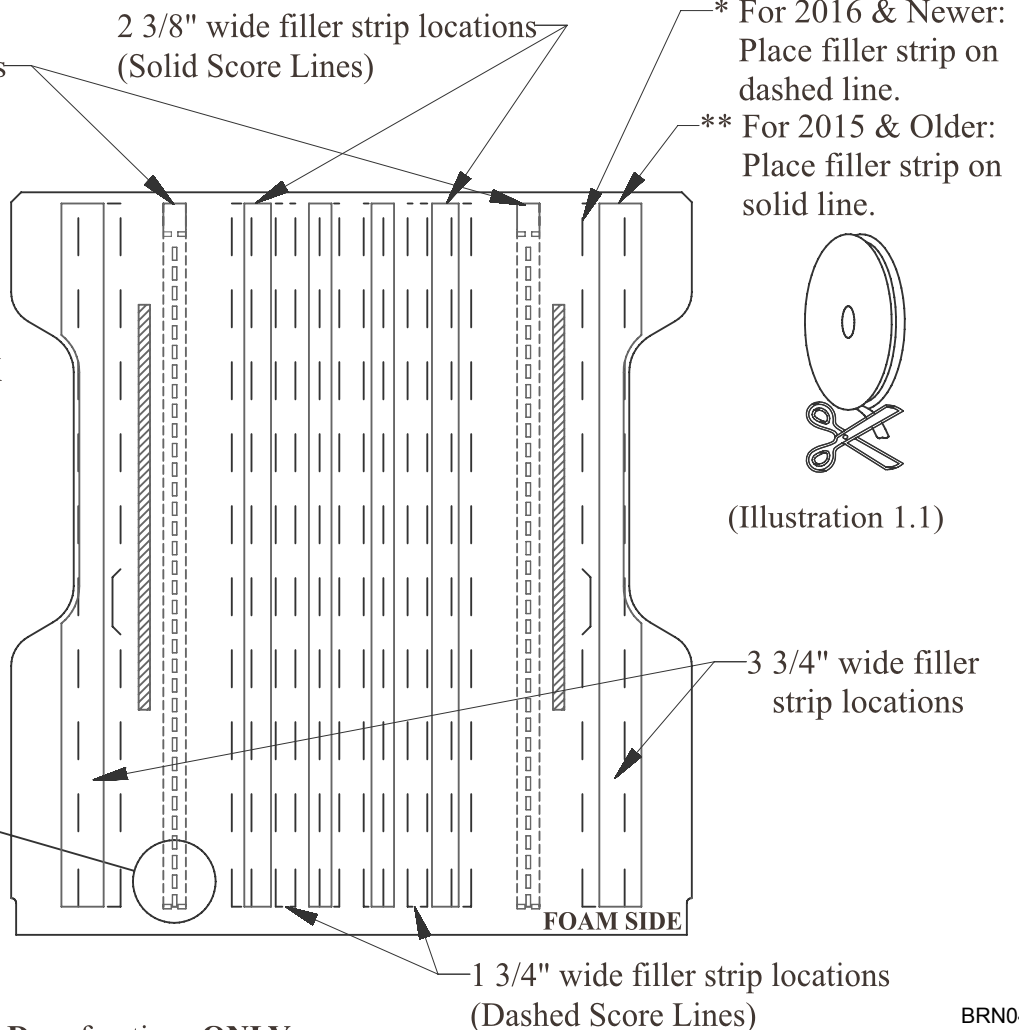

* For 2016 & Newer: Place filler strip on dashed line.


** For 2015 & Older: Place filler strip on solid line.



(Illustration 1.1)

- B. Cut along premarked lines on each sidewall in order for liner to fit around Utili-Track rails. (see Illustration 1.2) Be sure not to cut any sewn seams!
- C. Cut access hole on score line for power outlet (if equipped).
7. Zip BedRug floor and siderugs together to form the one-piece soft bed liner.
8. Attach self adhesive backed hook fasteners to the loop per Illustration 1.2. For siderugs, be sure to place the 2" long hook fasteners at the locator marks which are molded into the foam.

HOOK FASTENER LOCATIONS / UTILI-TRACK INSTRUCTIONS

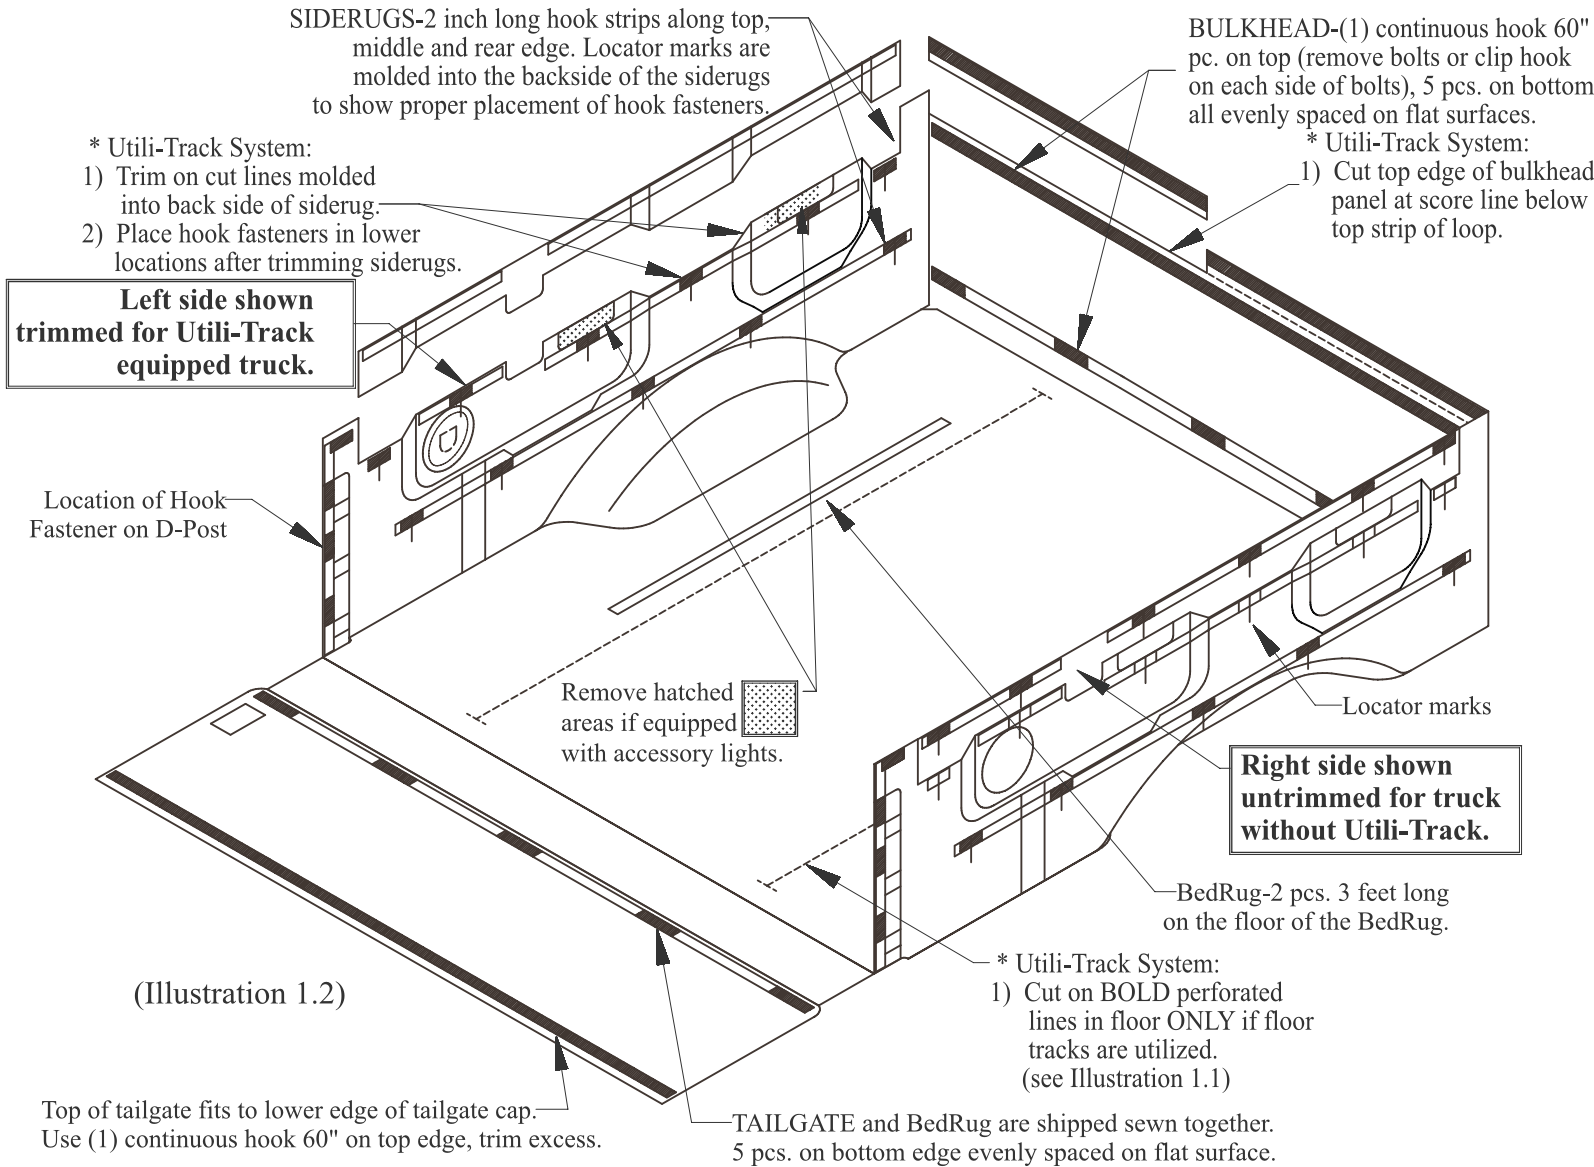

(Illustration 1.2)

Refer to (Illustration 1.2) for completing steps 8-14

9. Lay the BedRug soft bedliner in the bed of the truck to determine the exact location and fit. **IMPORTANT:** Never cut or put slits through any seams or sewn areas of the BedRug. This will cause the seam to come completely apart.
10. Roll one side of the BedRug floor up exposing the area where the 3' strip of hook fastener is to be adhered.
11. Using a clean lint-free cloth, clean this area thoroughly using NON-PETROLEUM based solvent. Then with a separate cloth, clean the same area again with alcohol. If the cloths become visually soiled, replace them with clean ones.
12. Lay the BedRug down, then **FIRMLY** rub the fastener(s) down **VERY AGGRESSIVELY** to assure full engagement of the fastener(s) and the adhesive.
13. Repeat steps 11 and 12 for the opposite side of the BedRug floor.
14. Repeat steps 11 and 12 on the bulkhead.
15. Repeat steps 11 and 12 on the siderugs.
16. Repeat steps 11 and 12 on the tailgate.

BEDRUG[®] CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

Cleaning your BedRug is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug Inc. customer service at 800-462-8435.

Retain this cleaning information with your vehicle owner's manual for future reference.

LIMITED WARRANTY

BedRug Inc. warrants BedRug[®], BedTred[™], VanRug[™], and VanTred[™], for pickup trucks and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact BedRug Inc. Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

**Retain this warranty information with your vehicle owner's manual for future reference
FOR WARRANTY SERVICE CALL 1-800-462-8435**

PRODUCT REGISTRATION

Thank you for purchasing your BedRug product! We would appreciate it if you would take a few minutes to register your purchase. Registration allows us to provide, with your permission, important updates, service information, helpful hints or warranty service should you ever require technical support. BedRug offers the option of returning product registration forms electronically, rather than having to fill them out by hand. You can be assured that BedRug does not share or sell the information you provide. Save a copy of your sales receipt. Activate your warranty by registering your product online at <http://www.bedrug.com/customer-service/product-registration.html> or by scanning the QR code. You will need the 6-digit lot and date code found on the underside of the tailgate, see example.



PN **TGC07**
DESC 07+ GMT900 TAILGATE
WO#511247 LOT # 123456
DATE: 04/13/12 TR# S1E123
MADE IN USA