





Installation Instructions

Overland Utility Rack Part# RB01B

Components

	Description	Qty
	Side Racks	4
	Cross Member - Front	1
	Light mounting bracket - Rear	1
	Top Racks	2
	Base anchors	4
	Top angle brackets	4
	Base Plates	2
	LED Cube Lights	2
	Mounting Hardware	
	M10 x 35 Hex Head Bolts	12
	M10 Spring Washers	12
	M10 Flat Washera	12
	Bed Rail Clamps	6
	M10 Hex Nuts	72
	M10x30 Hex Head Round Screws	72

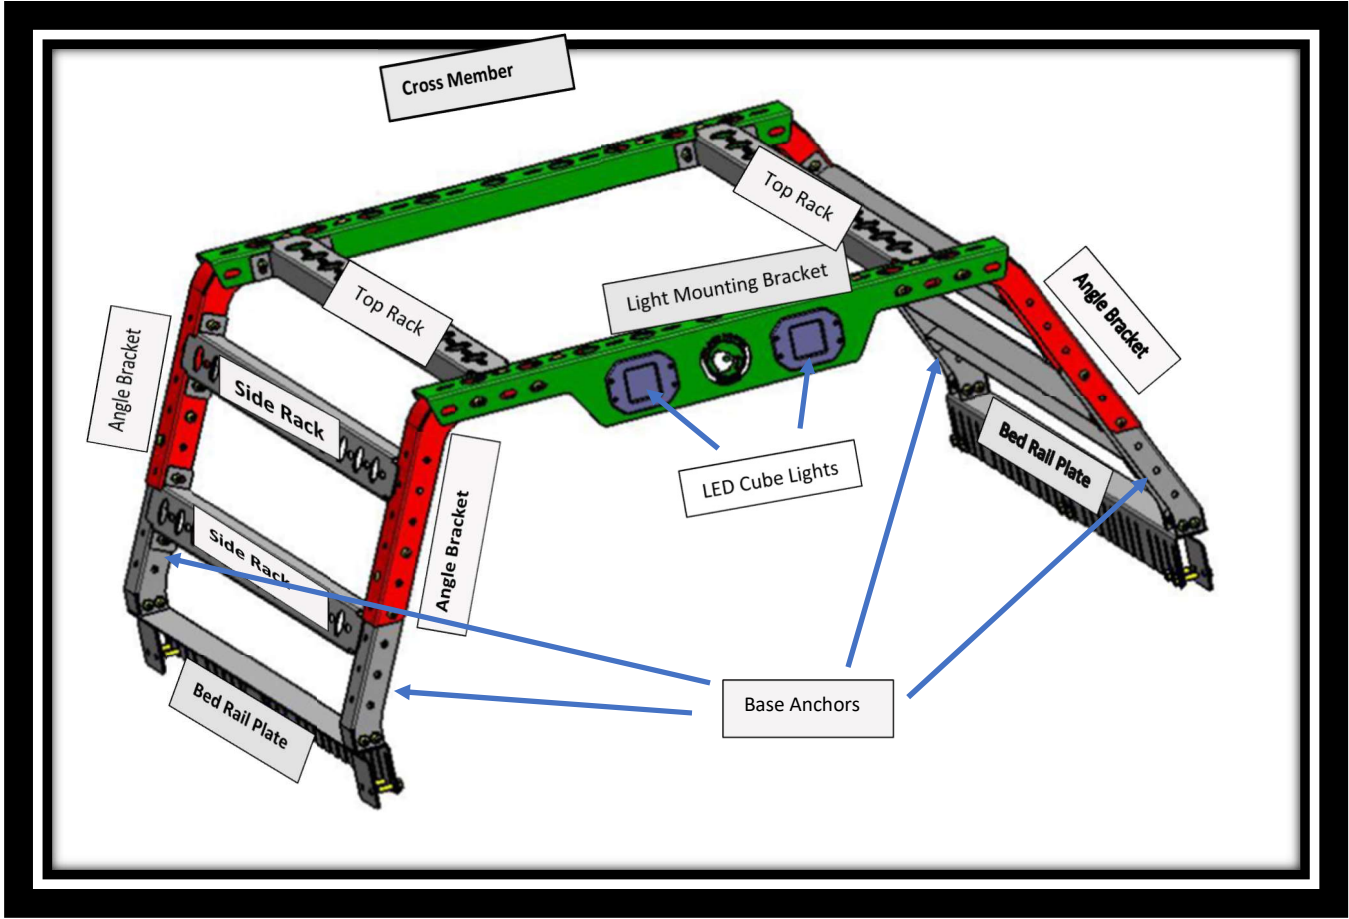

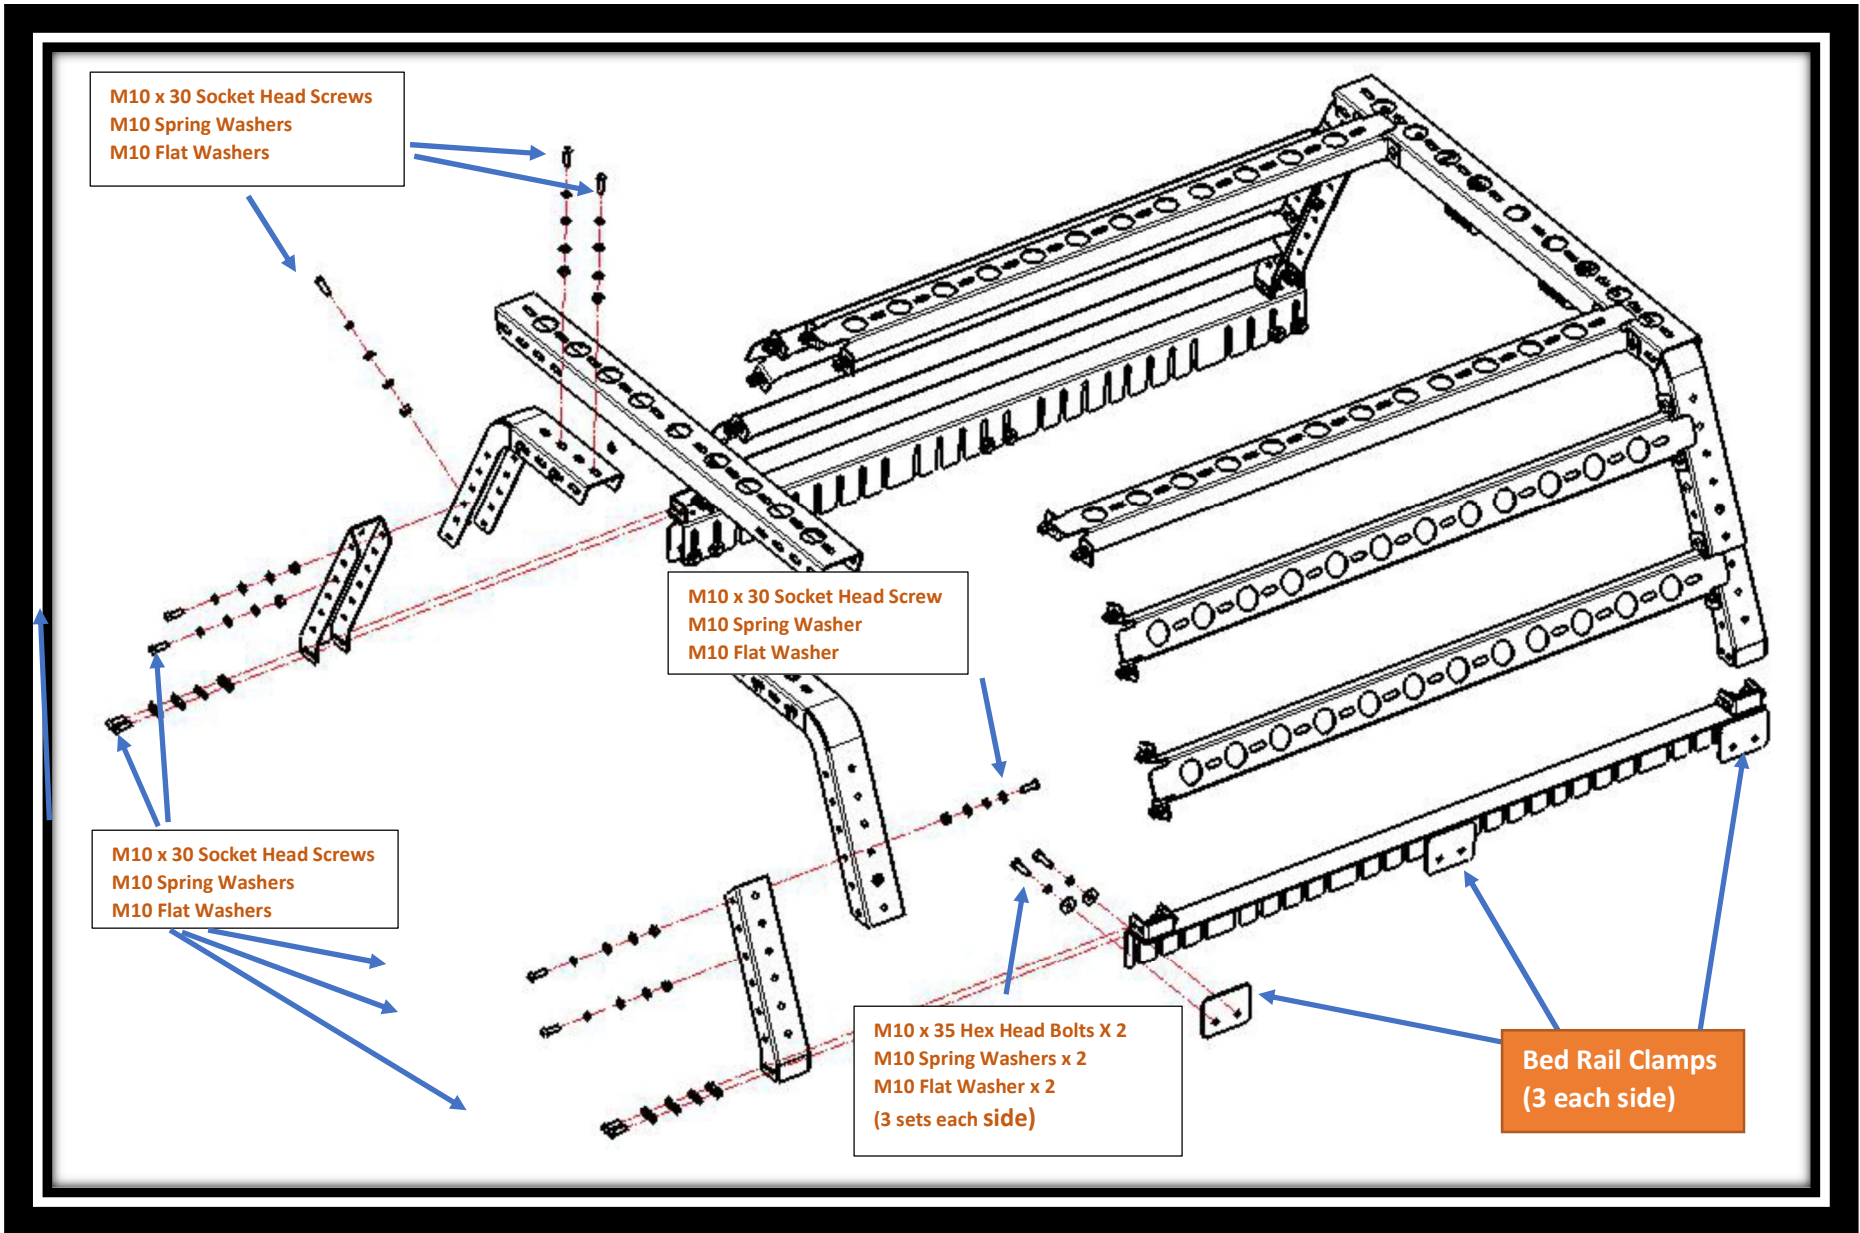

Installation Instructions

1. Do not tighten down any of the hardware until the installation is complete, then starting at the bottom tighten everything down.
2. Mount the 2 Bed Rail Plates to the bed rail using the six clamps provided, locate the clamps as close as possible to the front back and center do not tighten down as they may need adjusting backwards or forwards.
3. Install the front components to ascertain optimum distance from the cab ,and adjust the width choosing the Angle Bracket holes for a snug fit
4. Install the two base anchors, then the two lower Side Racks ,using the 'T' Slot mounting system
5. Install the remaining two rear Angle Brackets ,then the two Side Brackets
6. Attach the two Top Racks into the front 'T" Slots ,and then before mounting the Rear Light Bar attach the Top Rack rear'T' slots into the light bar.
7. Attach the Light Bar to the Rear Angle Brackets
8. Check the installation ,make sure the bars are parallel to their counterparts , the bed rail plates are parallel to the bed rails and make any final adjustments
9. Install the LED Cube Lights, wiring harness and switch per the instructions with the light .