
INSTALLATION SHEET

REAR INNER WHEEL WELL LINERS RUGGED LINER 2021+ FORD RAPTOR LIST OF CONTENTS: (A) 1 - Driver Side Wheel Well (B) 1 - Passenger Side Wheel Well LIK81 KIT: (C) 4 - J-Clips (D) 4 - Screws **Driver Side Wheel Well (A)** Passenger Side Wheel Well (B) **TOOLS REQUIRED:** MISSING PARTS??? Call Rugged Liner at • Ratchet using 7mm socket in step 4. • Ratchet using 10mm socket in step 7. 800-433-3604 Any required parts will be shipped to you directly. (DO NOT return whole kit to store) PLEASE READ INSTRUCTIONS CAREFULLY **VEHICLE PREPARATION:** 2 1 **BEFORE STARTING THE INSTALLATION.** It is important that all areas One person can perform the installation. where the wheel wells mount are clean and free of debris prior to installing. 3 For Trucks with Mud Flaps: Remove mud flaps Start on the driver side using a ratchet with 7mm 4 before installing wheel well liners. Then follow socket to remove the (8) fasteners around the steps 4-7. Re-install mud flaps. factory flare opening (Save the fasteners). Locate the two holes at the back area of the wheel housing and insert one J-Clip (C) in each hole 1 & 2. 5 **Shows Orientation of J-Clips Facing Cab J-Clips Installed** J-Clip

Rugged Liner • 200 Universal Dr. • Owosso, MI 48867 • 800-433-3604 • ruggedliner.com © Rugged Liner, 2022

Part# INSTLIK81 REV:5.16.2022

INSTALLATION SHEET

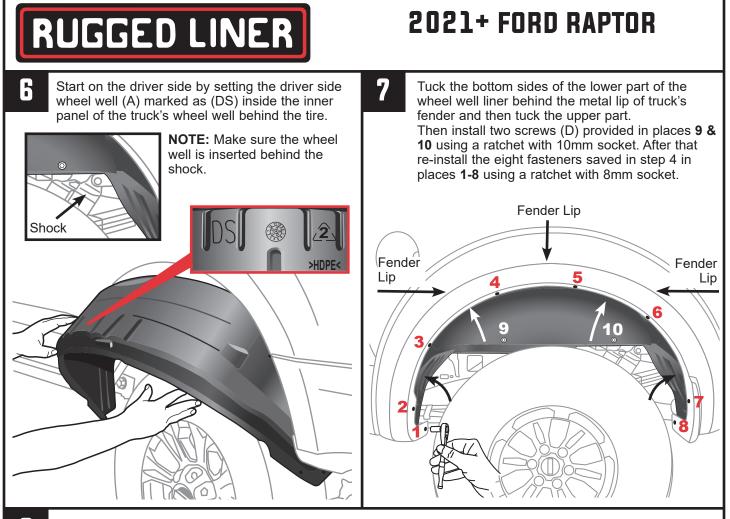

R

Repeat steps 3-7 on the passenger side when installing the passenger side wheel well (B).