

E-Lock Wiring

INSTALLATION SHEET

Any damaged or missing parts?

Parts will be shipped to you directly. Call 866-658-8376, Mon - Fri, 8:00 a.m. - 4:00 p.m. EST

OPTIONAL E-LOCK WIRING INSTALL - KEYLESS ENTRY


FORD SUPER DUTY – MODEL YEAR 2017-2019

LOCKING WIRE: Connect the **Green** wire from the A.R.E. Disconnect Harness to the 10AWG Gray-Brown wire.

UNLOCKING WIRE: Connect the **Brown** wire from the A.R.E Disconnect Harness to the 10AWG Brown-Green wire.

Cap Connector C

Cover Connector

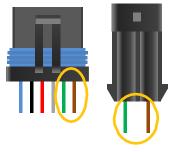

FUNCTION	A.R.E. HARNESS COLOR		PIN	CIRCUIT	PRIMARY COLOR	STRIPE COLOR	GAUGE
Lock	Green	→	35	CPL11	Gray	Brown	10
Unlock	Brown	→	32	CPL13	Brown	Green	10

A.R.E HARNESS CONNECTOR

LOCATION: Located behind the passenger side of the instrument panel outboard of the glove compartment. The large black connector with a white lever.

