

## Silver Bullet

Throttle Body Spacer

PN 46-34001

## Important!

This kit includes the parts for several different installations; please verify the parts list and read all instruction steps before you begin installation.

Make: General Motors Trucks and SUV

Model	Year	Engine	Model	Year	Engine
Escalade/ESV/EXT	99-06	5.3/6.0L	Denali	05-08	V8-5.7L
Avalanche	02-06	5.3/6.0L	Sierra "Classic"	99-07	4.8/5.3/6.0L
Silverado "Classic"	99-07	4.8/5.3/6.0L	Yukon	99-06	4.8/5.3/6.0L
SSR	03-04	5.3L	Yukon Denali	03-06	6.0L
Suburban	99-06	5.3/6.0L	Yukon XL	02-06	5.3/6.0L
Tahoe	99-06	4.8/5.3L	H2/HUT	03-07	6.0L


Note: On truck with 6.0L engine, this throttle body spacer will NOT fit when used with the Magnum Force Stage 2 intake (P/N 51/54-10092) and Momentum Intake (P/N 51/54-74101).

- 1. Loosen and remove the engine sight cover if equipped. Unbolt throttle cable bracket from intake manifold if equipped. Loosen and remove the air inlet tube from the throttle body.
- 2. Loosen the three nuts securing the throttle body to intake manifold. Using a 4mm 6-pt socket, remove the throttle body studs from intake manifold.
- 3. Install the aFe Silver Bullet throttle body spacer (AIR IN engraving side faces the throttle body), and another gasket and throttle body onto intake manifold. Using the provided washers and 50mm long screws secure the throttle body to intake manifold. Tighten the bolts to 10Nm (89 lb/in).
- 4. If equipped with throttle cables, attach the extender brackets to the intake manifold using the provided 6mm countersink screws. Now attach the throttle cable bracket to the new extender using the factory screw.
- 5. Reinstall the air inlet tube onto the throttle body. Reinstall engine sight cover if equipped.







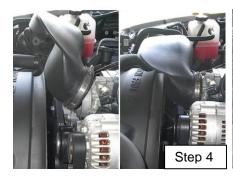



## **Parts List**

- 1 aFe Silver Bullet Spacer
- 1 Gasket
- 3 6mm x 50mm bolts
- 3 6mm flat washers
- 2 6mm countersink screws
- 1 extender bracket

## advanced FLOW engineering

252 Granite Street, Corona, CA 92879 Support: 951-493-7185 www.aFePower.com