

advanced FLOW engineering

Instruction Manual P/N: 54-73004-S

Make: **Ford** Model: **Super Duty F-250/F-350** Year: **2008-2010** Engine: **V8-6.4L (td) Power Stroke**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-73004B3

Installation will require the following tools:
13mm socket, socket wrench.

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

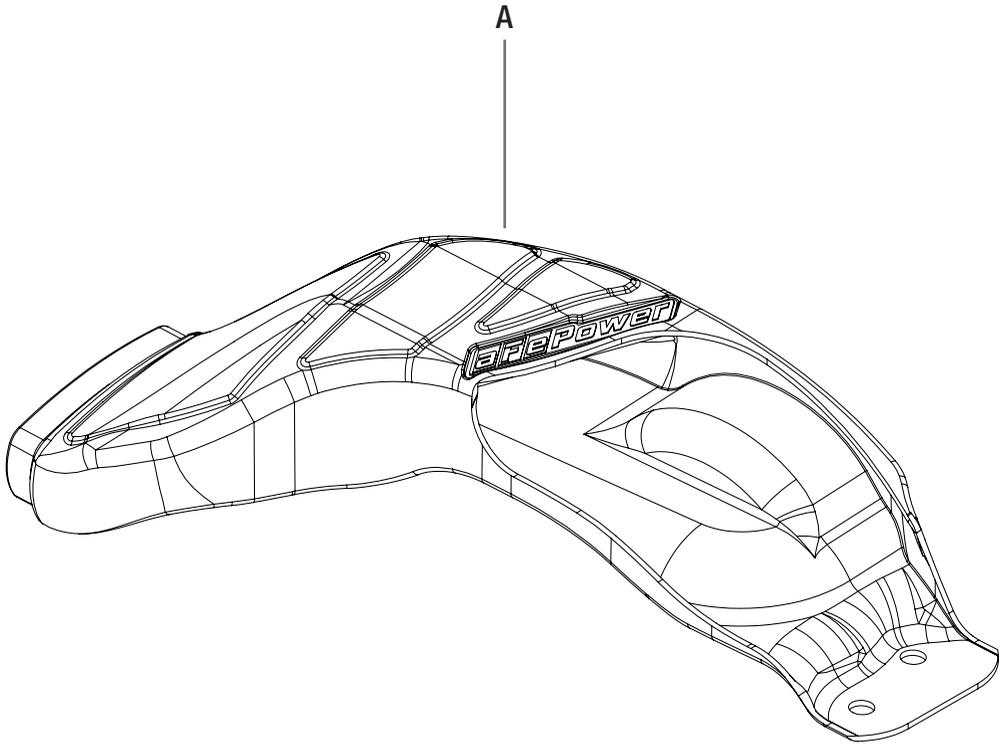




Figure A

Refer to Figure A for Step 1

Step 1: Remove the two OE bolts (1) .



Figure B

Refer to Figure B for Steps 2-3

Step 2: While holding the scoop snug against the aFe housing, align the two holes on the scoop with the two OE holes on the truck's crossmember.

Step 3: Secure the scoop with the two bolts removed in Step 1. ②

Your installation is now complete. Thank you for choosing aFe Power!



advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
TEL: 951.493.7100