



**DOWNLOAD THE LATEST
INSTALL MANUALS AT
www.bddiesel.com**







BD Hose & Clamp Kit **Dodge 2003-2007 5.9L Cummins**


P/N# 1045215

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION

KIT CONTENTS:

Please check to make sure that you have all the parts listed in this kit **before** you start the disassembly of your truck.

DODGE 2003-2007 HOSE & CLAMP KIT (P/N# 1045215)	
1405300	1405305
	
<i>2 3/4" Intercooler Boot</i>	<i>3" Intercooler Pipe Boot</i>
Qty: 1	Qty: 3
1405211	1405209
	
<i>HD Spring Loaded Clamp (3.00–3.38")</i>	<i>HD Spring Loaded Clamp (2.75-3.00")</i>
Qty: 6	Qty: 2

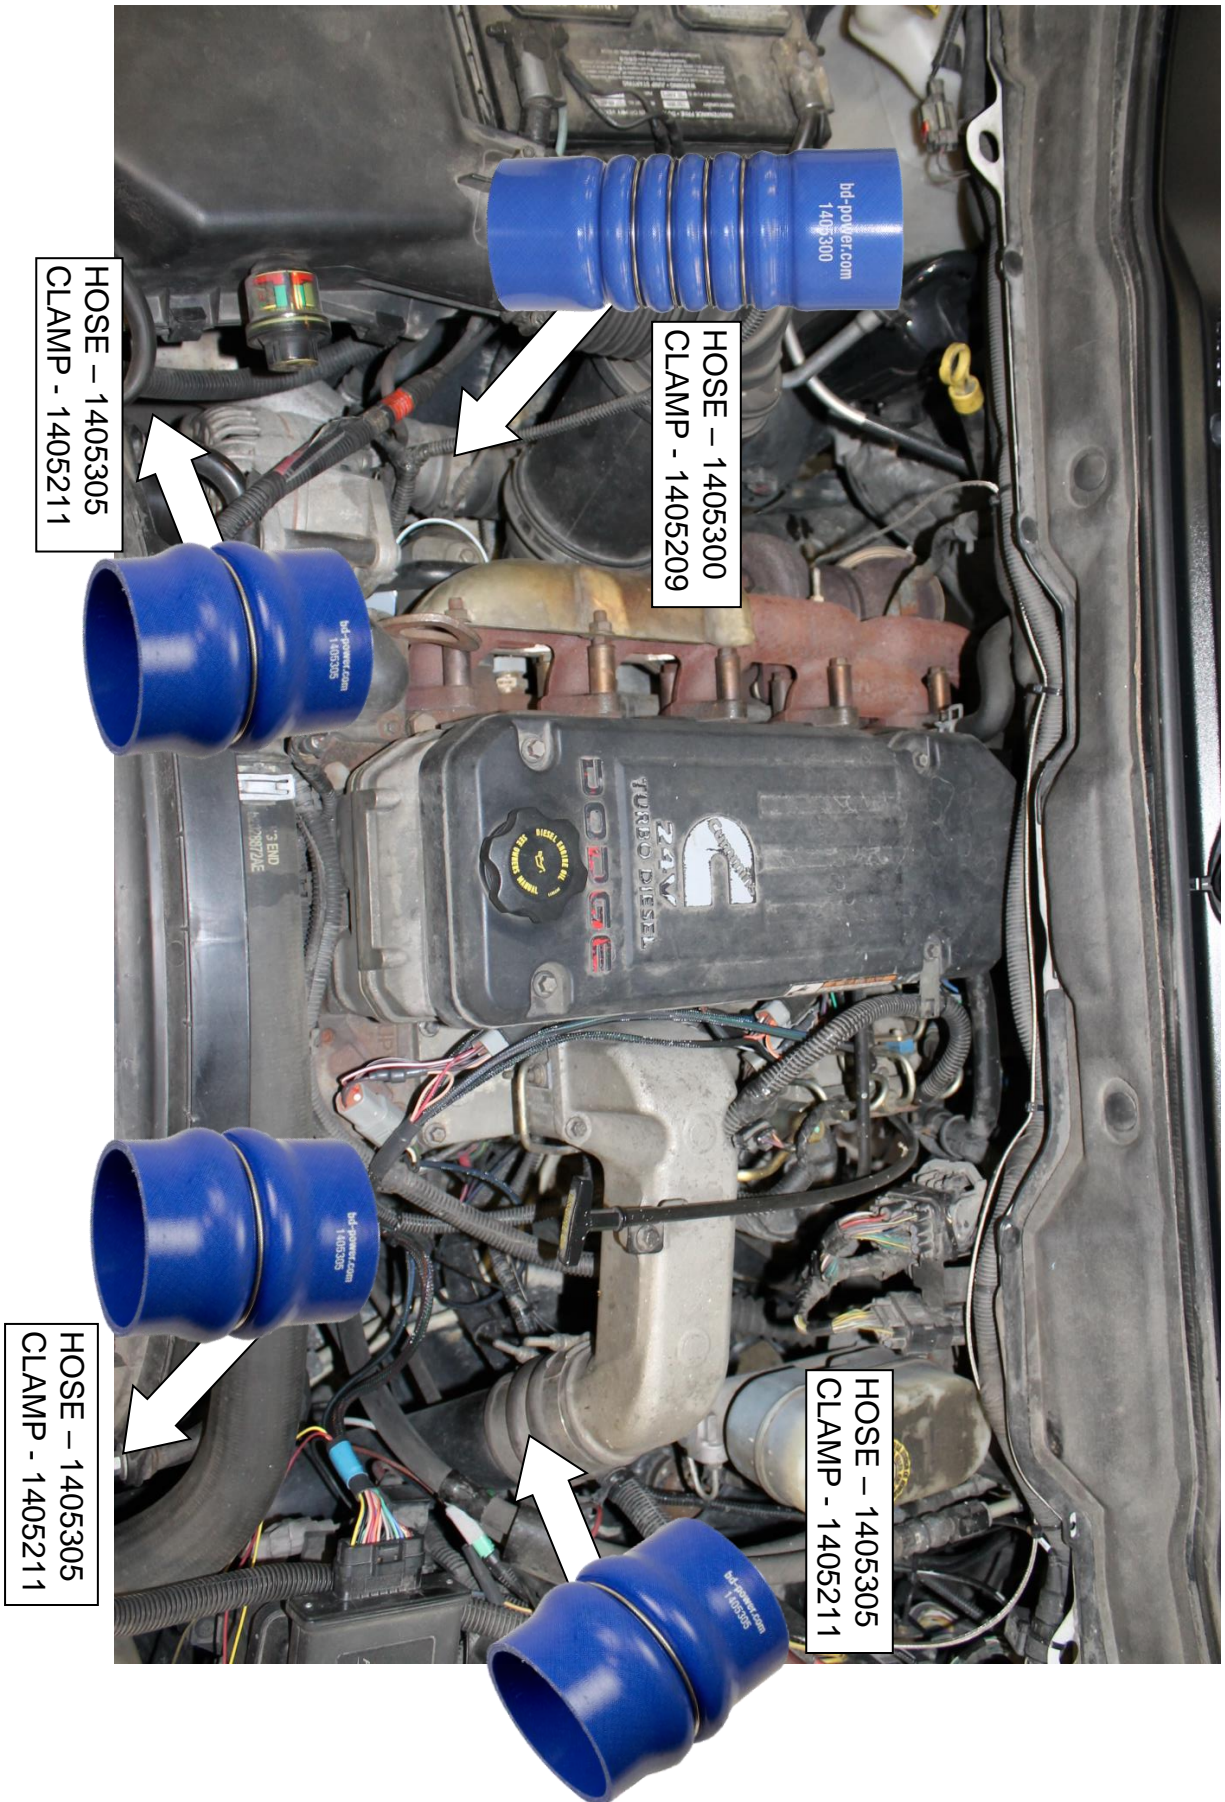

If you have any technical difficulties, concerns, comments, or complaints, please phone our Technical Support hotline at (800) 887-5030 between 8:30am-5:00pm PST (Pacific Standard Time) Monday to Friday.