


# Guardian Comfort Bed Mat

## GUARDIAN COMFORT BED MAT FOR DROP-IN LINER INSTALLATION INSTRUCTIONS WARNING: IMPROPER INSTALLATION WILL RESULT IN MAT FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!

APPROXIMATE INITIAL INSTALLATION TIME LESS THAN 30 MINUTES

1. (15) tree fasteners are included with the Mat. A hammer, awl, punch, drill, drill stop and a 1/4" drill bit are required for installation. Use a sharp utility knife for cutting material if needed.
2. Mats are designed to fit most major brands of drop-in liners. Perforations are provided in strategic areas on some models for assistance in trimming for better fit. See illustration. NOTE: IF YOU HAVE PURCHASED A UNIVERSAL MAT, THE MAT CAN BE CUT TO FIT ANY DROP-IN LINER APPLICATION.
3. Locate the Husky Bed Mat in the bed of the truck to determine the exact location and fit.
4. a. Locate and punch holes in the Mat with an awl for fasteners. Start at the front center and work outboard and toward the rear. Be sure to locate fastener points on the top of a rib or high spot of the drop in liner to provide clearance for the tree fasteners. See illustration.  
b. Center punch the fastener locations in the drop in liner using the Mat as a template.  
c. Drill a 1/4" hole in the drop in liner then firmly press tree fastener into position.

**NOTE: BE SURE TO USE A DRILL STOP TO PREVENT DAMAGE TO THE TRUCK BED! DO NOT ATTEMPT TO DRILL THROUGH THE MAT MATERIAL!**

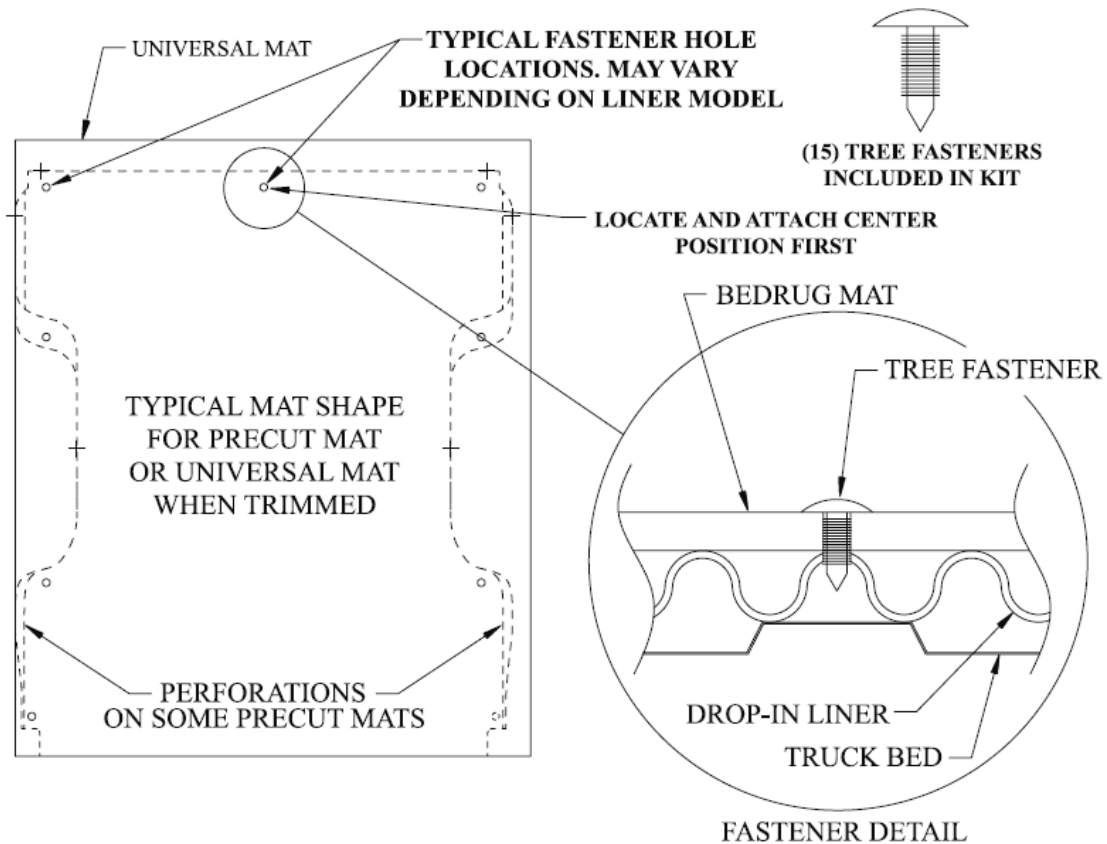

## Guardian Comfort Bed Mat

### CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

#### Cleaning your Bed Mat is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

## Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

[www.huskyliners.com](http://www.huskyliners.com)

Phone: 800-344-8759

Email: [customerservice@huskyliners.com](mailto:customerservice@huskyliners.com)



**GUARANTEED...FOR LIFE.**