

Guardian Comfort Jeep Liner

Congratulations on choosing the finest interior flooring kit available for your Jeep. The Comfort material is mold and mildew resistant, easily cleaned with water & household cleaning chemicals and extremely resistant to most chemicals.

Kit Contents: Driver side wheel well, passenger side wheel well, rear cargo area floor, tailgate piece, hardware kit, and instruction sheet.

Tools needed: Utility knife, soap, water, and rubbing alcohol.



PREPARATION

1. Read all instructions before beginning installation.
2. Remove rear seat and old Jeep flooring material.
3. Wash and dry the floor pan and wheel well areas thoroughly.
4. Cut the hook with tape backing, provided in the hardware kit, to the lengths indicated on drawing (page 6). Place the loop onto each location. Do not remove the tape backing at this time.
(Note: Cut the longest pieces first.)

IMPORTANT: Jeep floor should be at least 68°F (20°C) for maximum adhesion. Clean all areas with rubbing alcohol before applying tape. When removing backing, do not touch adhesive. If both front and rear kits were purchased be sure to install rear cargo area first. The BedRug product is designed to work with most factory tub layouts. If the Jeep has any aftermarket accessories or custom parts such as seats brackets or roll bars you may need to trim our product to fit.



Guardian Comfort Jeep Liner

INSTALLING THE WHEEL WELLS

5. Fit driver side wheel well piece into place, markings on back of part indicate where to make cuts for roll bar, and rear seat bracket (if equipped). Be sure to cut only markings necessary for your Jeep. (See drawing on page 6).



6. Start at the rear of vehicle, making sure to line up bottom edge to the floor and back edge tight to the rear flange. Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.

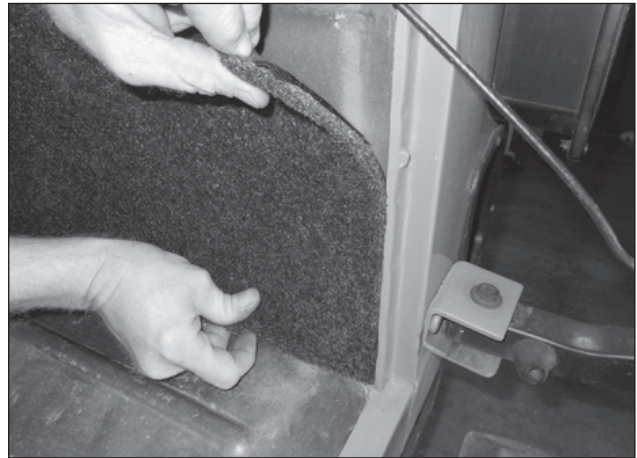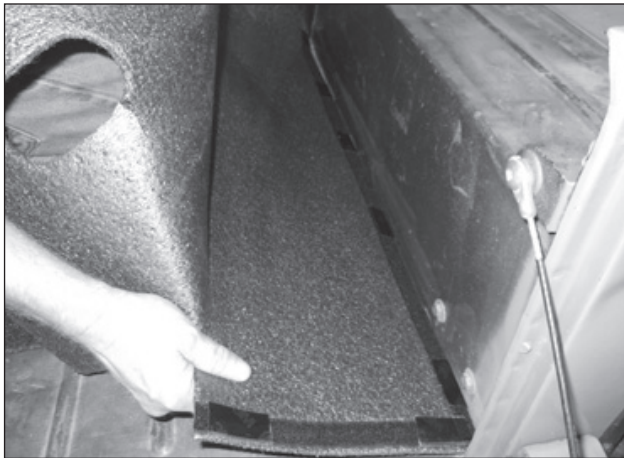


7. If your wheel well piece has fastener along the top edge, pull down the top of the wheel well piece to access the hook fastener. Clean the surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment.

Guardian Comfort Jeep Liner

8. Now pull back the front of the wheel well piece, clean surface with alcohol remove the tape backing and press firmly back into place. **Note:** Depending on your roll bar mounting location, use the indicator marks on the back of the wheel well piece as a guide to make cuts for the seat belt mounts as well as flange and roll bar cutouts.


9. Repeat steps 5 thru 8 for the passenger side wheel well.

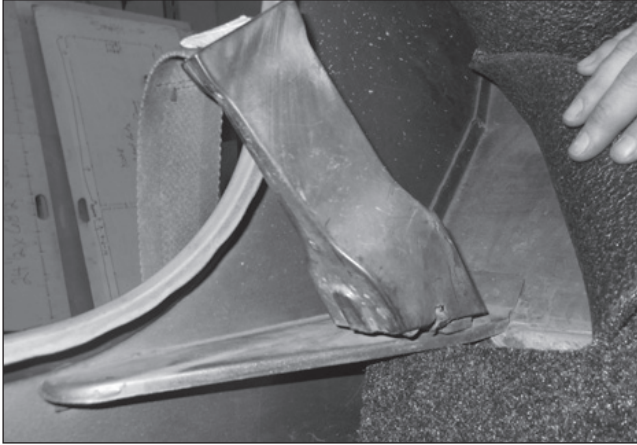

INSTALLING CARGO AREA FLOOR

NOTE: For jeeps with a rear seat, trimming will be necessary to fit around seat mount and seat belt attachment points. There are score lines on the back of the part to use as a guide.

10. With the rear seat removed, place the floor piece into position. Cut holes in floor piece if rear seat and seat belts are present, using marks on back of part as a guide. Lift the floor piece and pull the seat belts thru the holes.

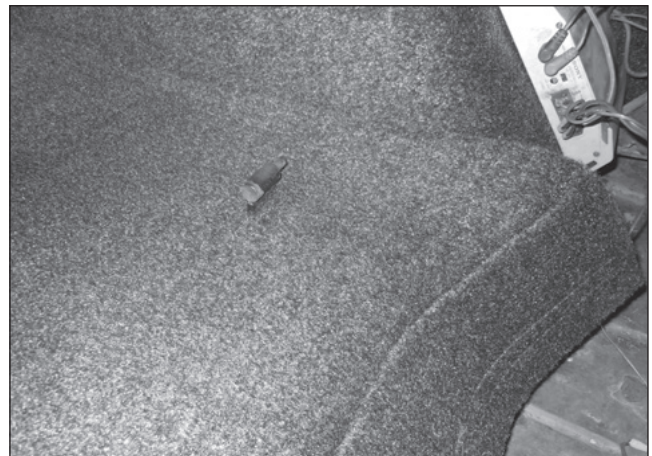


Guardian Comfort Jeep Liner

11. Now pull up floor piece at the front side to access the hook fastener. Clean surface with alcohol then remove the film backing from all of the locations behind the rear seat and roll the floor back into place. Firmly press the top surface to ensure adhesive attachment.





12. Now repeat the process for hook fastener at the sides by the wheel wells, and then at the rear by the door opening.
Note: Adjustments can be made after part is installed for proper fit. Simply remove the piece that needs adjusting, the hook fastener will stay in place on jeep, then reinstall as necessary.

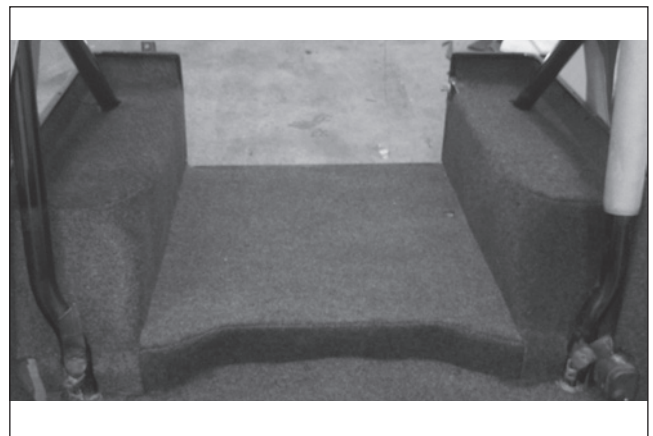

Guardian Comfort Jeep Liner

INSTALLING TAILGATE PIECE

13. Clean surface with alcohol then remove film backing from the tailgate piece and attach to the tailgate. Firmly rub entire surface to ensure good attachment.

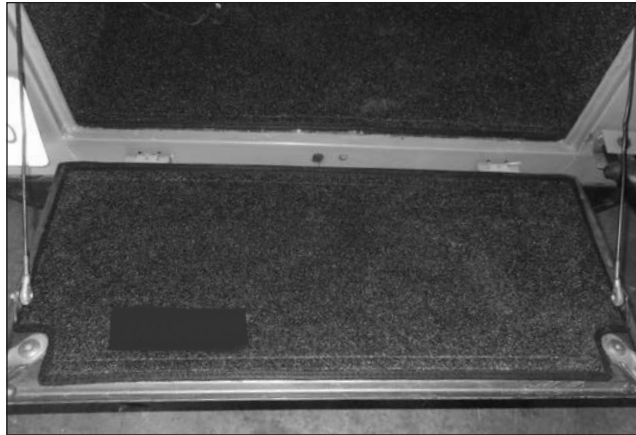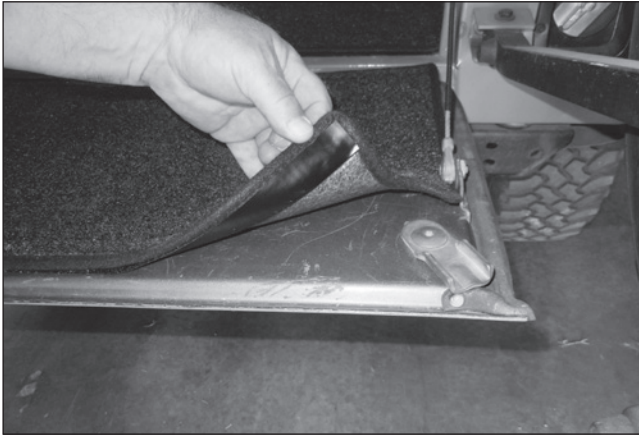


Guardian Comfort Jeep Liner

BRCJ76R / BRCJ81R / BRYJ87R HOOK INSTALLATION

BOTTOM VIEW (FOAM SIDE)

FOR THE FLOOR AND TAILGATE PIECES, CUT LOOP WITH TAPE BACKING TO THE LENGTH OF LOOP SEWN ON PART (EXCEPT WHERE NOTED.) USE PRECUT 1 X 2 HOOK ON THE SIDE PIECES SPACED AS SHOWN.

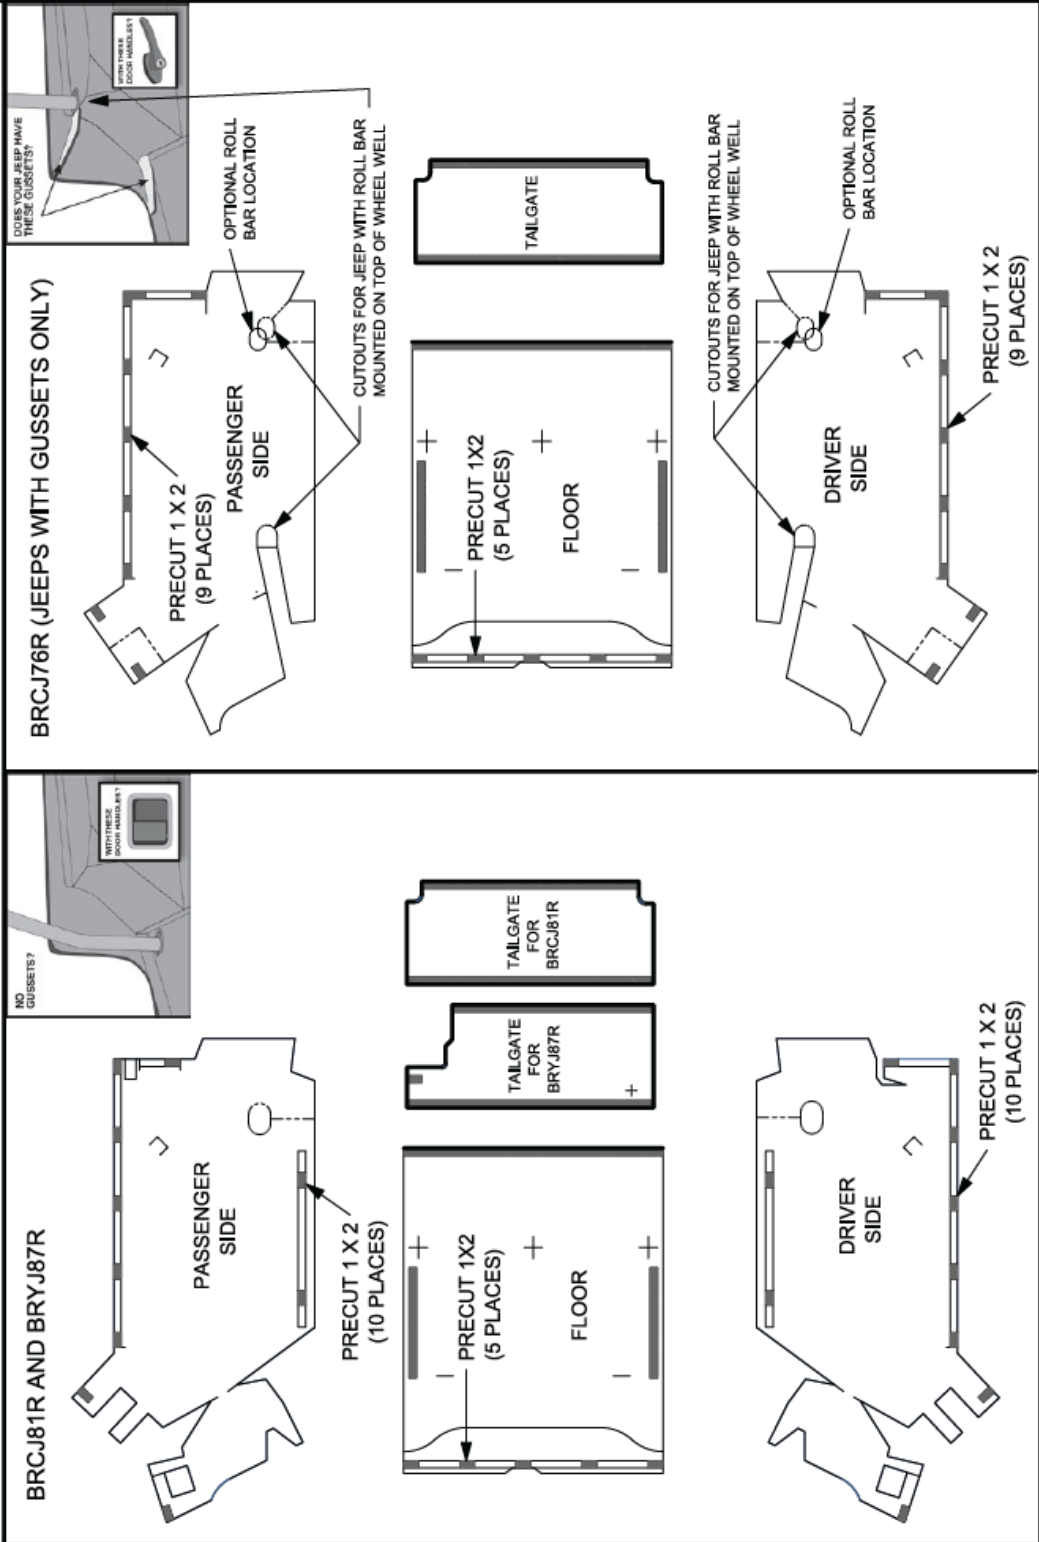

Guardian Comfort Jeep Liner

CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

Cleaning your Bed Mat is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com

Phone: 800-344-8759

Email: customerservice@huskyliners.com



GUARANTEED...FOR LIFE.