



## Ford Bronco Trail Armor® Fender Delete kit

### STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker®** only approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- E) Care & Cleaning:** Bushwacker fender flares are built to last; any detergent you use to wash your vehicle is sufficient to clean the flare. Do not use any harsh abrasive detergents.

Set Part #14127

BW14127 Rev-0 07-26-2021

For complete fitment info visit: [www.bushwacker.com](http://www.bushwacker.com)

### TOOLS FOR EASY INSTALLATION:

- Allen Wrench Set
- Socket Wrench Set
- Plastic Fastener Removal Tool

**PLEASE READ:** Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Lund International is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

### 3 YEAR LIMITED WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.




## Included in Hardware Kit:

- |   |   |   |   |
|---|---|---|---|
| 1.  | 2.  | 3.  | 4.  |
|  |  |  |  |
| 133606M<br>Short Allen Head<br>Bolt, 1/4-20x1                                       | NU1-0015<br>1/4-20 SS,<br>Nylock Nut,   | WA1-0029,<br>.320 x 700 x.03<br>Anodized Washer,                                    | R98001,<br>Alcohol Pads   |
| 20 pcs  | 20 pcs  | 40 pcs  | 2 pcs   |


# Component List:



## Front Flare Installation Procedures (Passenger's Side):

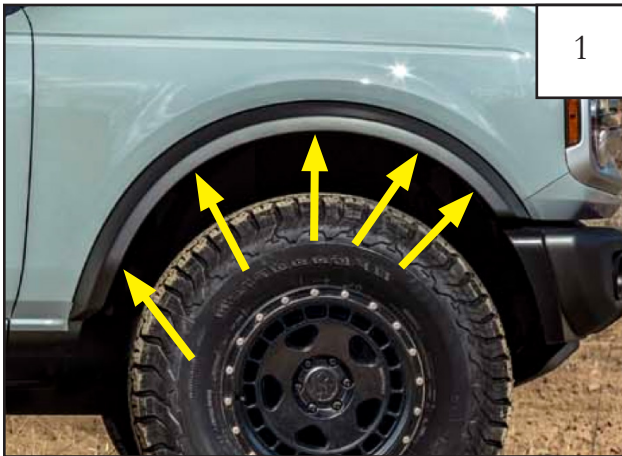


Twist (5) quarter turn fasteners. Firmly pull on flare to remove.

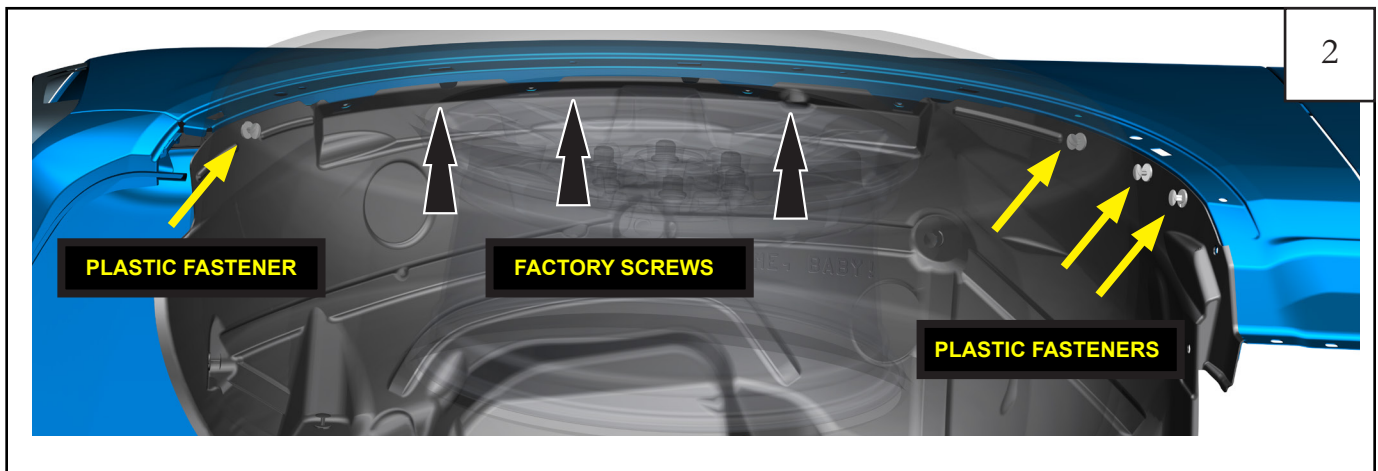


Remove and retain (4) factory plastic fasteners and (3) factory screws to access backside of fender.





Clean the area indicated with an alcohol pad.

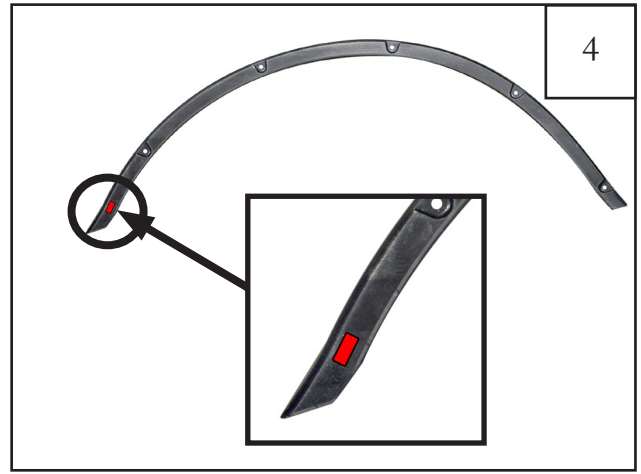

Remove tape liner from the front of the fender delete.

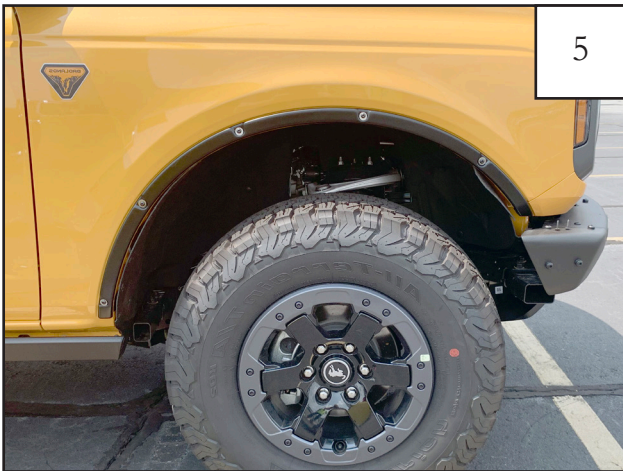


Install fender delete using (5) 133606M bolts, (10) WA1-0029 washers, and (5) NU1-0015 nuts. (See diagram Step 6)

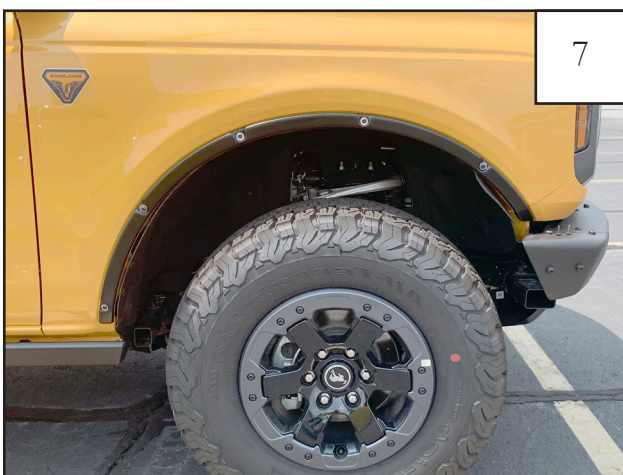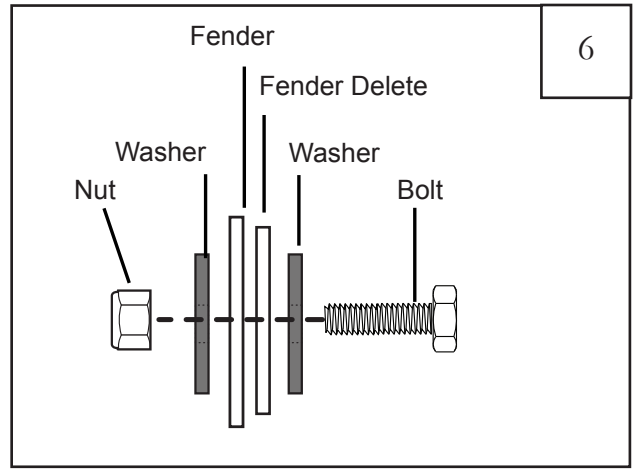

Replace fasteners and screws removed in **Step 2** to re-attach fender liner.  
Completed front fender delete installation.

# Rear Flare Installation Procedures (Passenger's Side):

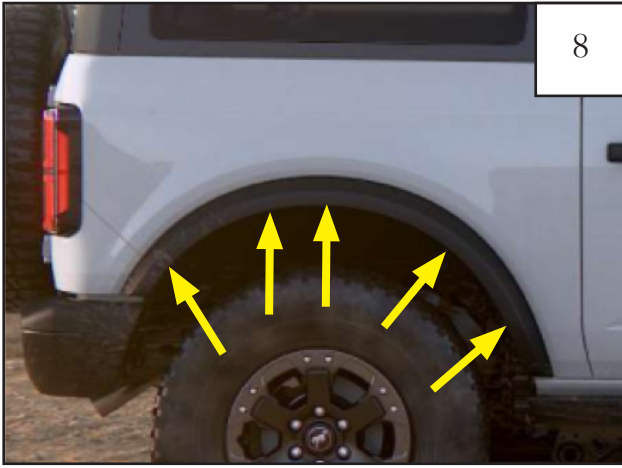


Twist (5) quarter turn fasteners. Firmly pull on flare to remove.



Remove (2) fender liner fasteners and retain.



Install fender delete using (5) 133606M bolts, (10) WA1-0029 washers, and (5) NU1-0015 nuts. (See diagram Step 11)

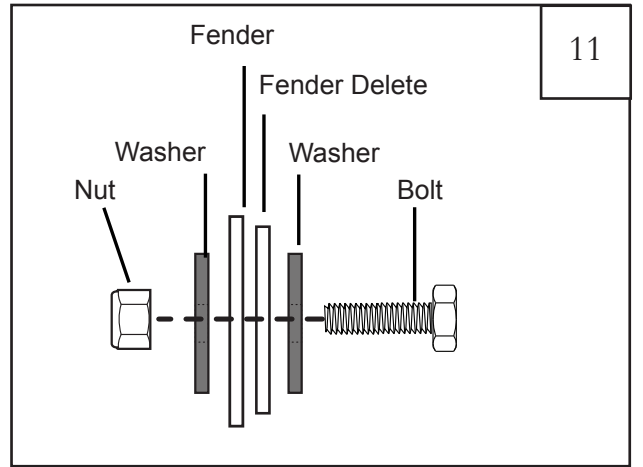

Replace fasteners removed in **Step 9** to re-attach fender liner. Completed rear fender delete installation.