



Trail Armor® Hood Armor

Set Part #14131

Set Part #14129

BW14131 Rev-0 10-06-2021

For complete fitment info visit: www.bushwacker.com

STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker®** only approves installing the trail armor according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the trail armor.
- B) Fit:** Verify the fit of the trail armor to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing trail armor on the vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for TPO plastic as per your paint system manufacturer's recommendations is required. Paint trail armor using a high quality enamel, or polyurethane automotive paint.
- D) Decals:** Trail Armor may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of trail armor.

TOOLS FOR EASY INSTALLATION:

- Cleaning Cloth
- Masking Tape




The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.




LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

INSTALLATION NOTES

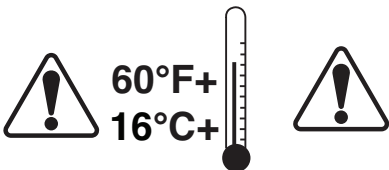

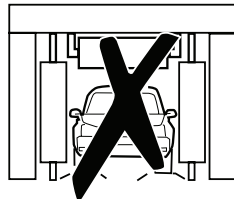

Ensure vehicle surface and parts are at or above 60°F / 16°C prior to installation. Hood must be clean and dry before installation.



Do not wash vehicle for 72 hours after installation.

Included in Hardware Kit:

- 
ALCOHOL PREP
6 pcs.
- 
SURFACE PREP
3 pcs.

Side Panel Installation Procedure (Driver's Side)



Clean all dirt and debris from entire vehicle hood area.




Lay Trail Armor in place on vehicle and mask off the surrounding areas with tape. Remove Trail Armor and set aside.



(1) Use alcohol pads to clean areas where the tape on the back of the Trail Armor will contact surface. Let dry.

(2) Apply surface prep to the same area where the tape on the back of the Trail Armor will contact surface. Let dry.

(3) Remove and discard masking tape.

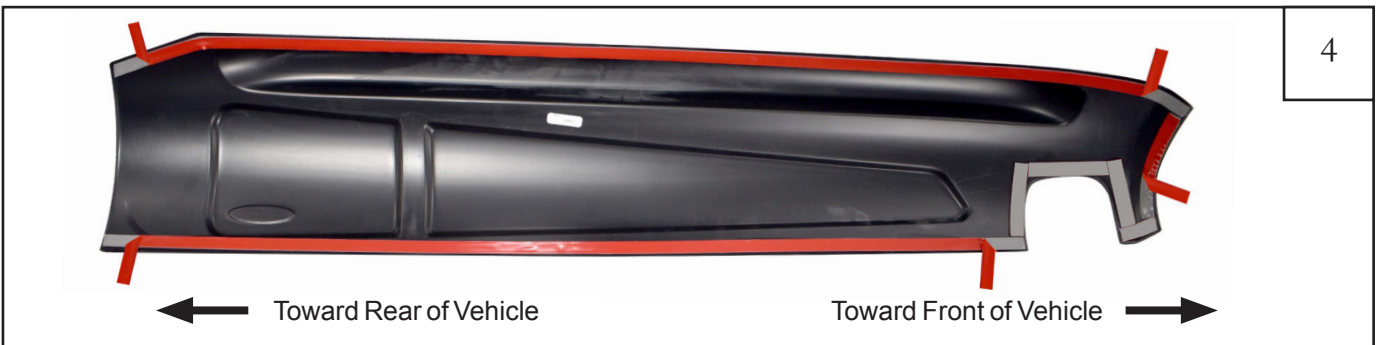


Peel back roughly 3" of red tape liner from the pieces of tape on the backside of Trail Armor to create a pull tab. (For short pieces completely remove tape liner.) Make sure red tape liner tabs will be accessible when Trail Armor is attached to vehicle.


Side Panel Installation Procedure (Driver's Side)



Set Trail Armor in place on vehicle.

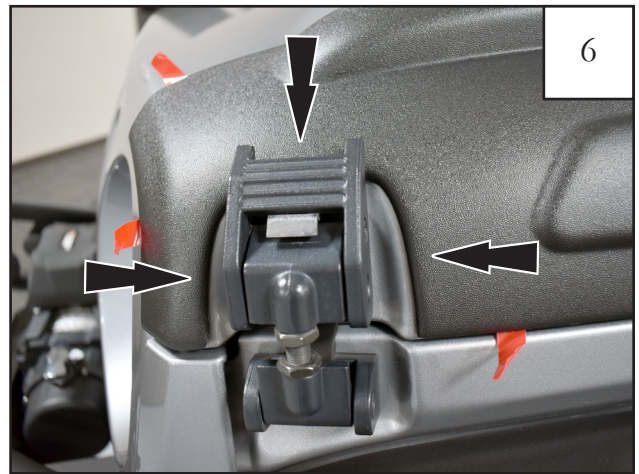


Check alignment at front near hood latch.

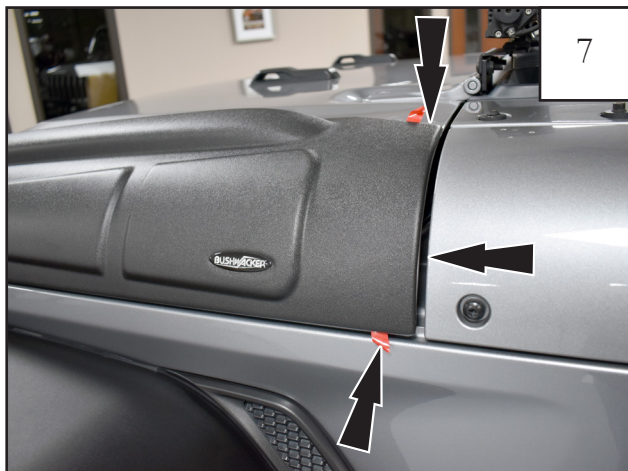

Check alignment at rear hood edge.



With the Trail Armor in its final position, tack Trail Armor in place by pressing on areas of exposed tape.

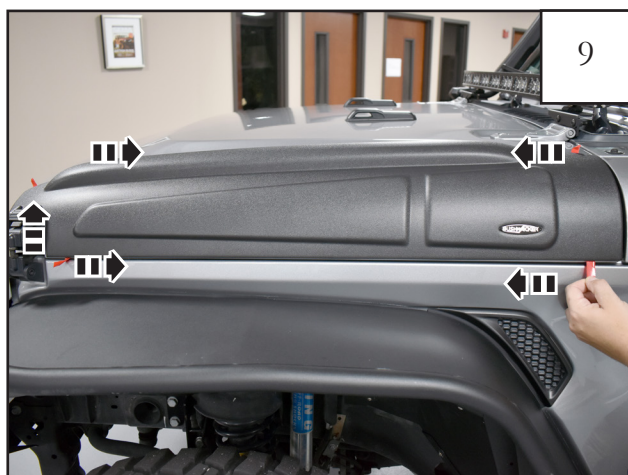

Remove remaining tape liner by pulling on free ends.



Apply **FIRM** pressure to all mounting locations to affix Trail Armor to vehicle.

Side Panel Installation Procedure (Driver's Side)




Completed driver's side installation.



Repeat **Steps 1-11** for passenger's side installation.

Hood Edge Installation Procedure

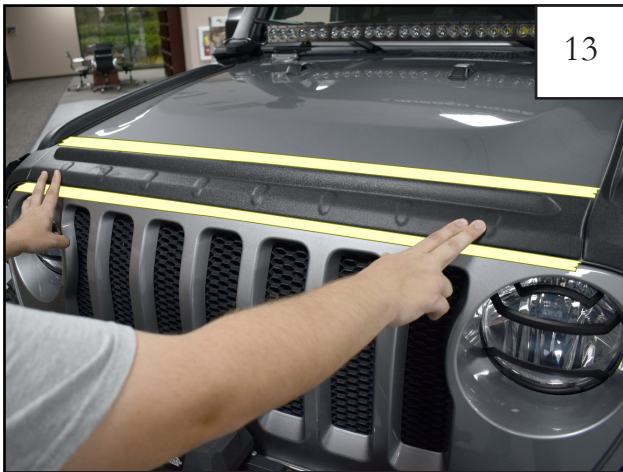

Lay Trail Armor in place on vehicle and mask off the surrounding areas with tape. Remove Trail Armor and set aside.

14
<p>(1) Use alcohol pads to clean areas where the tape on the back of the Trail Armor will contact surface. Let dry.</p> <p>(2) Apply surface prep to the same area where the tape on the back of the Trail Armor will contact surface. Let dry.</p> <p>(3) Remove and discard masking tape.</p>



Peel back roughly 3" of red tape liner from the pieces of tape on the backside of Trail Armor to create a pull tab. Make sure red tape liner tabs will be accessible when Trail Armor is attached to vehicle.



Set Trail Armor in place on vehicle. Check alignment along all edges. With the Trail Armor in its final position, tack Trail Armor in place by pressing on areas of exposed tape.



Remove remaining tape liner by pulling on free ends.



Apply **FIRM** pressure to all mounting locations to affix Trail Armor to vehicle.



Completed installation.