



B & V PRODUCTS 2015-2020 Cadillac Escalade Console Safe

Full locking Section

\*will not fit Platinum models or center console cooler

PART NUMBER: 7009-1000-15

MADE IN USA

[www.bvnproducts.com](http://www.bvnproducts.com)



### Notes to the Technician/Installer:


Do not attempt the installation of any B&V product without first reading the detailed instructions. B&V will not warrant damaged parts or the vehicle due to altered installation procedures.




1. Cover the seats with a protective cover prior to beginning the console vault installation. Move the front seats to the forward most position. Open the center console lid and empty the console. Lift up and back to unclip the rear panel from the console.




2. Pull the rear panel back out of the way (disconnection of one of the electrical connectors will be necessary, see arrow) for the following retaining bracket installation.

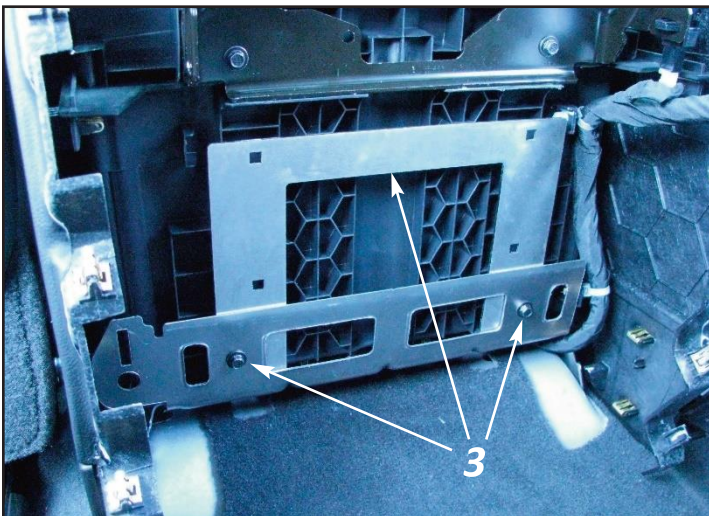

3. Remove the two factory 7mm hex screws from the lower bracket, pull the bracket out and insert the supplied retaining bracket between the factory bracket and the back of the console, then re-install the factory 7mm hex screws.

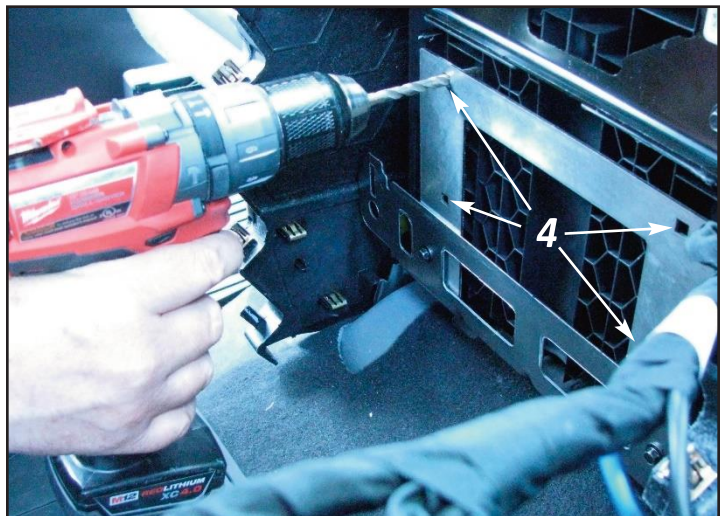


4. Using a 1/4" drill bit, drill through the existing square holes in the retaining bracket and through the back of the factory console. Continue drilling until the drill bit drills through the factory console liner. IMPORTANT: The drill must be held level while drilling.

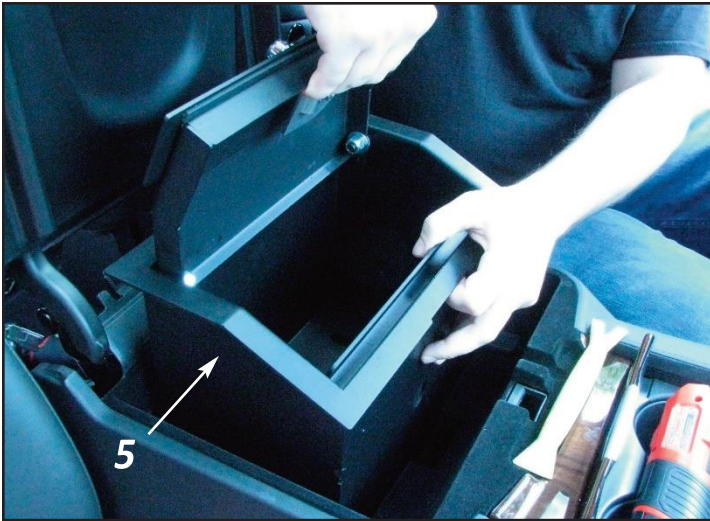


5. Align the console vault into the factory console, making sure you do not scrape the inside of the factory console liner. Make sure the console vault is seated in the console well with the sides flush and square in the rear corners.




6. The console vault should now be sitting flat against the bottom of the console liner.

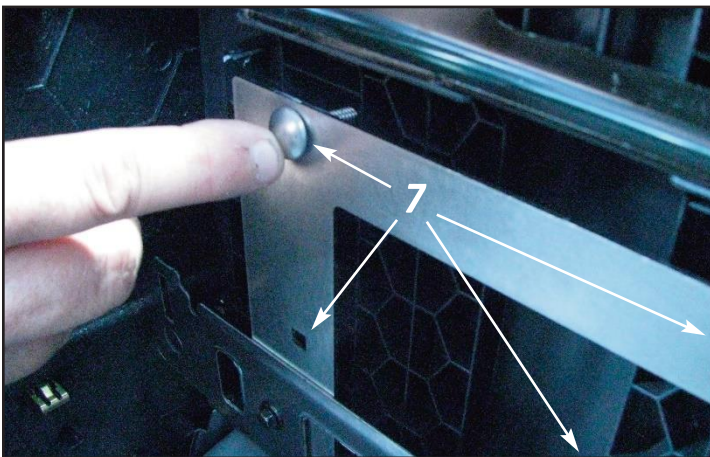

7. Install the supplied 1/4-20 x 2" carriage bolts, passing them through the square holes in the preinstalled mounting bracket and through the holes drilled in the console in **Step 4**. Make sure the bolts protrude through the mounting holes in the console vault.

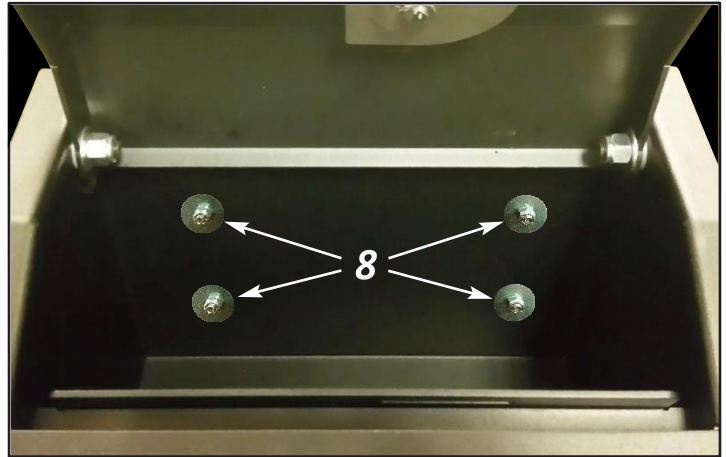

8. Install the supplied flat washers and 1/4-20 ESNA nuts onto the bolts protruding through the console vault. Press down on the console vault while tightening. **Tighten bottom ESNA nuts first, then tighten the top ones.**

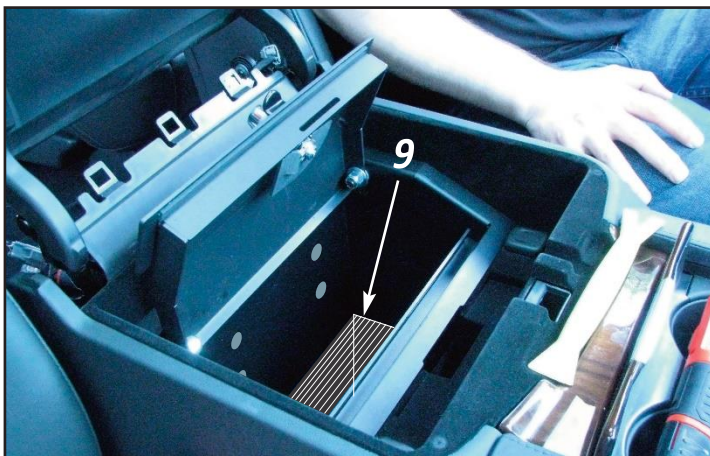

9. Align the supplied console vault liner into the bottom of the console vault.



10. Reinstall the rear console panel removed in **Step 1** to finish the installation (not shown). **For the vehicle owner:** Follow the supplied detailed instructions (inside the small plastic bag with the key) and choose your lock combination. There is a spare copy of the lock combination instructions on the last page of this manual.

## Part #7009-100C -15

Quantity:	Description:	Part Number:
1	Console Vault Complete	7009-1100-15
1	Installation Hardware Kit	7009-1902-15
4	1/4-20 x 2" Carriage Bolts	1999-0051-00
4	1-1/4" x 1/4" Flat Washers	1999-9554-00
4	1/4-20 ESNA Lock Nuts	1999-0240-00
1	Console Vault Liner	7009-0121-15
1	Mounting Bracket	7009-1050-15




**Warranty.** B & V products (Manufactured by Fralo Industries) are warranted against defects in workmanship for a period of one (1) year from the date of purchase. Fralo's liability under this warranty is limited to the repair or replacement, at the option of Fralo, of the products or parts thereof covered by this Warranty, provided that Buyer provides all necessary materials. Fralo's obligation under this warranty shall not arise unless written notice of a warranty claim is made to Fralo. Fralo may require that the product in question be delivered for inspection, freight prepaid, at Fralo's office in Erie, Pennsylvania, or some other location designated by Fralo. THE REPAIR OR REPLACEMENT WARRANTY HEREIN SET FORTH IS THE EXCLUSIVE WARRANTY GIVEN BY FRALO FOR ITS GOODS. THIS WARRANTY IS GIVEN IN LIEU OF ANY OTHER WARRANTIES, WHETHER WRITTEN OR ORAL, EXPRESS OR IMPLIED. ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE HEREBY EXPRESSLY EXCLUDED BY FRALO. FRALO NEITHER ASSUMES, NOR DOES IT AUTHORIZE ANY OTHER PERSON TO ASSUME ON ITS BEHALF, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF ITS GOODS

### Setting your own combination:

**NOTE: The opening combination code is preset to 0-0-0**

1. Combination must be set to the current opening combination code prior to resetting.
2. Set knob to the locked position.
3. The code reset button is located on the side of the lock. Press and hold the reset button.
4. Set your personal combination by turning the number dials to the desired combination.
5. Release the reset button and the new opening combination code is set.
6. To lock, rotate one or more number dials after the locking knob is turned to the locked position.
7. To open the lock, turn the number dials to your personal combination.

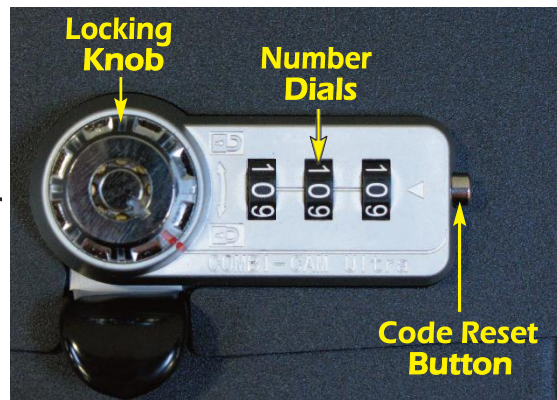

### Discovering an unknown combination using the key:

1. Insert the key and turn it counter clockwise to unlock the safe.  
**IMPORTANT:** The knob will remain in the locked position.
2. With the key in the unlocked position, turn each number dial until they stop.
3. Once all the number dials have stopped, the current opening combination code has been discovered and can now be reset.