


CGS Installation Instructions

Please direct all installation questions to CGS Motorsports at (909) 444-5536. DO NOT call the retailer in which you purchased your CGS System.

Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

Kit includes:

- Qty. Description Part#
- 1 Headpipe 300-1036
- 1 CGS Muffler 83001
- 2 3" Clamps
- 1 2 1/2" Clamp
- 1 3 1/2" Stainless Steel Tip 93530
- 1 Tailpipe 300-1037

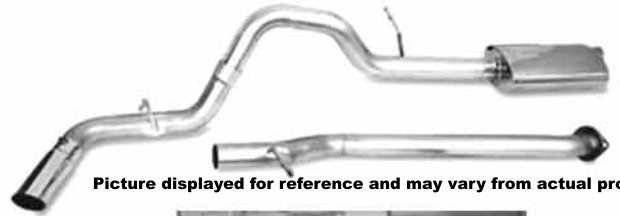

Picture displayed for reference and may vary from actual product

1) Remove stock exhaust system

First start by reading all the instructions completely before beginning installation. Remove the stock exhaust system by measuring back 4" from the front bracket, mark it and cut it. Then slide the complete system carefully towards the rear off of the rubber hangers. Remove the system from under the truck. Cutting may be required for removal for certain models.

2) Installing your catback exhaust system

Make sure the stock exhaust system has been removed and all existing rubber hangers are still in place. Install the Headpipe onto the stock pipe where you just cut it. Proceed to install muffler onto headpipe with the offset in the inlet and closest to the frame. The center in the outlet. Install the Tailpipe onto the muffler and insert the welded hanger into the rubber grommets. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten bolts.

3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System™.

Ask your CGS Dealer about our Air Intake System for your truck.

Thank you again and enjoy your new CGS Catback Exhaust System™.

