


CGS Installation Instructions

Please direct all installation questions to CGS Motorsports at (909) 444-5536. DO NOT call the retailer in which you purchased your CGS System.

Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

Kit includes:

- Qty. Description Part#
 1 Headpipe 300-1040
 1 CGS Muffler 83001
 3 3" Clamps
 1 tail pipe 300-1039
 1 3 1/2" Stainless Steel Tip 93530

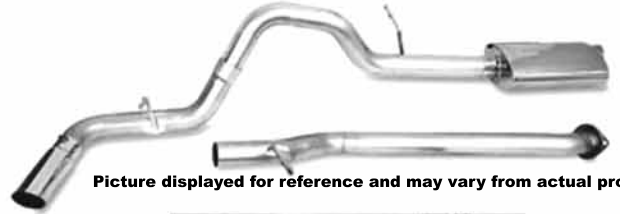

Picture displayed for reference and may vary from actual product

1) Remove stock exhaust system

First start by removing the stock Exhaust system by unbolting the clamp at the front of the muffler as shown in the first picture. Then slide the complete system carefully towards the rear off of the rubber hangers. Remove the system from under the truck. Cutting may be required for removal on certain models.

2) Installing your catback exhaust system

Make sure that all existing rubber Hangers are still in place. Install the headpipe by sliding it over the stock pipe. Proceed to install muffler onto headpipe with the center in the inlet and offset at the outlet and closest to the Frame of the truck outlet. Install the overaxle pipe onto the muffler and insert the bracket into the rubber hanger. Next the exit pipe will install and insert the bracket into the rubber hanger. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten bolts.

3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System™.

Ask your CGS Dealer about our Air Intake System for your truck.

Thank you again and enjoy your new CGS Catback Exhaust System™.

