

CGS Installation Instructions

Please direct all installation questions to CGS Motorsports at (800) 444-5536. DO NOT call the retailer in which you purchased your CGS System.


Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

Kit includes:

Qty.	Description	Part#
1	Headpipe-01	300-1062
1	Headpipe-02	300-1063
1	CGS Muffler	83025
1	Tailpipe	300-1037
2	2 1/4" Clamps	
2	2 1/2" Clamps	
1	3" Clamp	
1	3 1/2" Stainless Steel Tip	93530



Picture displayed for reference and may vary from actual product

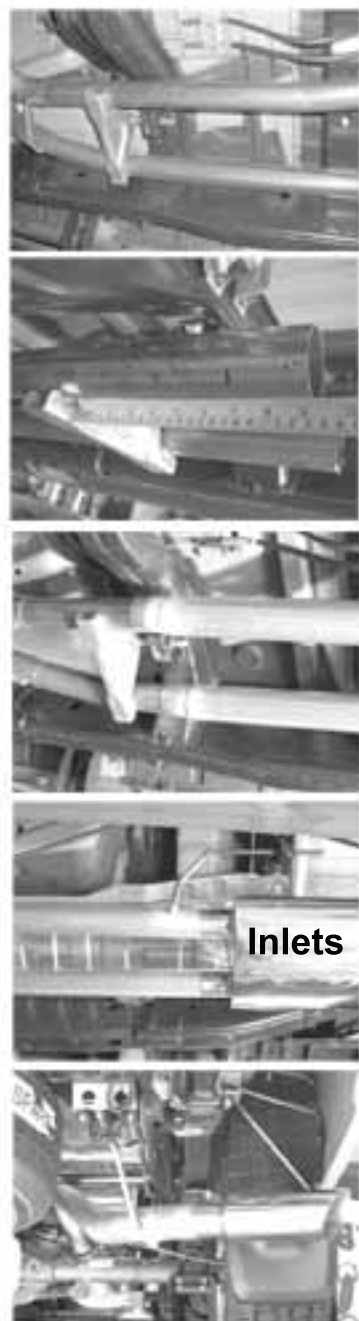

1) Remove stock exhaust system

First start by reading all the instructions completely before beginning installation. Remove the stock exhaust system by measuring back 9" from the front bracket (as seen in photo), mark both pipes and cut them. Then Remove the system from under the truck. Cutting may be required for removal for certain models.

2) Installing your catback exhaust system

Install Headpipe-01 onto the stock headpipe on the driver side where you just cut it and slide bracket into stock rubber hanger. Next install Headpipe-02 onto the stock headpipe on the passenger side. This headpipe may need to be rotated to line up with the muffler. Proceed to install muffler onto headpipes. Install the Tailpipe onto the muffler and insert the welded hanger into the rubber grommets. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten all bolts.

3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System™.

Ask your CGS Dealer about our Air Intake System for your truck.

Thank you again and enjoy your new CGS Catback Exhaust System™.



Inlets